



EPSILON E125LP TOOL CHANGE SYSTEM

95624, Rev 01

July 16, 2020

648 Saratoga Road
Glenville, NY 12302 USA
Phone: +1 518 384 1000
Fax: +1 518 384 1200
www.appliedrobotics.com

REVISION

Revision	Date	Author	Description
00	03/31/2016	SC	Initial Release
01	07/16/2020	DS	- Description changes - Removed Lubrication on Robot Side

All rights reserved. Copyright © 1986—2020 Applied Robotics Inc.

The use of this document is reserved exclusively for the use of Applied Robotics Incorporated customers and personnel. The information and drawings contained herein are the sole property of Applied Robotics Incorporated and shall not be divulged to any third party without the prior written consent of Applied Robotics Inc. The information in this document is subject to change without notice. Applied Robotics makes no warranty of any kind with regard to this user's guide, including but not limited to, implied warranties or fitness for a particular purpose. Applied Robotics Inc. shall not be liable for any errors contained herein or for incidental or consequential damages in connection with the performance or use of this material.

CONTENTS

1	LIFETIME GUARANTEE	5
2	PRECAUTIONS	6
3	SYSTEM DESCRIPTION	7
3.1	ROBOT SIDE	8
3.2	TOOL SIDE.....	9
4	TECHNICAL SPECIFICATIONS	10
5	INSTALLATION	11
5.1	ROBOT SIDE INSTALLATION	11
5.1.1	M10 Hardware.....	12
5.2	TOOL SIDE INSTALLATION	13
5.3	CONNECTING THE AIR SUPPLY	15
5.4	COUPLE AND UNCOUPLE SIGNALS	16
5.5	TOOL PRESENT SIGNAL (OPTIONAL)	18
5.6	CONNECTING USER PNEUMATIC PORTS.....	19
5.7	GROUNDING CONNECTION.....	20
6	GUIDE TO OPERATIONS.....	21
6.1	INITIAL TEST	21
6.2	PROGRAMMING THE COUPLE AND UNCOUPLE POINTS	22
6.3	TOOL DROP PREVENTION	23
6.3.1	Mechanical Lock Design Feature	24
6.4	RECOMMENDED SEQUENCE OF OPERATION	25
7	TROUBLESHOOTING	28
7.1	TROUBLESHOOTING GUIDE	28
7.2	TECHNICAL SUPPORT	28
7.3	TROUBLESHOOTING FAULT TREE.....	29
7.4	MANUAL UNCOUPLE	30
8	MAINTENANCE	31
8.1	PREVENTIVE MAINTENANCE	33
8.1.1	Lubrication	33
8.1.1.1	Tool Adapter	33
8.1.2	Visual Checks.....	34
8.1.2.1	Robot Side.....	34
8.1.2.2	Tool Side.....	35
8.1.3	Checking Wear of the Cam Locking Mechanism.....	35

9	SPARE PARTS	38
10	SPARE PARTS REPLACEMENT.....	39
10.1	ROBOT SIDE	39
10.1.1	Locating/Alignment Pins.....	39
10.1.2	Couple/Uncouple Sensing Module	40
10.1.3	Poppet Valves	41
10.2	TOOL SIDE.....	42
10.2.1	Locating Bushing	42
10.2.2	Air Valve Fitting.....	43
11	INFORMATIONAL DOCUMENTS.....	44

1 LIFETIME GUARANTEE

APPLIED ROBOTICS extends a lifetime guarantee to the components that make up the operating cam locking mechanism of the Epsilon Tool Changer. The following components are covered under APPLIED ROBOTICS Lifetime Guarantee.

PART NUMBER	DESCRIPTION
0104-C62N	SHAFT, CAM ACTUATOR
0104-B63N	WASHER, UNCOUPLE
0104-B64N	WASHER, COUPLE
0107-C47N	CAM, HIGH LOCK
0104-B59N	DOWEL, MODIFIED CAM

APPLIED ROBOTICS warrants the Epsilon Tool Changer cam locking mechanism for the lifetime of the product against manufacturer's defects in materials and workmanship. Additionally, APPLIED ROBOTICS warrants the cam locking mechanism against wear that results in the Epsilon Tool Changer to lose repeatability and precision during the docking sequence of operation (Section 8.1.3). For the purposes of this warranty, APPLIED ROBOTICS defines the lifetime as 8 years or 8,000,000 total cycles completed with regularly scheduled maintenance as per Section 8 of this manual.

CONDITIONS OF THE WARRANTY:

Products shall have been subject to only normal use and service as instructed in this manual and shall not have been misused, neglected, altered, improperly set up or otherwise damaged; and, there shall be no evidence of tampering or deliberate misuse or destruction.

Defects to APPLIED ROBOTICS products will be determined solely by APPLIED ROBOTICS and not by any representative or distributor of or for APPLIED ROBOTICS. Upon determination of a defect, APPLIED ROBOTICS sole obligation will be to provide replacement material for the defective part(s). APPLIED ROBOTICS is not liable or responsible for costs borne from lost production or labor related costs for repairing the defective part(s).

Any claim against APPLIED ROBOTICS for defects in material or workmanship must be in writing. APPLIED ROBOTICS must authorize the return of any allegedly defective part before it is returned. The party making the claim must prepay all shipping and transportation costs. APPLIED ROBOTICS will not accept charges for parts purchased unless the conditions of the warranty have been satisfied.

No APPLIED ROBOTICS representative or distributor is authorized to assume for APPLIED ROBOTICS any other obligations or liabilities in connection with the product, or alter the terms of this warranty in any way.

APPLIED ROBOTICS shall not be liable for damages, including special, incidental or consequential damages arising out of or in connection with the performance of an APPLIED ROBOTICS product or its use by the owner.

2 PRECAUTIONS



READ MANUAL

Do not start, operate or service machine until you read and understand operator's manual. Failure to do so could result in serious injury.



HAND CRUSH NOTICE

Indicates the possibility for a crush force between components during coupling of the Robot and Tool Side.



DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates a situation which, if not avoided, could result in equipment damage and voiding the manufacturer's equipment warranty.

IGNORING INFORMATION ABOUT POTENTIAL HAZARDS CAN LEAD TO SERIOUS HARM TO PERSONNEL AND/OR DAMAGE TO THE EQUIPMENT, AND MAY RESULT IN THE NULLIFICATION OF THE MANUFACTURER'S EQUIPMENT WARRANTY.

HEED ALL PRECAUTION NOTICES

3 SYSTEM DESCRIPTION

The Epsilon E125LP (Low Profile) Tool Changer provides a strong and reliable method for a manipulator to quickly change between different tools/end-effectors. With Applied Robotics, Inc. six-sided design, the E125LP Tool Changer offers the maximum flexibility for any application.

The E125LP Tool Changer contains two major components:

Robot Side (ER125LP) – Mounts directly to a robot flange utilizing a 125mm ISO 9409-1 pattern without the need for adaptor plates (Figure 3-1).

Tool Side (ET125LP) – Mounts directly to a tooling plate utilizing a 125mm ISO 9409-1 pattern (Figure 3-2).

The Robot Side and Tool Side lock together by means of a double-acting, pneumatically-driven cam locking mechanism. The three (3) cam self-centering locking mechanism allows for reliable and repeatable operation throughout the life of the tool changer with a unique wear compensating design. Each cam also contains a mechanical locking feature which prevents the Robot Side and Tool Side from separating/disconnecting in the event of power and/or air pressure loss. As the locking mechanism actuates, the Tool Side is physically connected and disconnected along with any utilities contained in the attached modules.

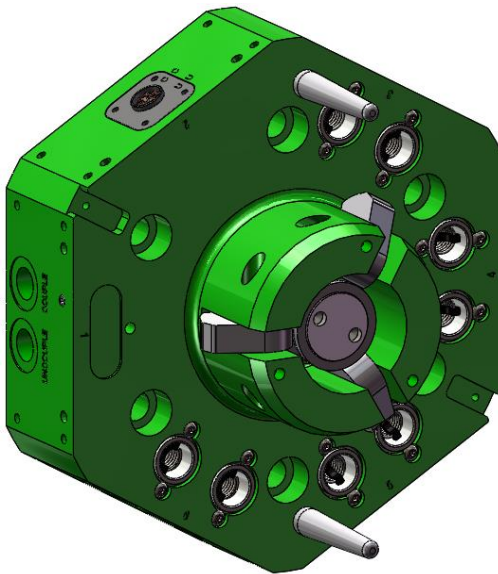


Figure 3-1. ER125LP Robot Side


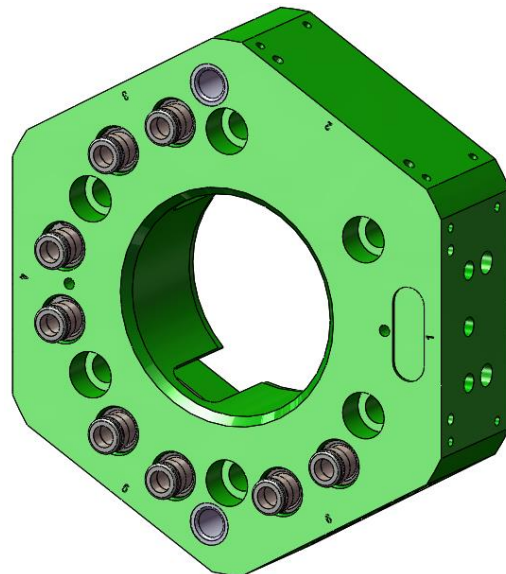


Figure 3-2. ET125LP Tool Side


3.1 ROBOT SIDE

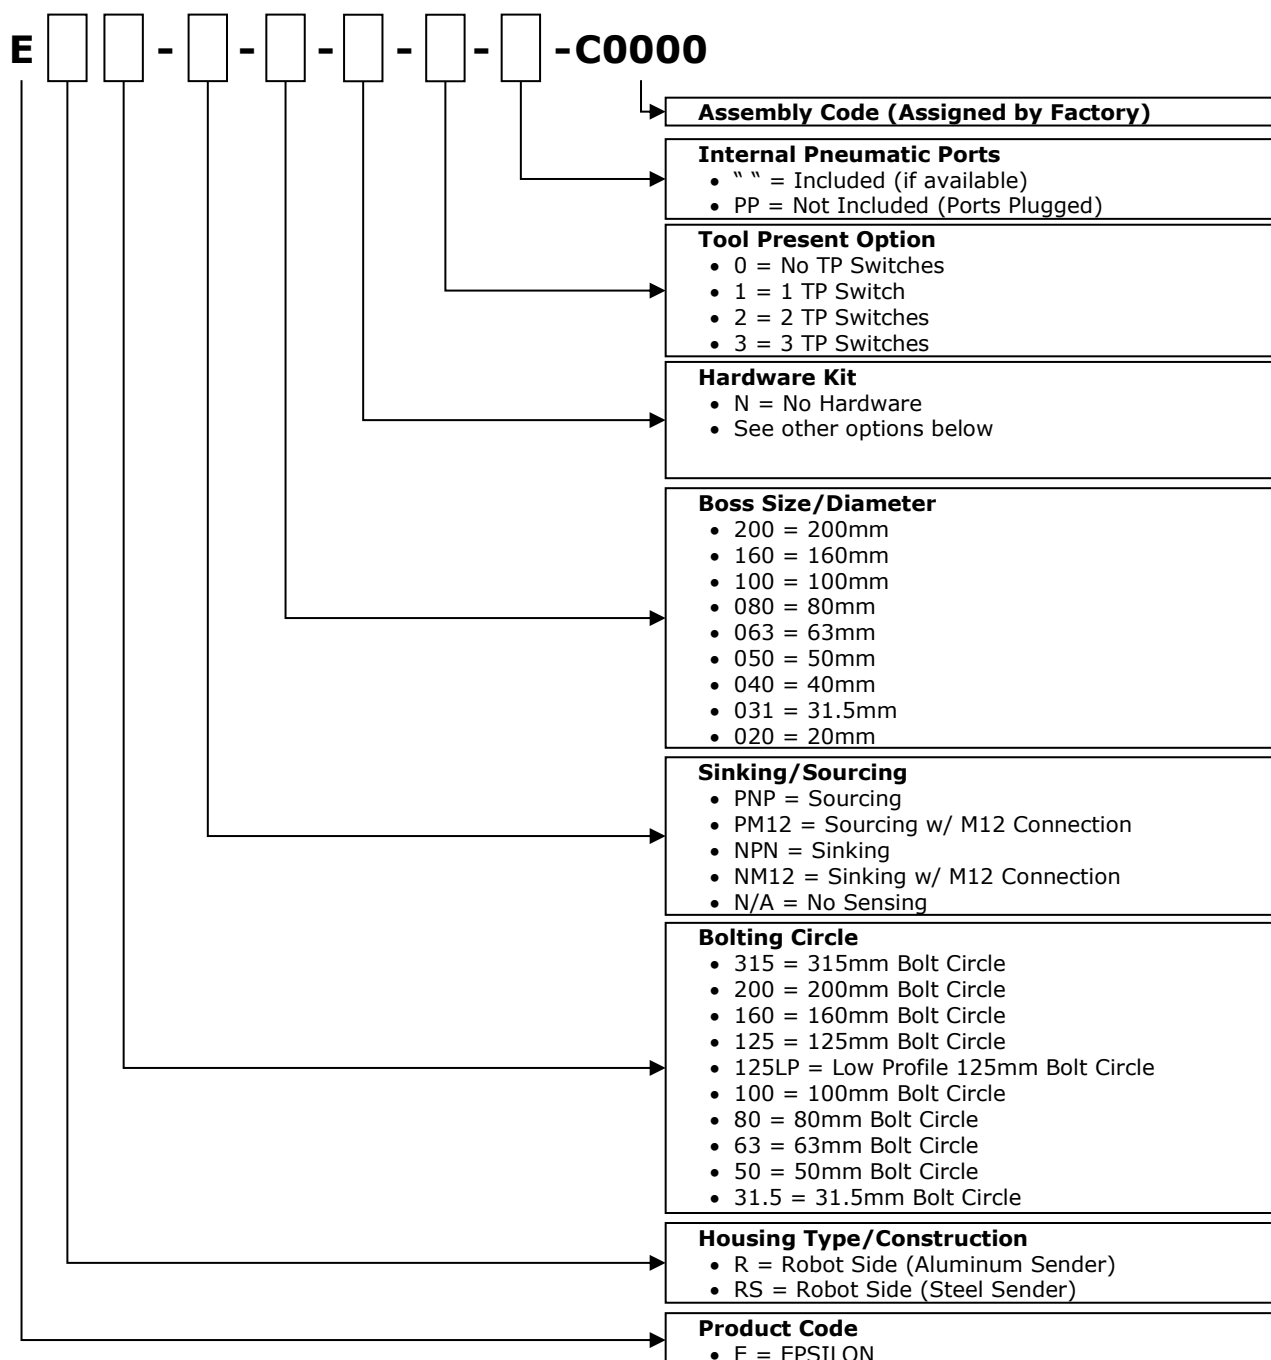

Hardware Kit

- N = No Hardware
- A = 16xM16 SHCS w/ 1x12mm Dowel (ES200)
- A2 = 6xM12 SHCS w/ 1x12mm Dowel (ES200)
- B = 11xM12 SHCS w/ 1x12mm Dowel (E160)
- B2 = 10xM12 SHCS w/ 2x12mm Dowels (E160)
- C = 6xM12 SHCS w/ 1x12mm Dowel (E160)
- D = 11xM10 SHCS w/ 1x10mm Dowel (E125)
- D2 = 10xM10 SHCS w/ 2x10mm Dowels (E125)
- E = 11xM10 SHCS w/ 1x10mm Dowel and 11x10.5mm ID washers (E160)
- E2 = 12xM10 SHCS w/ 2x10mm Dowels and 10x10.5mm ID washers (E160)
- F = 6xM10 SHCS w/ 1x10mm Dowel (E125)
- G = 6xM10 SHCS w/ 1x10mm Dowel and 6x10.5mm ID washers (E160)
- H = 6xM8 SHCS w/ 1x8mm Dowel (E80 & E100)
- I = 4xM6 SHCS w/ 1x6mm Dowel (E50 & E63)
- J = 4xM5 SLHCS w/ 1x5mm Dowel (E31.5)
- R = 6xM10 SHCS w/ 1x10mm Dowel (E125LP)
- Z = 15xM16 SHCS w/ 1x12mm Dowel (ES315)

3.2 TOOL SIDE

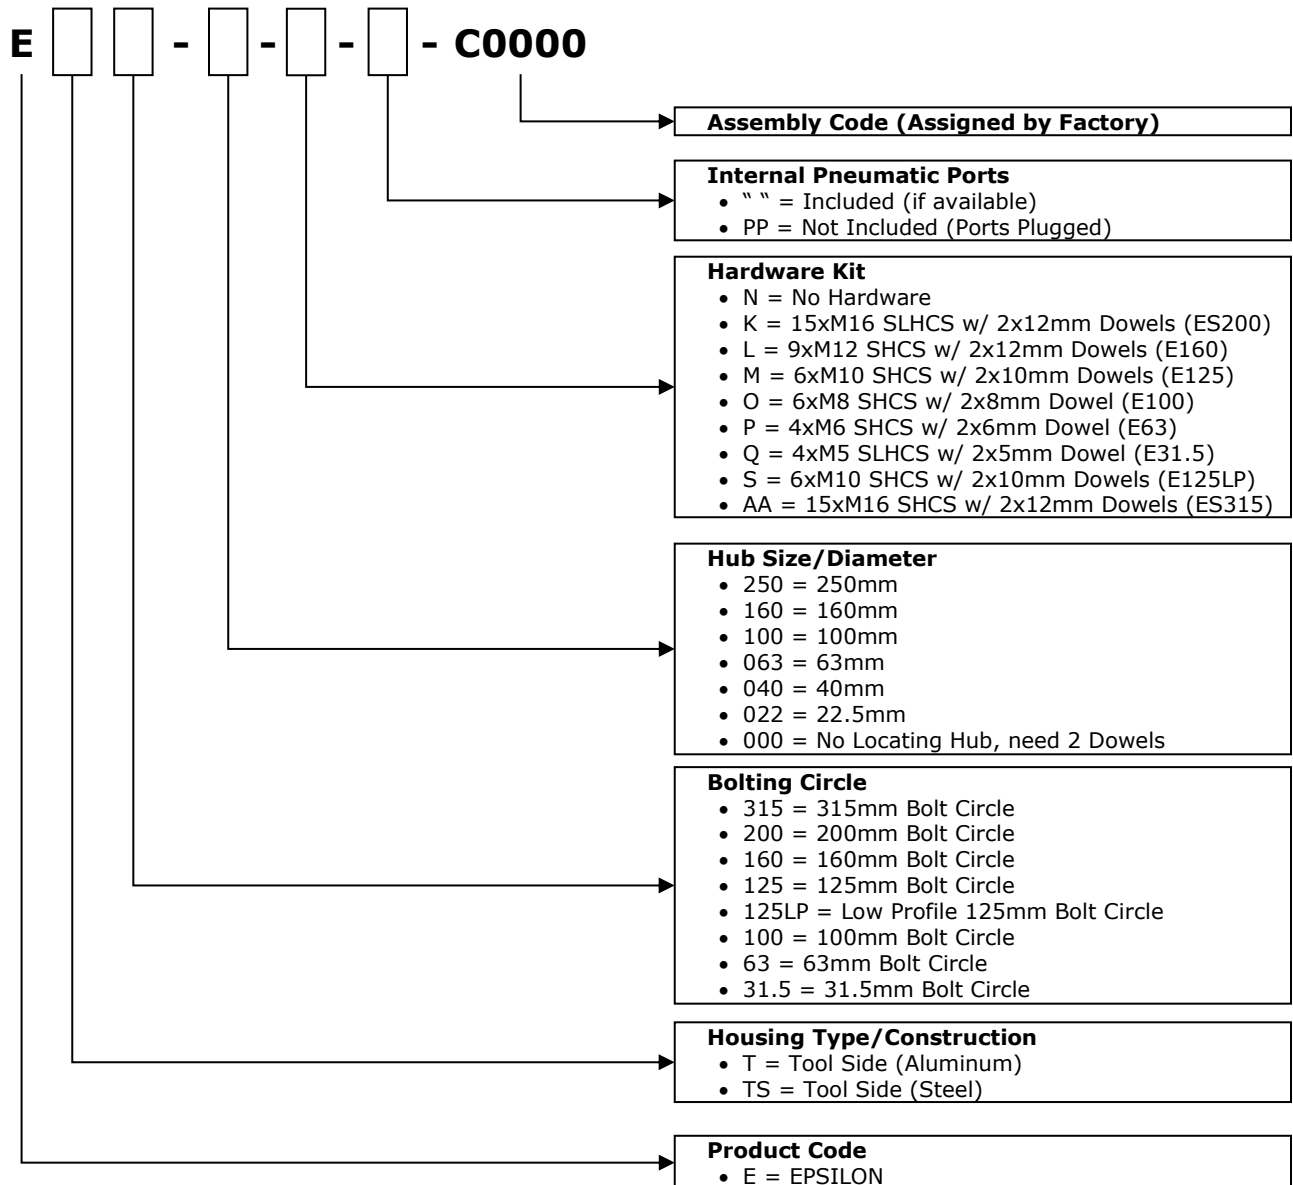

ET50-031-N-T-C0000 is a specific tool side, which has a thread-in 50mm Bolt Circle pattern.

Note: If " " (blank) is chosen, remove "-" (dash) if that is the only input between dashes.

4 TECHNICAL SPECIFICATIONS

Table 4-1. E125LP Technical Specifications

Specification		Metric	English
Payload		225 kg	495 lb
Maximum Operating Moment (M _x , M _y)		1,737 Nm	15,370 in-lb
Maximum E-Stop Moment (M _x , M _y)		2,875 Nm	25,450 in-lb
Maximum Operating Torque (M _z)		2,020 Nm	17,875 in-lb
Maximum E-Stop Torque (M _z)		3,953 Nm	34,985 in-lb
Maximum Tensile Force (F _T)		15,750 N	3,540 lb
Maximum Compressive Force (F _C)		49,370 N	11,100 lb
Diameter		190 mm	7.48 in
Height (Robot and Tool Coupled)		94 mm	3.70 in
Mass / Weight *	Robot	3.11 kg	6.84 lb
	Tool	2.32 kg	5.10 lb
Rotational Repeatability		± .01°	
Operating Temperature		5 °C to 60 °C	40 °F to 140 °F
Supply Pressure		5 bar to 7 bar	72 psi to 101 psi
Couple/Uncouple Voltage		10 to 30 VDC	
Noise Emission		≤ 70 dB(A) in any direction	
Transportation and Storage Humidity		Up to 50%, Maximum Temperature 70 °C (158 °F)	
Transportation and Storage Temperature		-25 °C to 70 °C	-13 °F to 158 °F
User Pneumatic Pressure Range		0 bar to 7 bar	0 psi to 101 psi
User Pneumatic Flow (Cv)		0.92	

* Weight may vary depending on specific configuration.

5 INSTALLATION

5.1 ROBOT SIDE INSTALLATION

The E125LP Robot Side is designed to mount directly to interfaces utilizing an ISO 125mm bolt pattern (ISO 9409-1). The E125LP Robot Side can mount to manipulator interfaces utilizing M10 hardware. For size, locations, and tolerance information on the E125LP Robot Side mounting patterns, see Informational Documents (Section 11).

NOTICE

**TOOL CHANGER PAYLOAD & MOMENT
RATINGS BASED ON USING A MINIMUM
OF 6xM10 SCREWS TO MOUNT THE
ROBOT SIDE TO THE MANIPULATOR
INTERFACE.**

5.1.1 M10 Hardware

NOTICE

ENSURE THAT THE MATING SURFACES OF THE ROBOT SIDE AND ROBOT FLANGE ARE FLUSH (PLANAR) WHEN FASTENING THE SCREWS.

1. Locate the Robot Side to the manipulator mounting flange utilizing the locating boss and one (1) M10 locating dowel (Figure 5.1.1-1).
2. Insert and tighten the M10 socket head cap screws (minimum Property Class 10.9) provided with the Robot Side Assembly. Torque the screws to the robot manufacturer's specification.

NOTICE

TIGHTEN FACEPLATE MOUNTING SCREWS TO ROBOT MANUFACTURER'S SPECIFICATIONS. IF USING LOCTITE, USE LOCTITE 242 OR EQUIVALENT.

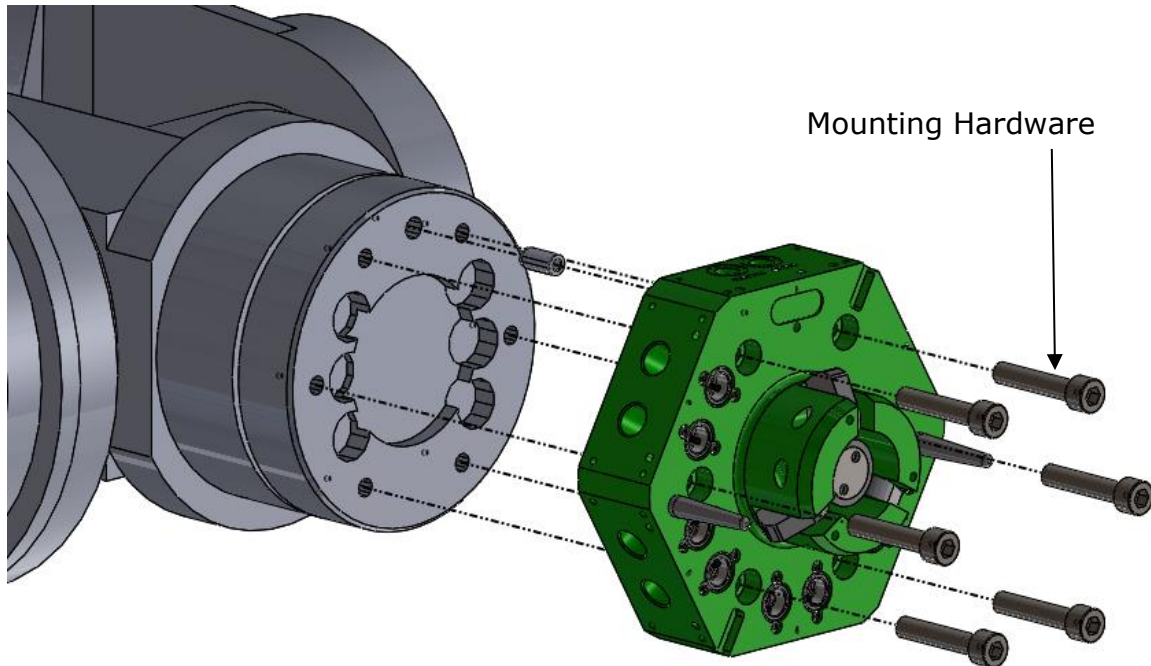


Figure 5.1.1-1. E125LP Robot Side Installation w/ M10 Hardware



WARNING

DO NOT EXCEED THE MAXIMUM OPERATING OR E-STOP MOMENT OF THE TOOL CHANGER WHEN USING A ROBOT SIDE PLATE TO ADAPT TO OTHER BOLTING PATTERNS.

5.2 TOOL SIDE INSTALLATION

The E125LP Tool Side is designed to mount directly to customer tooling utilizing an ISO 9409-1 bolt pattern. The Tool Side can be mounted from the top down using M10 hardware on the ISO 125mm bolt circle. For size, locations, and tolerance information on the Tool Side mounting patterns, see Informational Documents (Section 11).

NOTICE

TOOL CHANGER PAYLOAD & MOMENT RATINGS BASED ON USING 6xM10 SCREWS TO MOUNT THE TOOL SIDE TO THE TOOLING INTERFACE.

If a locating boss/pilot is used on the tool plate to locate the tool to the Tool Side, then the boss cannot protrude into the tool changer greater than 2mm and a 32mm diameter counter-bore with a minimum depth of 3mm below the Tool Side and Tool Plate interface must be made into the boss to allow for clearance of the latching mechanism (Figure 5.2-1).

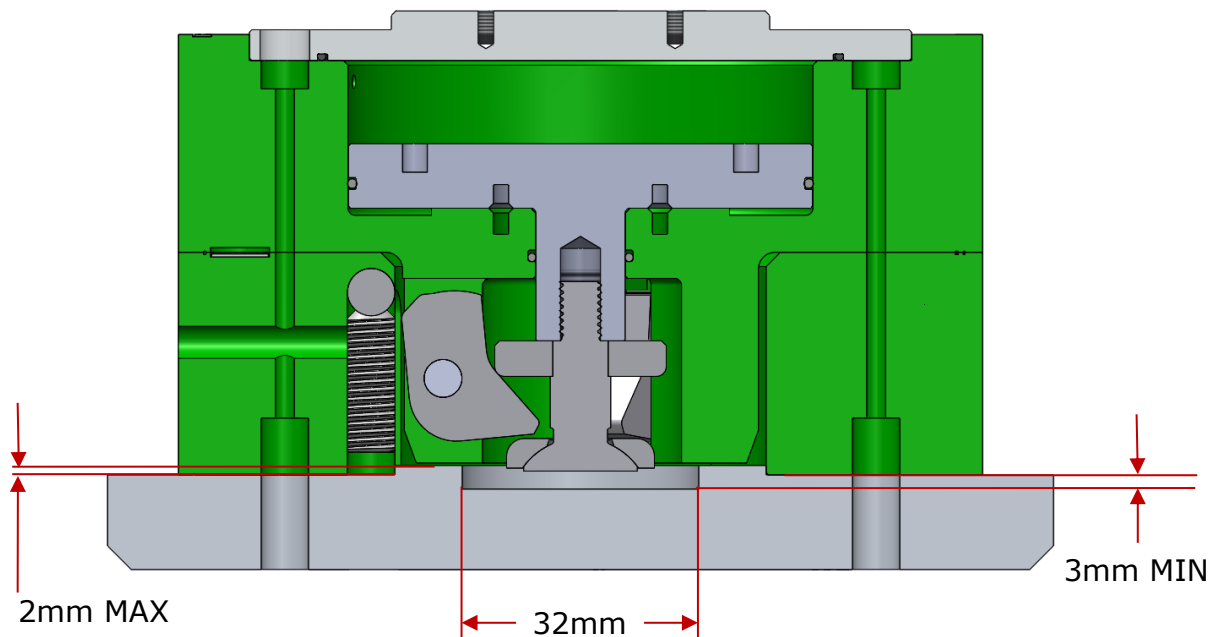


Figure 5.2-1. ET125LP Tool Side and Tool Plate Installation

Installing the ET125LP Tool Side from the Top Down:**NOTICE**

ENSURE THAT THE MATING SURFACES OF THE TOOL SIDE AND TOOL PLATE ARE FLUSH (PLANAR) WHEN FASTENING THE SCREWS.

1. Locate the Tool Side to the tool plate utilizing two (2) M10 locating dowels (Figure 5.2-1). Note that the ET125LP Tool Side does not contain an option to use a locating hub for mounting to a tool plate.
2. Insert and tighten M10 socket head cap screws (minimum Property Class 10.9) through the Tool Side 125mm bolt circle. Applied Robotics recommends the use of steel threads in the tool plate and appropriate thread engagement and torque values.

NOTICE

TIGHTEN MOUNTING SCREWS TO THE APPROPRIATE SPECIFICATION DEPENDING ON THE END EFFECTOR USED. IF USING LOCTITE, USE LOCTITE 242 OR EQUIVALENT.

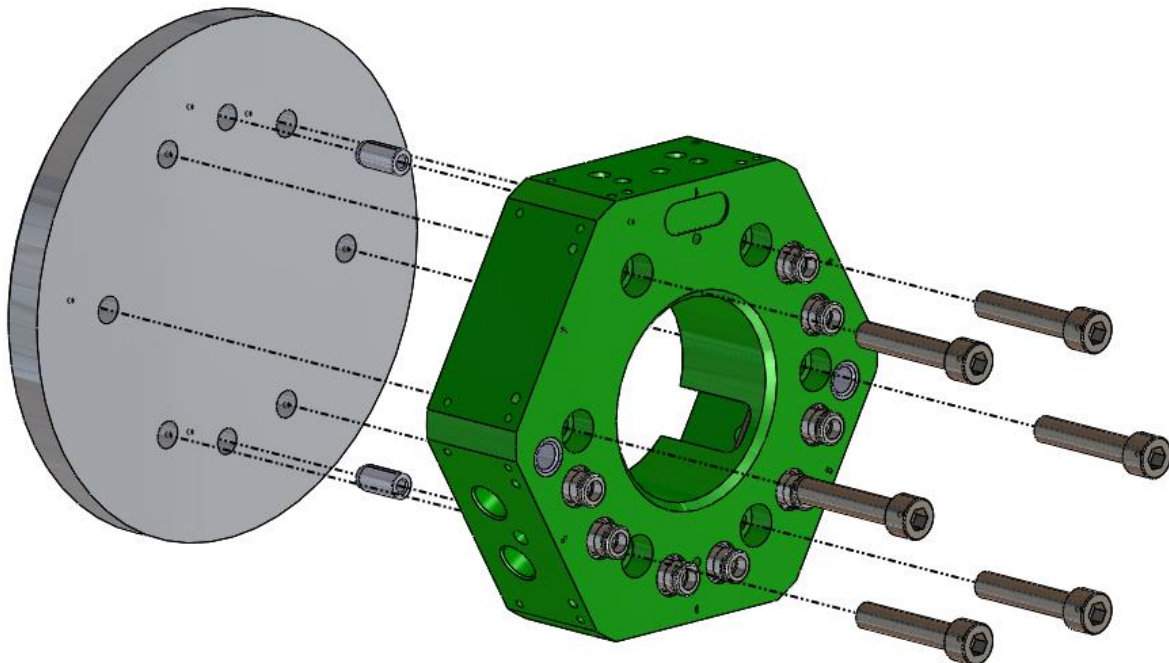


Figure 5.2-1. ET125LP Tool Side Installation (Bolt Top Down)

**WARNING**

DO NOT EXCEED THE MAXIMUM OPERATING OR E-STOP MOMENT OF THE TOOL CHANGER WHEN USING AN ADAPTOR PLATE TO ADAPT TO OTHER BOLTING PATTERNS.

5.3 CONNECTING THE AIR SUPPLY

The pneumatic supply for the Epsilon Tool Changer can be supplied via directly ported air fittings supplied by the customer (Figure 5.3-1).



WARNING

PNEUMATIC PRESSURE SHOULD NEVER BE SUPPLIED TO THE EPSILON TOOL CHANGE SYSTEM UNLESS THE POSITION OF THE VALVE SUPPLYING THE AIR IS KNOWN AND HAS BEEN CONFIRMED. FAILURE TO DO SO CAN RESULT IN SERIOUS INJURY OR DEATH FROM A DROPPED TOOL.



WARNING

THE ROBOT SHOULD NEVER BE RUN WITHOUT AIR PRESSURE BEING SUPPLIED TO THE TOOL CHANGER. PRESSURE TO THE TOOL CHANGER MUST BE AT LEAST 5 BAR (72 PSIG) FOR PROPER OPERATION.

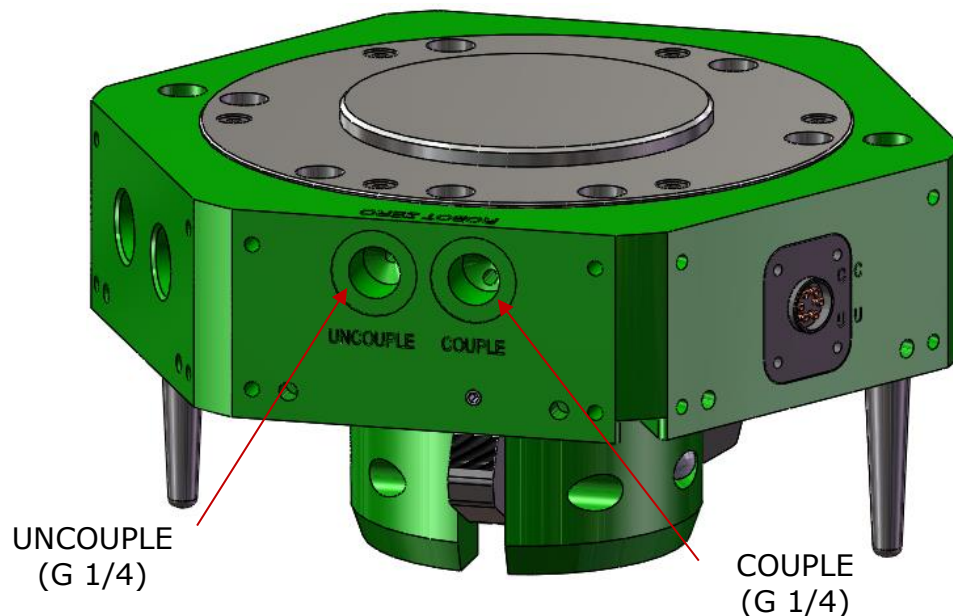


Figure 5.3-1. E125LP Robot Side Air Supply Ports

Both the couple and uncouple actuation port lines must be installed in order for the Epsilon Tool Change System to function properly. To control air to the different ports, a single solenoid, spring-return, 4-way valve or a double solenoid, 4-way valve can be used.

**WARNING****IF A SINGLE SOLENOID, SPRING-RETURN, 4-WAY PNEUMATIC VALVE IS USED, THE FOLLOWING MUST BE UNDERSTOOD AND ADHERED TO:**

- IN THE DE-ENERGIZED STATE, THE VALVE MUST PROVIDE AIR TO THE COUPLE PORT ONLY.

IF A DOUBLE SOLENOID, 4-WAY PNEUMATIC VALVE IS USED, THE FOLLOWING MUST BE UNDERSTOOD AND ADHERED TO:

- THE VALVE WILL REMAIN IN ITS PRESENT POSITION UNTIL EITHER THE ALTERNATE SOLENOID IS ENERGIZED OR BY MANUALLY PRESSING THE ALTERNATE SOLENOID OVERRIDE BUTTON (IF APPLICABLE).
- TO CHANGE THE STATE OF THE VALVE, ONE SIDE OF THE SOLENOID MUST BE ENERGIZED AND THE OTHER SIDE DE-ENERGIZED. IF BOTH SIDES ARE ENERGIZED (OR DE-ENERGIZED), THE VALVE WILL NOT CHANGE STATES.
- THE VALVE MUST BE PILOT ACTUATED SO THAT THE POSITION OF THE VALVE WILL NOT CHANGE UNLESS THERE IS AIR SUPPLIED TO THE VALVE.

**WARNING**

5.4 COUPLE AND UNCOUPLE SIGNALS

Couple and uncouple signals are provided via an electrical interface at Position 2 of the E125LP Robot Side (Figure 5.4-1 or Figure 5.4-2). APPLIED ROBOTICS utilizes proximity switches to provide indication of piston limit positions (couple and uncouple). Switches are preset at the factory and do not require any adjustment for the lifetime of the tool changer.

**CAUTION**

COUPLE AND UNCOUPLE SENSOR SIGNALS SHOULD BE CONTINUALLY MONITORED TO VERIFY THAT THE TOOL CHANGER IS IN THE PROPER STATE BEFORE COMMANDING THE ROBOT TO MOVE.

Should the switches need to be replaced, see Section 10.1.2.

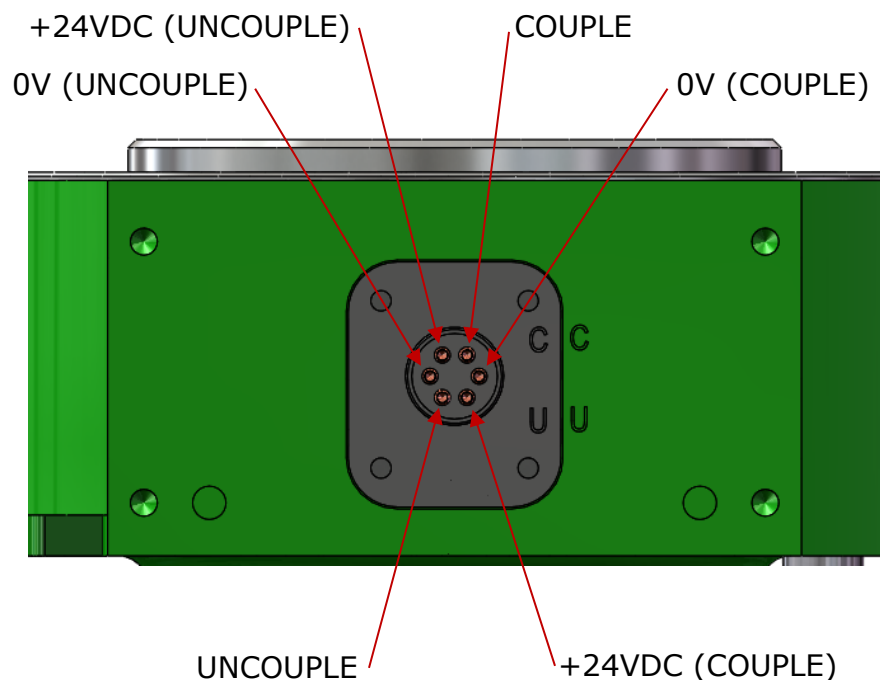


Figure 5.4-1. Couple/Un Couple Signal Interface

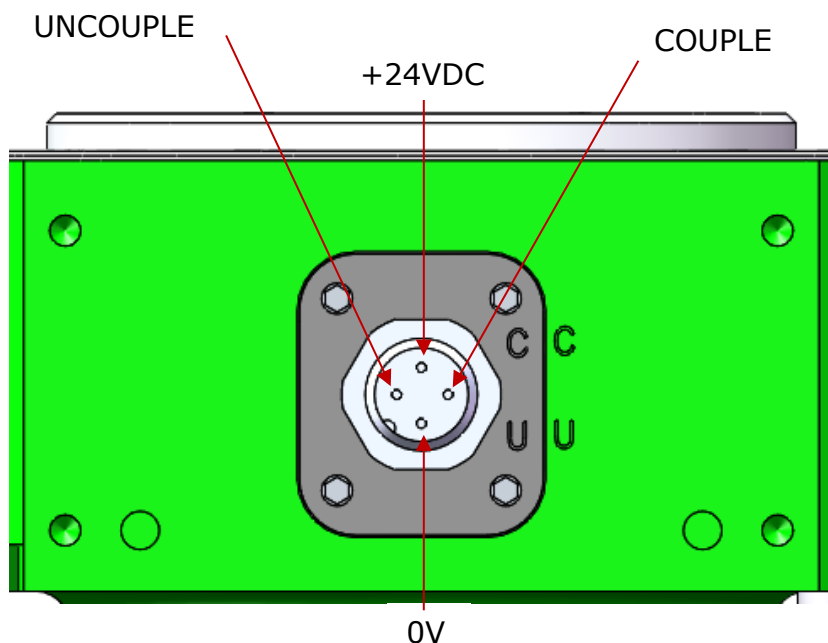


Figure 5.4-2. M12 Couple/Un Couple Signal Interface

NOTICE

MAKING CONNECTIONS WHILE UNDER POWER COULD RESULT IN DAMAGE TO THE EQUIPMENT. TO AVOID DAMAGING EQUIPMENT, ENSURE THAT ALL CABLES ARE CONNECTED BEFORE SUPPLYING POWER TO THE EQUIPMENT.

5.5 TOOL PRESENT SIGNAL (OPTIONAL)

The E125LP Tool Changer contains a built-in feature for Tool Present detection via a proximity sensor(s) (Figure 5.5-1). This option provides direct detection of the Tool Side and the signal can be directly monitored by the robot controller.

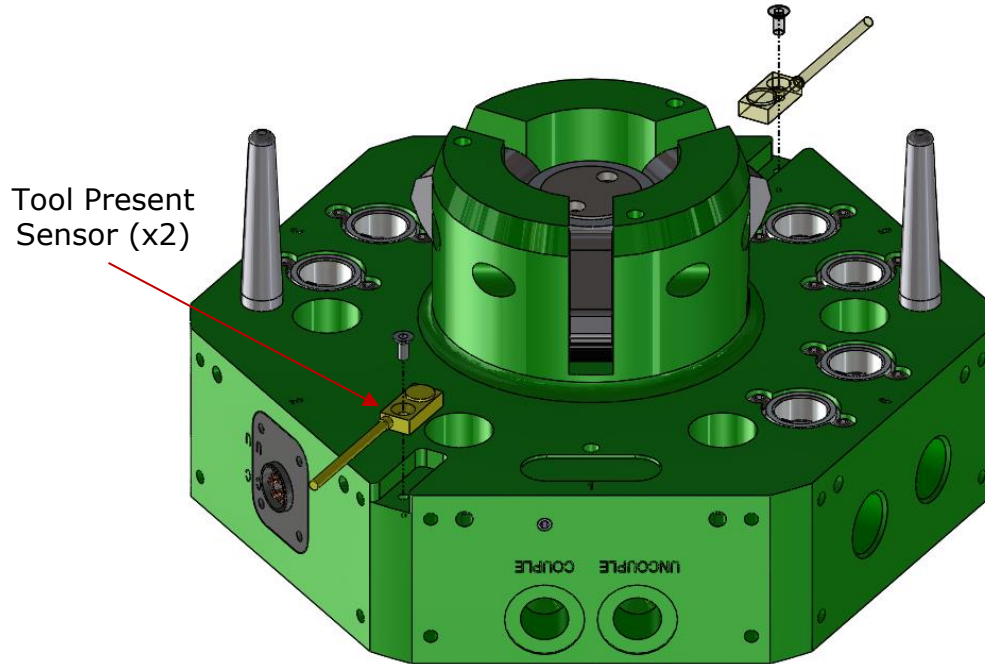


Figure 5.5-1. Tool Present Option

When the Tool Present sensors are installed, ensure that the tip of the sensor (highlighted blue) does not protrude past the Robot Side interface (Figure 5.5-2).

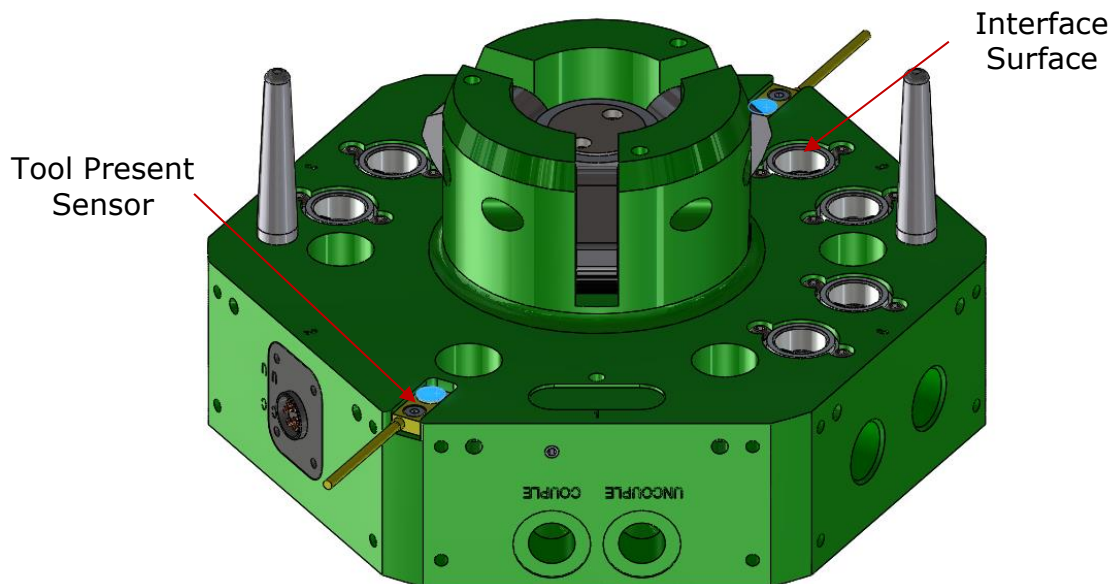


Figure 5.5-2. Tool Present Sensor Installation

5.6 CONNECTING USER PNEUMATIC PORTS

The E125LP Tool Changer has eight (8) available user pneumatic ports to supply air through the tool changer to the specific tool being used. The robot side ports can be checked if a poppet valve is installed. For the ports to be operational, the tool changer must be coupled and be fitted with a valve fitting assembly (0002-B04A). Air can be supplied via directly ported air fittings supplied by the customer (Figure 5.6-1).

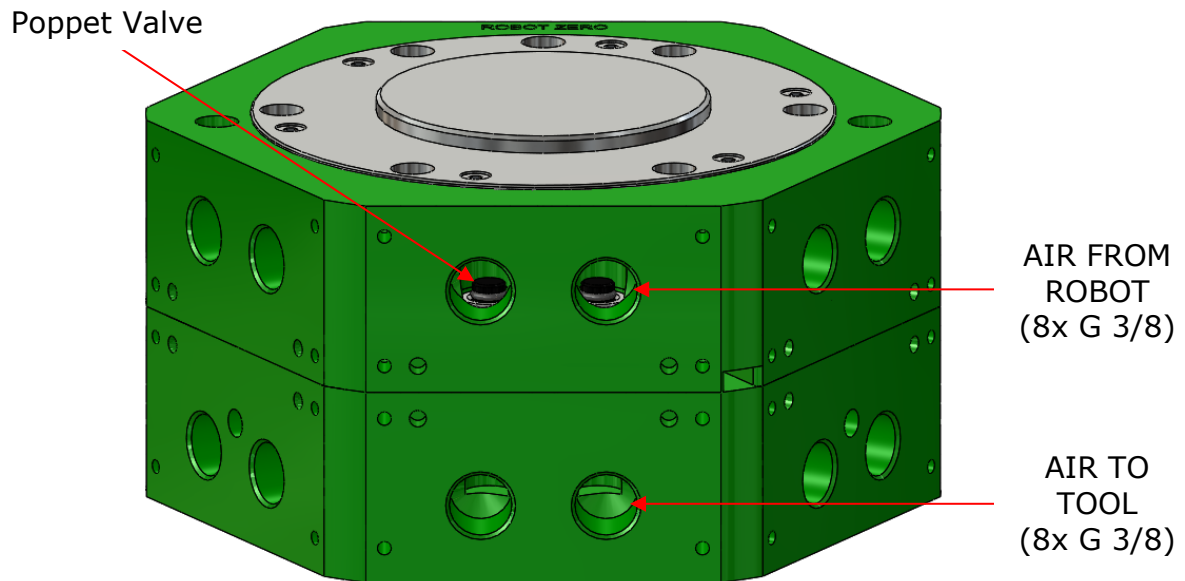


Figure 5.6-1. E125LP User Pneumatic Ports

5.7 GROUNDING CONNECTION

The E125LP Tool Changer has two (2) masked holes on opposite sides to attach an M6 lug as a grounding line (Figure 5.7-1 and Figure 5.7-2).

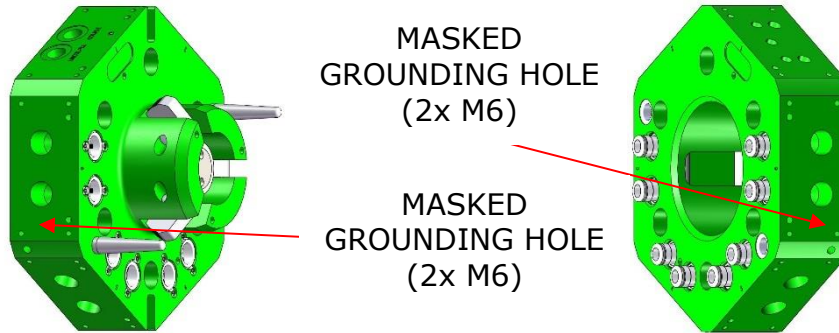


Figure 5.7-1 ER125LP Masked Grounding Holes

Figure 5.7-2 ET125LP Masked Grounding Holes

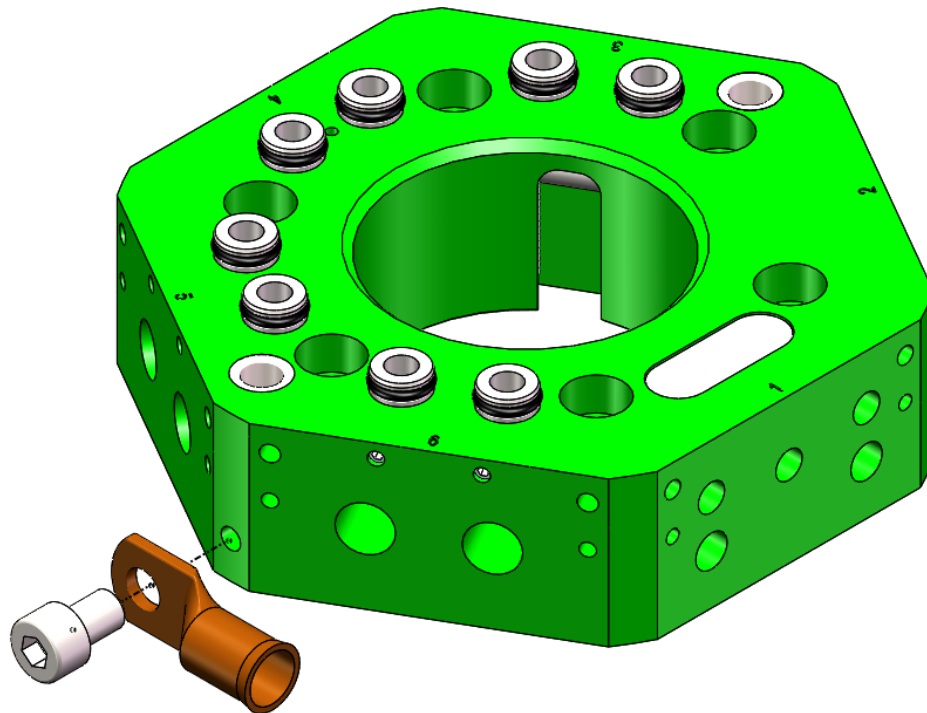


Figure 5.7-3. Grounding M6 Lug Mounting

6 GUIDE TO OPERATIONS

6.1 INITIAL TEST

Once the air supply has been plumbed to the couple and uncouple ports, control power is connected to the air supply valve, and the couple and uncouple position sensors are in communication with the robot controller/PLC, perform the following steps to verify the proper operation of the Epsilon Tool Changer.

**CAUTION**

DURING TESTING, KEEP YOUR FINGERS CLEAR OF THE MECHANICAL COUPLING MECHANISM AND THE COUPLING INTERFACE SURFACES. KEEP OUT OF THE ROBOT WORK ENVELOPE WHEN DRIVE POWER IS ON.

1. Verify that the Robot Side is clear of any obstruction and not coupled to the Tool Side.
2. Turn on supply air to the control valve and verify that the cams move to the extended position (Figure 6.1-1). If using a single solenoid, spring return, 4-way valve, this will verify that it is plumbed correctly.
3. Supply control power to the solenoid valve and supply the signal from the controller/PLC to move the valve to the uncoupled (solenoid energized) position. The cams should retract to the uncoupled position (Figure 6.1-2) and the input from the uncoupled sensor should be received by the robot controller/PLC.
4. Change the state of the solenoid valve by turning off the uncouple signal (solenoid de-energized). The cams should extend back to the couple position and the uncouple sensor signal should turn OFF (LOW) and the couple sensor signal should turn ON (HIGH) at the robot controller/PLC.
5. Repeat Steps 3 and 4 several times. The cam action should be smooth and quick.

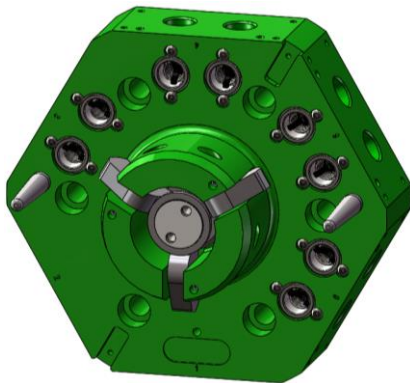


Figure 6.1-1. Robot Side Coupled (Cams Extended)

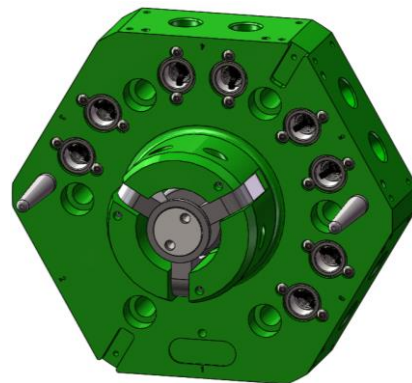


Figure 6.1-2. Robot Side Uncoupled (Cams Retracted)

6.2 PROGRAMMING THE COUPLE AND UNCOUPLE POINTS



THE ROBOT SHOULD NEVER BE RUN WITHOUT A MINIMUM AIR PRESSURE OF 5 BAR (72 PSIG) BEING SUPPLIED TO THE ROBOT SIDE.

When programming the “dock” and “undock” points of each tooling, the following steps should be taken:

1. Orient the Robot Side and Tool Side so that the centerline axes are aligned and the interface surfaces are parallel. Maintain approximately 60mm minimum separation between the Robot Side and Tool Side interface surfaces (Figure 6.2-1).

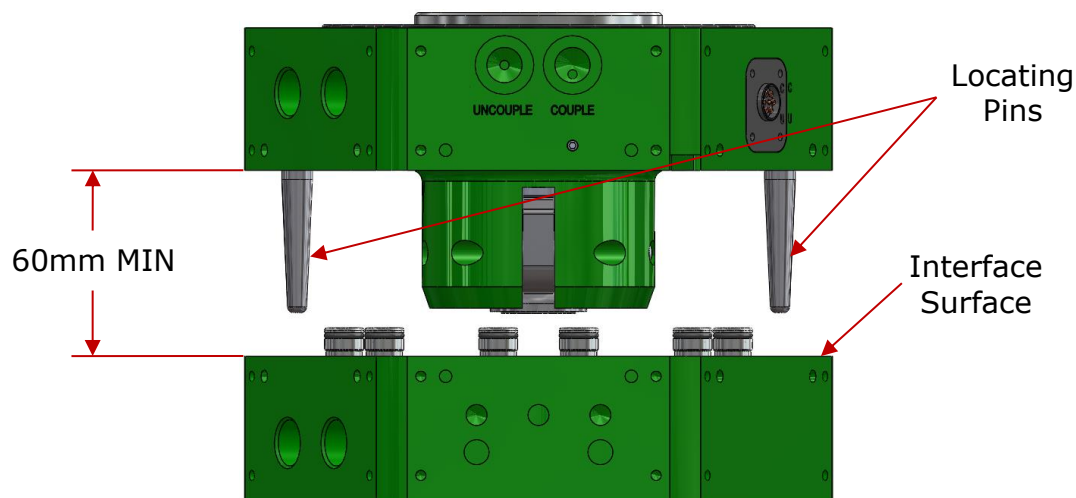


Figure 6.2-1. E125LP Tool Changer – Docking Orientation

2. Energize the solenoid, resulting in an uncoupled (cams retracted) state.
3. Rotate the Robot Side so that the locating pins are centered on the bushings in the Tool Side.
4. Start to bring the Robot and Tool Sides together while visually checking the alignment of the locating pins and bushings. Make lateral adjustments as necessary to center the locating pins to the bushings. Exact alignment is not required; however, limit the amount of interference between the locating pins and bushings while docking. Interference between the locating pins and bushings while docking increases wear and decreases the life of the locating pins.
5. Stop the motion when the distance between the Robot Side interface surface and Tool Side interface surface are touching or as close as can reasonably be achieved. At this time, any electrical or fluid connections will be made through the use of available side modules. Note that when the interface surfaces of the Robot Side and Tool Side are in contact, the outer edge of the Sides should be touching (Figure 6.2-2).



Figure 6.2-2. E125LP Tool Changer – Docked Position

NOTICE

MINIMIZING THE DISTANCE BETWEEN THE ROBOT SIDE AND TOOL SIDE INTERFACE SURFACES WHEN PROGRAMMING THE DOCK AND UNDOCK POINTS WILL ENSURE OPTIMUM PERFORMANCE OF THE TOOL CHANGER OVER ITS OPERATIONAL LIFE SPAN.

SEPARATION BETWEEN THE ROBOT SIDE AND TOOL SIDE INTERFACE SURFACES, GREATER THAN 1mm DURING DOCKING OR UNDOCKING WILL RESULT IN ADDITIONAL WEAR TO THE TOOL CHANGER AND REDUCE THE OVERALL LIFE EXPECTANCY.

6. De-energize the solenoid that controls the air pressure to the couple port. This will couple the Robot Side with the Tool Side.
7. Cycle the cams by energizing and de-energizing the solenoid several times to verify that the Tool Side is properly connected and released from the Robot Side. If properly programmed, the Robot Side and Tool Side should not move when the cams are coupled (extended) and uncoupled (retracted).
8. Record the position from Step 5 as the “dock” and “undock” coordinates for the Tool Side. Depending on the docking station used, separate dock and undock positions may be required.
9. Repeat procedure for each Tool Side used in conjunction with the corresponding Robot Side.

6.3 TOOL DROP PREVENTION

Preventing accidental uncoupling of the Tool Changer is of utmost importance when setting up your Epsilon Tool Changer for operation. Various system options are available to ensure that the Tool Changer cams can only be moved into the Uncouple position when it is safe to do so (i.e., when the Tool Side is not coupled to the Robot Side OR when the tool is safely positioned in a docking station).

Unintentional tool drops can be prevented by using a programmable safety controller or an APPLIED ROBOTICS Tool Stand Monitoring (TSM) circuit. For further information, consult the manual for your particular system or contact APPLIED ROBOTICS Applications Engineering.

6.3.1 Mechanical Lock Design Feature

The E125LP Tool Changer is equipped with a mechanical locking feature (Figure 6.3.1-1) that prevents the cams from retracting when supply air pressure is lost. The mechanical locking feature is a “flat” cut into the profile of the cam and when air pressure is lost, the Tool Side will separate from the Robot Side slightly ($\sim 0.75\text{mm}$) until the pickup dowel on the Tool Side locks into this feature (Figure 6.3.1-2). When the pickup dowel is locked into this feature, the Tool Changer is unable to separate. The spring in the E125LP Robot Side piston chamber returns the cams to the extended position (coupled) when air supply to the Tool Changer is lost.

The E125LP cam also contains a unique wear compensating profile with a progressive design, allowing for the mechanism to remain effective for the life of the Tool Changer.

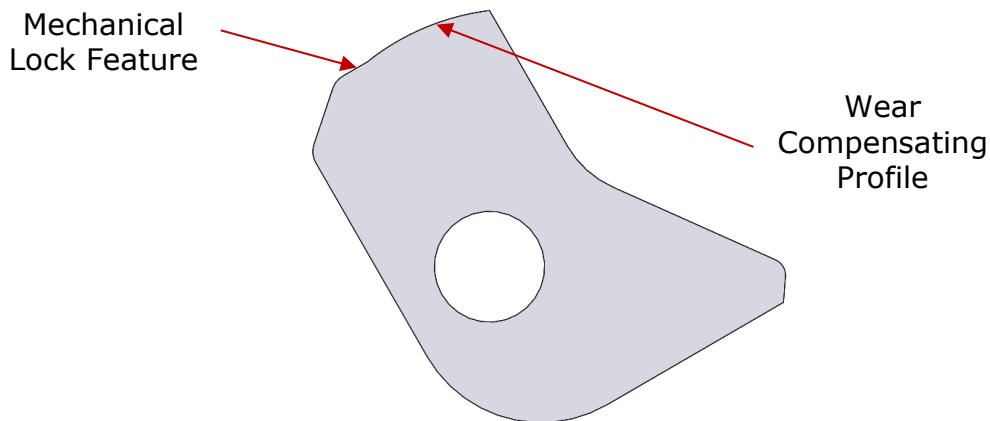


Figure 6.3.1-1. E125LP Cam Mechanical Lock Feature

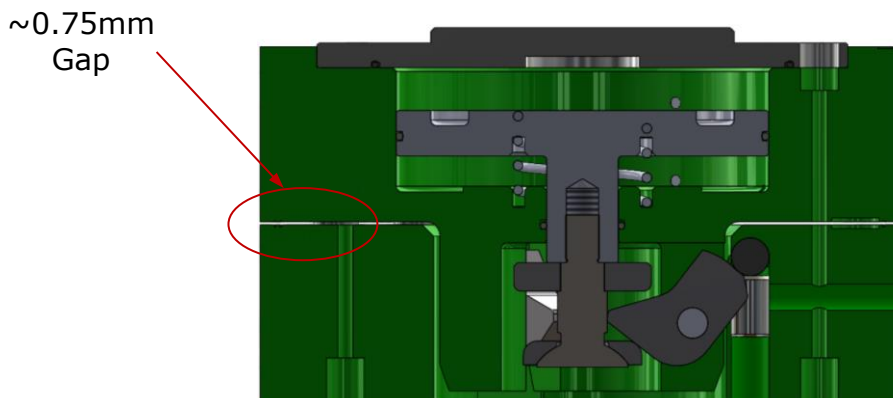



Figure 6.3.1-2. E125LP Robot & Tool Side – Loss of Air Mechanical Lock

6.4 RECOMMENDED SEQUENCE OF OPERATION

NOTICE

**THE EPSILON TOOL CHANGER SYSTEM
SHOULD NEVER BE UNCOUPLED UNLESS
THE ATTACHED TOOL IS FULLY
SUPPORTED IN A DOCKING
STATION/TOOL STAND.**

The following is a standard sequence of operation for a Robot, Tool Changer, and Tool combination. See Figure 6.4-1 and Figure 6.4-2 for a graphical representation of this sequence.

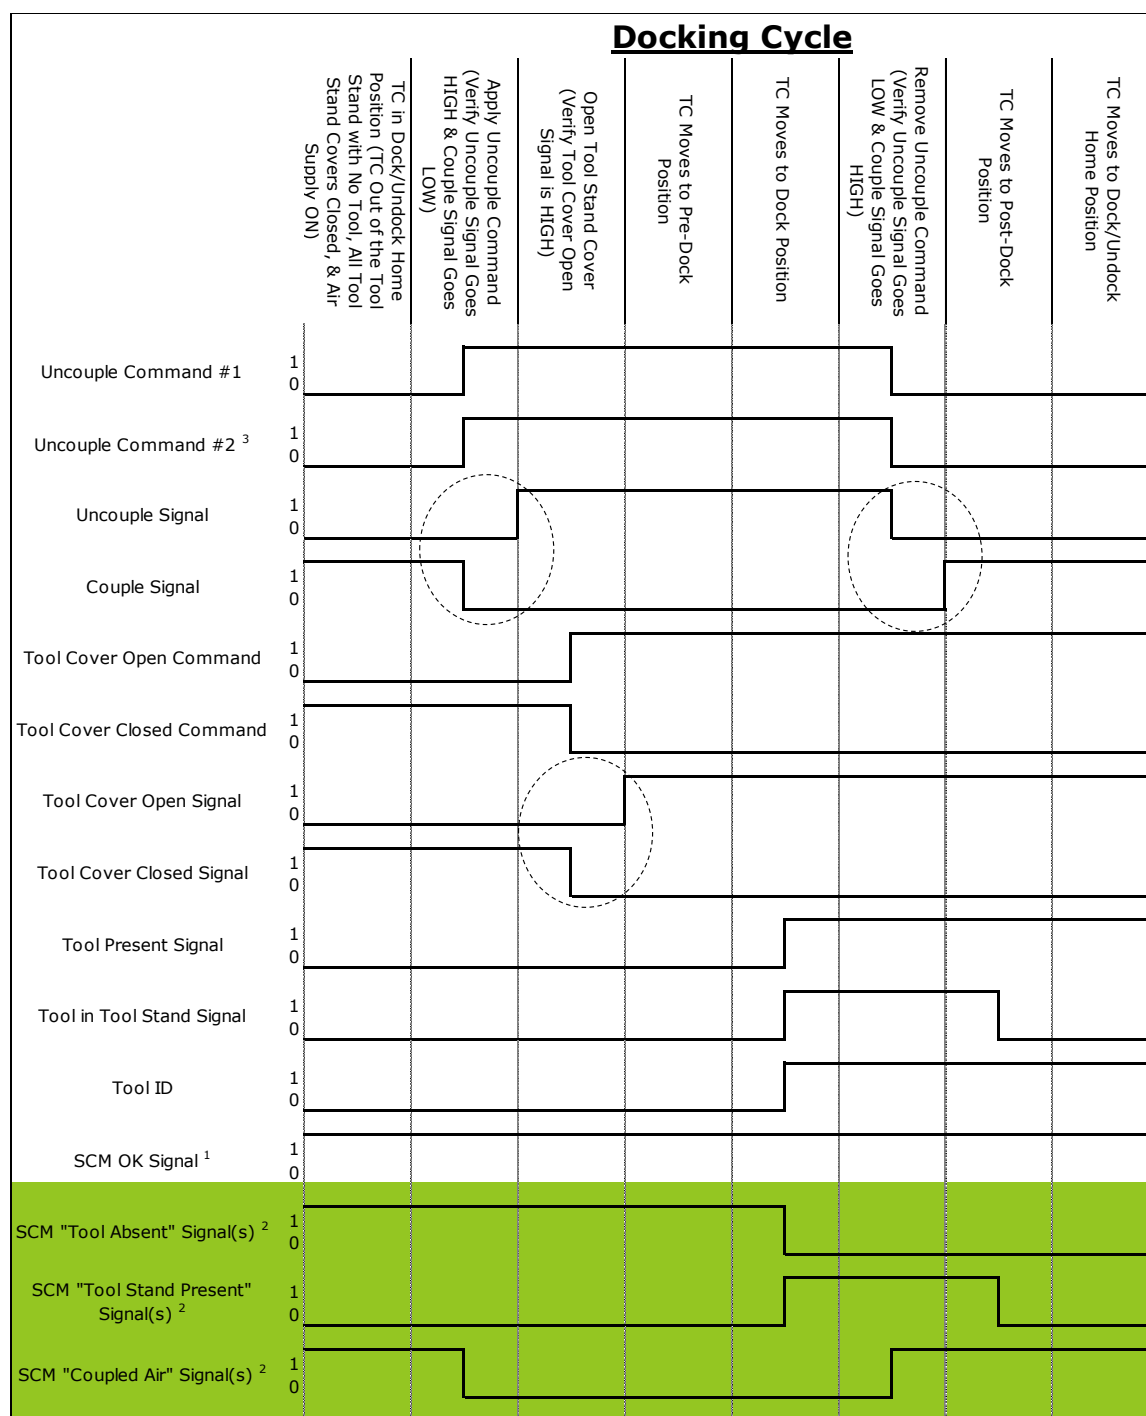

¹ Customer is required to continuously monitor the SCM OK signal, verifying that the signal remains HIGH throughout the entire operation. If SCM OK signal goes LOW, stop the robot, remove the Uncouple Commands and refer to the Troubleshooting section of the SCM User Guide.

² Signals (dual channel) are only available via LED's on ARI's Safety Control Module (SCM). Not available for monitoring by the robot controller.


³ Second Uncouple Command is required when using ARI's Safety Control Module (SCM) and should be applied simultaneously with the first Uncouple Command.

- Verify the status of all signals before proceeding to the next step.

- Input/Output HIGH = 1, LOW = 0

- Dotted circles indicate a intermediate state of an actuating cylinder when neither "Open" or "Close" signal is present.

Figure 6.4-1. Sequence of Operations Diagram – Docking Cycle

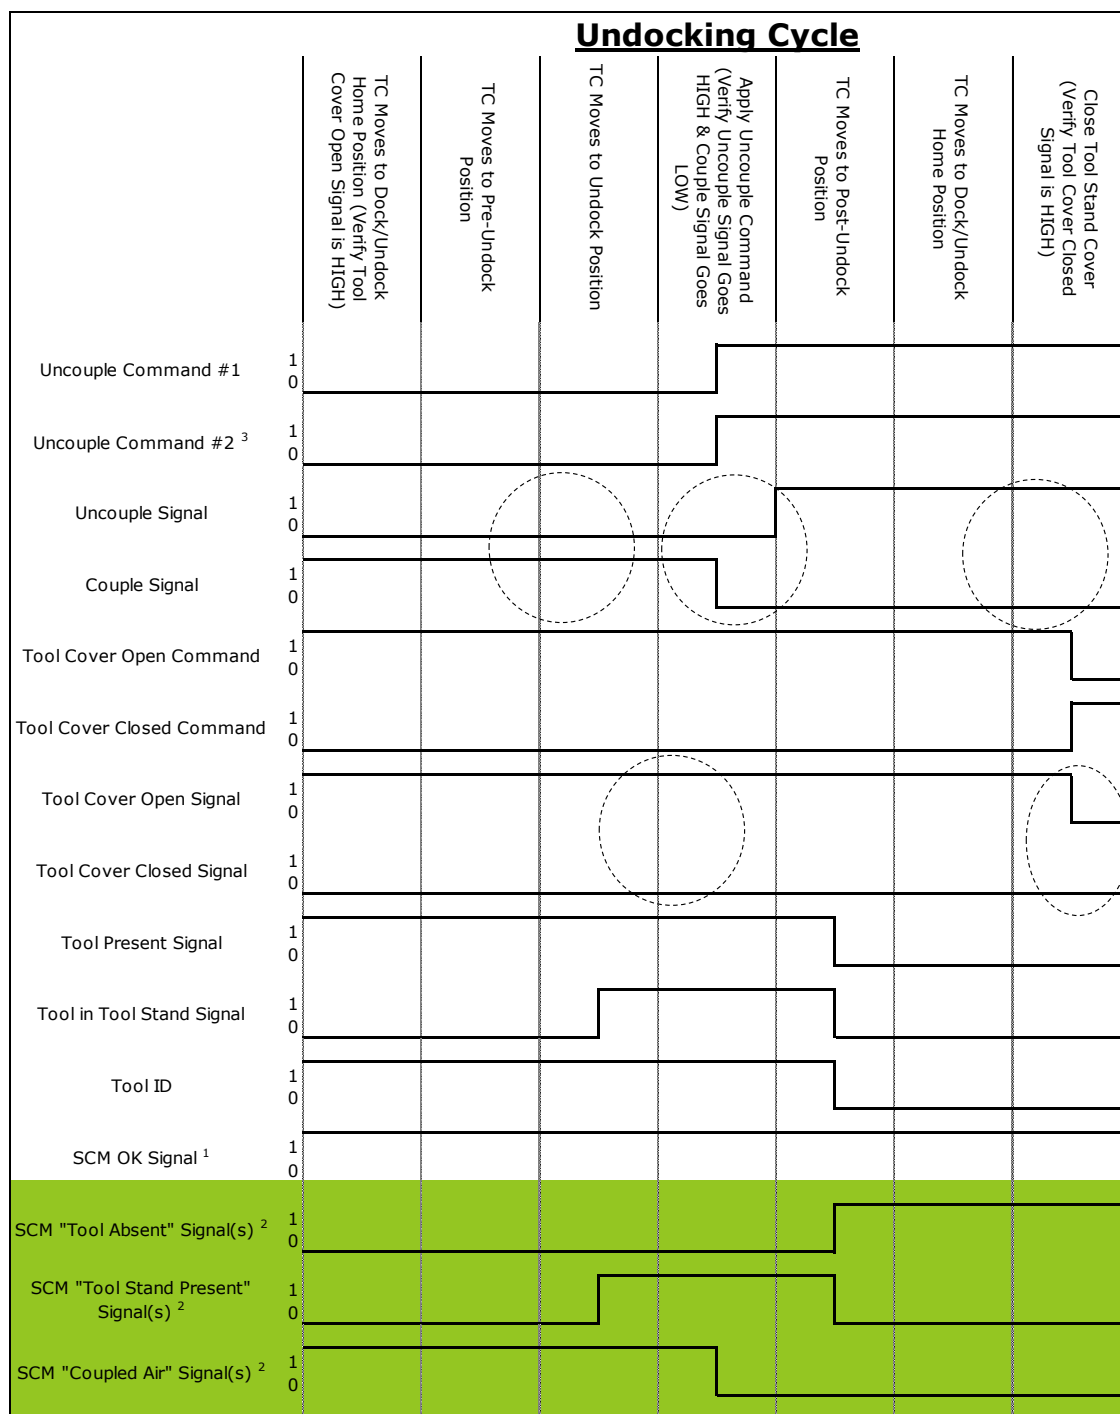

¹ Customer is required to continuously monitor the SCM OK signal, verifying that the signal remains HIGH throughout the entire operation. If SCM OK signal goes LOW, stop the robot, remove the Uncouple Commands and refer to the Troubleshooting section of the SCM User Guide.

² Signals (dual channel) are only available via LED's on ARI's Safety Control Module (SCM). Not available for monitoring by the robot controller.

³ Second Uncouple Command is required when using ARI's Safety Control Module (SCM) and should be applied simultaneously with the first Uncouple Command.

- Verify the status of all signals before proceeding to the next step.

- Input/Output HIGH = 1, LOW = 0

- Dotted circles indicate a intermediate state of an actuating cylinder when neither "Open" or "Close" signal is present.

Figure 6.4-2. Sequence of Operations Diagram – Undocking Cycle

7 TROUBLESHOOTING

7.1 TROUBLESHOOTING GUIDE

Table 7.1-1. Troubleshooting Guide

Symptom	Possible Cause	Resolution
Tool Changer Will Not Couple	Tool Changer not within required distance for coupling (<1mm)	Adjust Robot program to move within the required distance (<1mm)
	Electrical connection to the actuation valve has been lost (only if using double-acting solenoid)	Verify all connections are in place and that valve is not damaged and operating correctly
Tool Changer Will Not Uncouple	Air supply to the Tool Changer has been lost	Verify all air connections are in place and air is being supplied to the Robot cell
	Electrical connection to the actuation valve has been lost	Verify all connections are in place and that valve is not damaged and operating correctly
	Tool is not in Tool Stand	Verify the tool is supported in the tool stand and that the Tool Stand Present signal is activated
	Spring Failure	Replace piston spring
Tool Changer Couples, But No Coupled Signal is Being Received	Coupled sensing has failed	Replace sensor puck (See Section 10.1.2)
	Cable/Connections supplying signal failed	Inspect cables/connections and replace if necessary
Tool Changer Uncouples, But No Uncoupled Signal is Being Received	Uncoupled sensing has failed	Replace sensor puck (See Section 10.1.2)
	Cable/Connections supplying signal failed	Inspect cables/connections and replace if necessary


7.2 TECHNICAL SUPPORT

If you require assistance, contact APPLIED ROBOTICS Technical Support Department at:

Phone: +1 518 384 1000
E-mail: techsupport@appliedrobotics.com

7.3 TROUBLESHOOTING FAULT TREE

The fault tree provides guidance for troubleshooting a Tool Changer Couple/Uncouple signal fault.

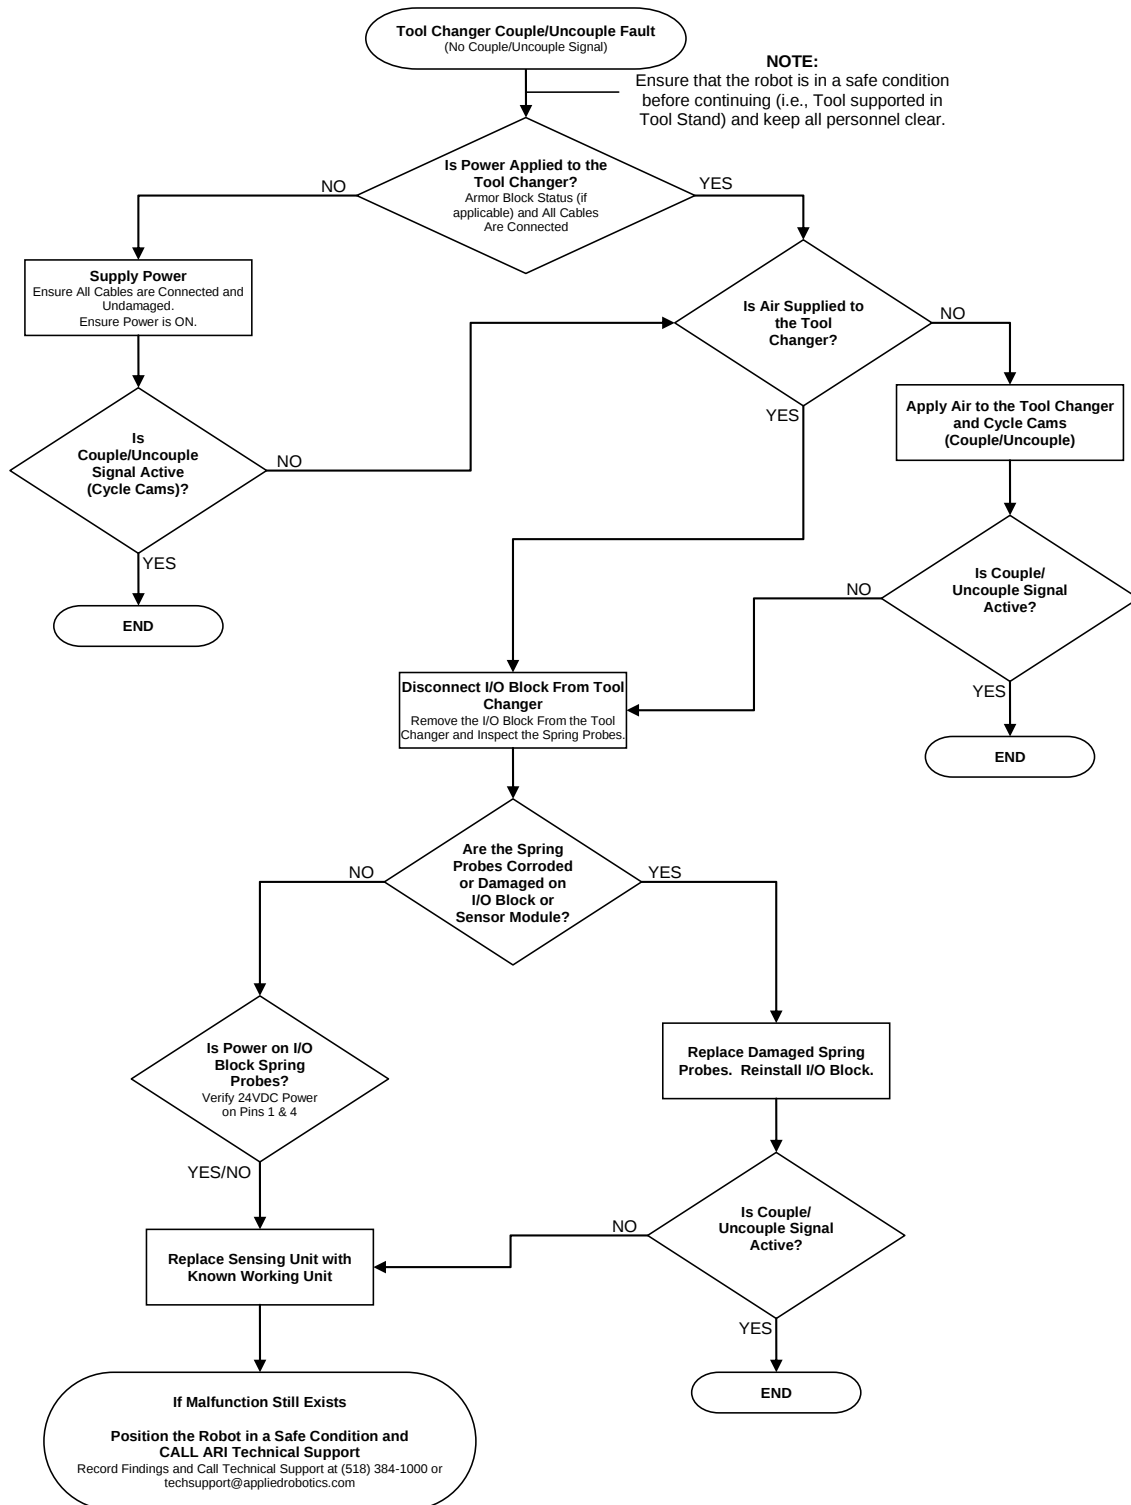

7.4 MANUAL UNCOUPLE

A feature has been designed into the E125LP Tool Changer that allows the system to be manually uncoupled in the event that damage occurs that prevents the system from uncoupling under normal means.



WARNING

ENSURE THAT THE ATTACHED TOOLING IS SAFELY SUPPORTED, PREFERABLY IN ITS TOOL STAND.

The following steps must be followed to ensure that the E125LP Tool Changer is manually uncoupled in a safe manner:

1. Ensure that the attached tooling is safely supported, preferably in its tool stand, so that no damage or personal injury occurs when the tool is released.
1. Ensure that all unnecessary personnel are clear of the tooling before going further in this procedure.
2. Shut off the air supply to the actuating cylinder. The cylinder must not be pressurized for this operation to be performed successfully.
3. Insert a 6mm OD x 20mm long shaft followed by a M8x40mm long socket head cap screw in the hole as shown in Figure 7.4-1. This requires any tool side modules to be removed.
4. Drive the M8 screw in until the cams are fully retracted. This action will allow the tool changer to uncouple.

NOTICE

WHEN AIR SUPPLY IS OFF, THE COUPLE/UNCOUPLE SIGNALS WILL BE LOST DUE TO THE LACK OF AIR. ONLY MOVE THE ROBOT AFTER THE CAMS HAVE BEEN FULLY RETRACTED.

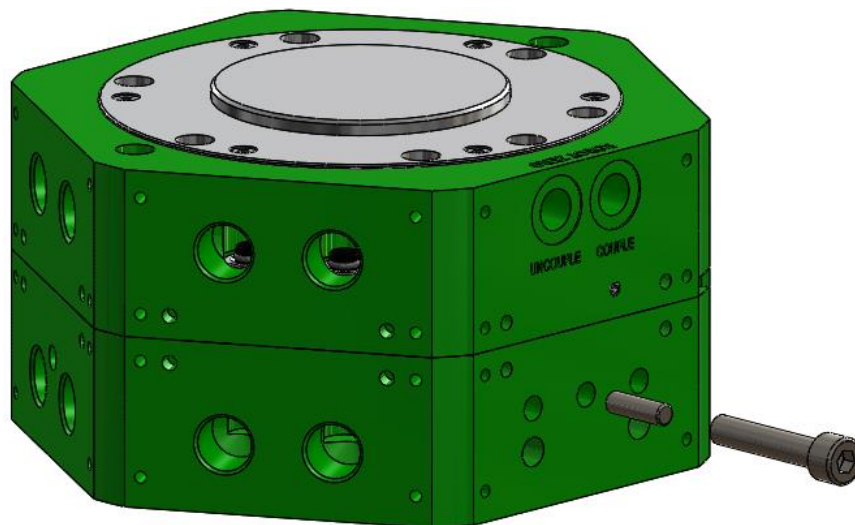


Figure 7.4-1. Manual Uncouple Feature

8 MAINTENANCE

NOTICE

FAILURE TO FOLLOW THE MAINTENANCE SCHEDULE DESCRIBED IN THIS SECTION COULD ALTER OR VOID THE WARRANTY PROVIDED BY APPLIED ROBOTICS, INC.

The following table provides a schedule for preventive maintenance to be performed for the Epsilon Tool Changer.

Table 8-1. Preventive Maintenance Schedule

		Frequency of Maintenance			
		Every 2 Weeks	250,000 Cycles	500,000 Cycles	750,000 Cycles
Robot Side	Visual Checks (Section 8.1.2.1)	Visual Checks (Section 8.1.2.1)			1,000,000 Cycles
Tool Side	Visual Checks (Section 8.1.2.2)	Lubrication (Section 8.1.1.1) & Visual Checks (Section 8.1.2.2)			Visual Checks (Section 8.1.2.1) & Replace Locating Pins if Worn or Damaged & Inspect Piston Spring Functionality and Replace if Necessary ¹ & Lubrication (Section 8.1.1.1) & Visual Checks (Section 8.1.2.2) & Replace Locating Bushings if Worn or Damaged
		Frequency of Maintenance			
		Every 2 Weeks	1,250,000 Cycles	1,500,000 Cycles	1,750,000 Cycles
Robot Side	Visual Checks (Section 8.1.2.1)	Visual Checks (Section 8.1.2.1)			2,000,000 Cycles ²
Tool Side	Visual Checks (Section 8.1.2.2)	Lubrication (Section 8.1.1.1) & Visual Checks (Section 8.1.2.2)			Visual Checks (Section 8.1.2.1) & Replace Locating Pins if Worn or Damaged & Inspect Piston Spring Functionality and Replace if Necessary & Inspect Dock and Undock Positions to Ensure Proper Alignment with Each Tool Side & Lubrication (Section 8.1.1.1) & Visual Checks (Section 8.1.2.2) & Replace Locating Bushings if Worn or Damaged

¹ To test Piston Spring functionality, retract the cams (Figure 6.1-2) using air pressure, then completely vent off all air and ensure that the cams return to the extended position (Figure 6.1-1).

² Continue Lubrication and Visual Checks every 250,000 Cycles. Continue inspecting for wear or damaged components every 500,000 cycles.

8.1 PREVENTIVE MAINTENANCE

8.1.1 Lubrication

Proper lubrication of wear components is essential to maintaining the performance and prolonging the operational life of the E125LP Tool Changer. Failure to apply proper lubrication could result in increased wear and shorten the life expectancy of the Tool Changer. The following lubricants are approved for use on the E125LP Tool Changer.

Table 8.1.1-1. Approved Lubricants

Lubricant	ARI Part #	Manufacturer	Manufacturer's Part #
Lube-A-Cyl	51120	Parker	0766130000
White Lithium Grease	91504-P1037	Century Lubricants	ST-80
Staburags NBU 30 Grease	0903-P11N	Klüber	NBU 30
White EP Bearing Grease	96503-P1018	Dow Corning	White EP Bearing Grease

8.1.1.1 Tool Adapter

1. Clean the inner surface of the tool housing, the locating/alignment bushings, and the latching surfaces to ensure all existing grease, dirt, and debris is removed.
2. Apply a liberal coating of white lithium grease to the latching surfaces and to the inner surface of the locating/alignment bushings, as shown in Figure 8.1.1.1-1 with the surfaces highlighted blue.
3. Apply a thin coating of Lub-A-Cyl to the O-ring surfaces on the valve fittings as shown in Figure 8.1.1.1-1 with the surfaces highlighted red.

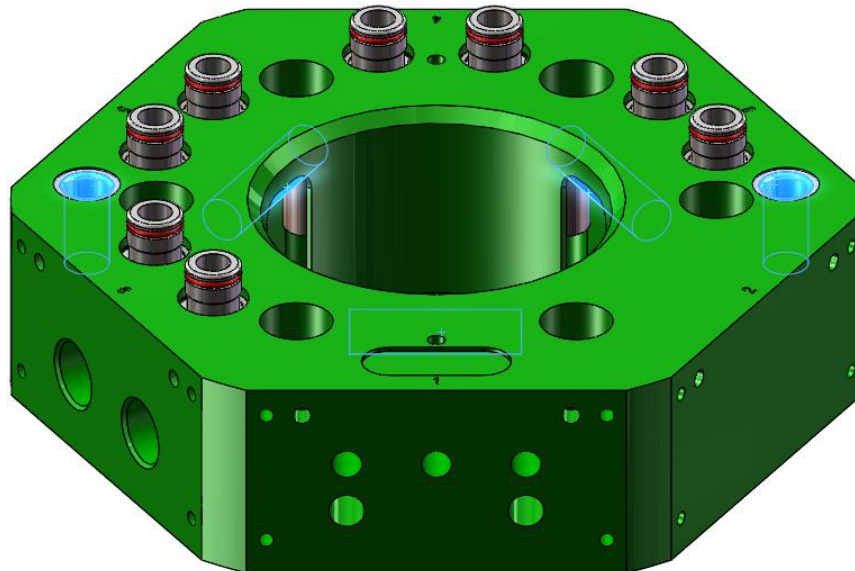


Figure 8.1.1.1-1. ET125LP Tool Side Lubrication

8.1.2 Visual Checks

Periodic visual checks of the E125LP Tool Changer provide early detection of breakage or wearing components.

8.1.2.1 Robot Side

1. Inspect the latching cams and locating/alignment pins for rust, breakage, or wear³.
2. Inspect the Robot Side mating surface for raised material⁴ or dings that could prevent proper mating to the Tool Side.
3. Uncouple the Robot Side from the Tool Side and cycle the coupling mechanism several times to verify the latching cams are operating smoothly. The cycling of the coupling mechanism will also ensure that the operating cylinder remains properly lubricated.
4. Inspect the poppet valves for damage and depress them to check for smooth operation.

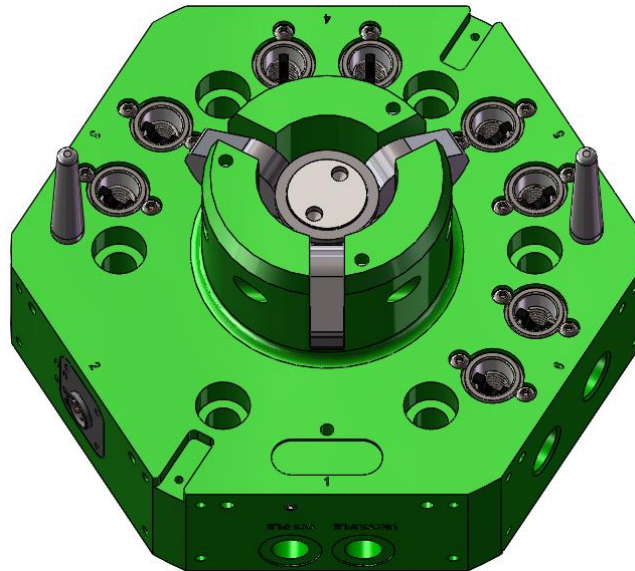


Figure 8.1.2.1-1. E125LP Robot Side Visual Inspection

³ If excessive wear is found on the locating/alignment pins, latching cams, or Robot Side mating surface, review the docking and undocking sequence of the robot program and adjust if necessary.

⁴ All raised material should be filed smooth.

8.1.2.2 Tool Side

1. The locating/alignment bushings and the latching surfaces should be inspected for proper lubrication as defined in Section 8.1.1.1.
2. Inspect the latching surfaces and locating/alignment bushings for rust, breakage, or wear⁵.
3. Inspect the Tool Side mating surface for raised material⁶ or dings that could prevent proper mating to the Robot Side.
4. Inspect the air valve fittings for damaged O-rings.

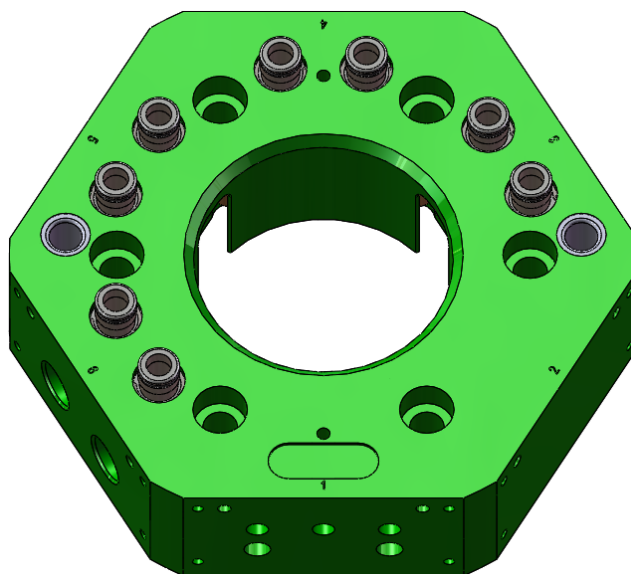


Figure 8.1.2.2-1. ET125LP Tool Side Visual Inspection

8.1.3 Checking Wear of the Cam Locking Mechanism

In the unlikely event that the Epsilon Tool Changer begins to demonstrate signs of wear in the cam locking mechanism, causing the connection between the Robot Side and Tool Side to lose repeatability and precision, the following can be used to check the wear of the locking mechanism.

1. Remove the Robot Side from the Robot/Manipulator.
2. Remove the Tool Side from the Tool.
3. With the sides positioned on a workbench, inspect the mating surfaces of the Robot (Figure 8.1.3-1) and Tool (Figure 8.1.3-2) Sides for any raised material. If any raised material is found, file it smooth before proceeding.

⁵ If excessive wear is found on the locating/alignment bushings, latching surfaces, or Tool Side mating surface, review the docking and undocking sequence of the robot program and adjust if necessary.

⁶ All raised material should be filed smooth.

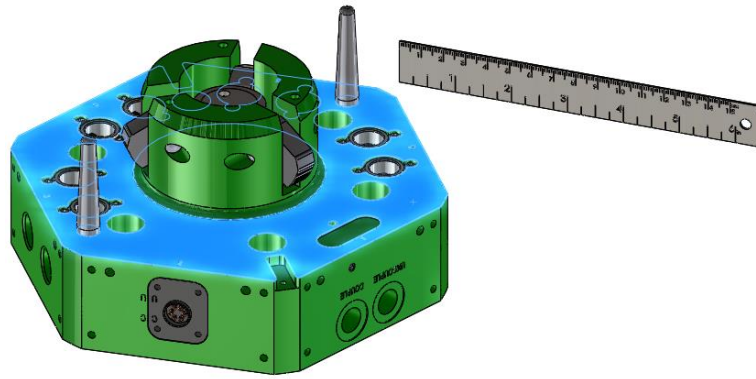


Figure 8.1.3-1. Robot Side – Raised Material Inspection

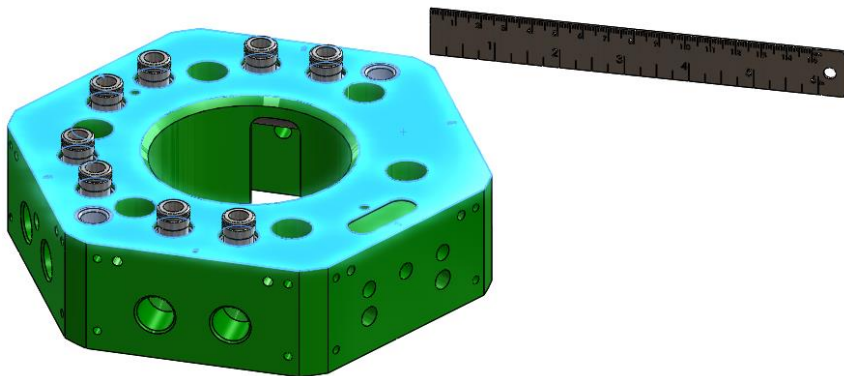


Figure 8.1.3-2. Tool Side – Raised Material Inspection

4. Connect the couple and uncouple actuation port lines (Figure 5.3-1) so that the locking mechanism can be manually actuated.
5. With the cams retracted (Figure 6.1-2), position the Robot Side and Tool Side so that they can be coupled together.
6. Place a 0.05mm piece of shim stock at the locations shown in Figure 8.1.3-3, one location at a time.
7. Actuate the cams to couple the Robot Side to the Tool Side (Figure 6.1-1).
8. With a slight tug, check if the piece of shim stock is securely clamped between the Robot Side and Tool Side interface surfaces.
9. Uncouple the Robot Side from the Tool Side.
10. Repeat Steps 6 through 9 for each location shown in Figure 8.1.3-3.

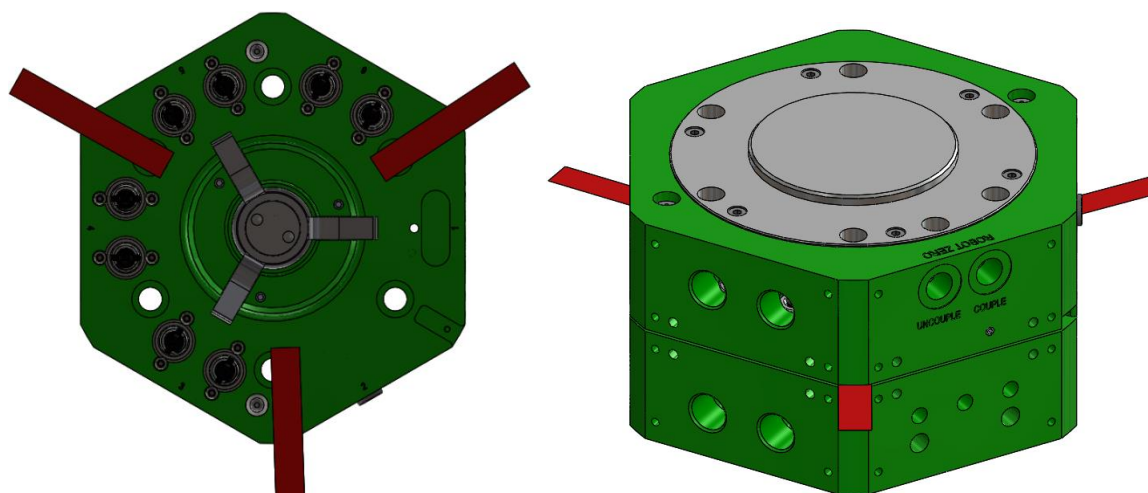


Figure 8.1.3-3. Shim Test of the Cam Locking Mechanism

If the piece of shim stock is able to be pulled free from the coupling interface while the cams are actuated (Figure 6.1-1), record the serial number of the Robot Side and Tool Side and contact APPLIED ROBOTICS Technical Support Department at +1 518 384 1000 or techsupport@appliedrobotics.com

9 SPARE PARTS

The spare parts listed below are recommended to be maintained in stock for the life of the Tool Changer. These quantities are based on a single unit. If higher quantities are purchased, please contact the Technical Support Department at +1 518 384 1000 or techsupport@appliedrobotics.com to determine the quantity of spares recommended for the size of your installation.

Table 9-1. Robot Side Spare Parts

ROBOT SIDE		
Description	Part Number	Quantity
PIN, LOCATING MXC160	0104-B71N	2
SUBASSY, PNP MODULE ER125LP	1600-D06A	1
SUBASSY, AIR CHECK O3.1	99502-C1059A	8

Table 9-2. Tool Side Spare Parts

TOOL SIDE		
Description	Part Number	Quantity
DOWEL, M10 X 40 (HARD STL) m6	49382	3
BUSHING, 15MM X 10MM I.D.	49431	2
FITTING, PNEUMATIC O3	0002-B04A	8

10 SPARE PARTS REPLACEMENT

The following procedures explain the correct method for removing and replacing the recommended spare parts listed in Section 9 of this manual.

10.1 ROBOT SIDE

10.1.1 Locating/Alignment Pins

1. Remove the Robot Side from the Robot/Manipulator.
2. Remove the M6 socket head cap screw (49185) using a 5mm Allen wrench.
3. Remove round Locating Pin(s) (0104-B71N). Locating/Alignment Pins may need to be punched out.
4. Place new Locating Pin into the appropriate mounting hole (Figure 10.1.1-1).
5. Apply Loctite 242, or equivalent, to M6 socket head cap screws removed in Step 2 (Clean threads before applying thread locker) and thread it into the Locating Pin from the top side of the Robot Side Housing. Tighten until Locating Pins are no longer pulled into holes and do not rotate.

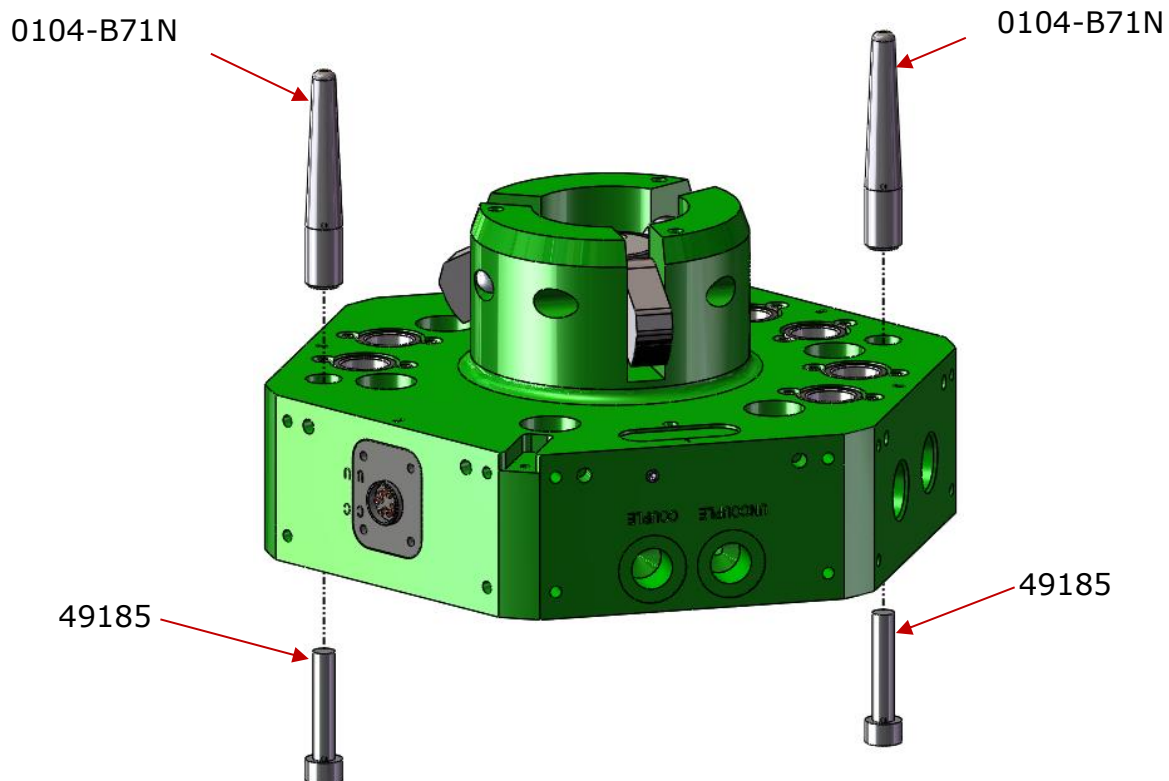


Figure 10.1.1-1. Locating/Alignment Pin Replacement

10.1.2 Couple/Uncouple Sensing Module

1. Remove the module on Side 2.
2. Loosen the captivated socket head cap screws holding the Sensing Module using a 2.5mm Allen wrench.
3. Remove the Sensing Module (1600-D06A or 1700035A) and either discard or send to APPLIED ROBOTICS for repair.
4. Replace unit with another Sensing Module.
5. Ensure that the cavity in the Robot Side Housing holding the Sensing Module is free of all foreign objects.
6. Ensure that the two (2) O-rings (97501-P1084) for the proximity sensors, supplied with the Sensing Module, are properly positioned.
7. Apply Loctite 242, or equivalent, to the threads of the captivated socket head cap screws before installing.
8. Install the new Sensing Module using the captivated socket head cap screws.
9. Reinstall module removed from Side 2 in Step 1.
10. Prior to coupling the Tool Changer, cycle the actuating cylinder for the Robot Side several times to ensure that the sensors are working properly and the correct inputs are being received by the robot controller.

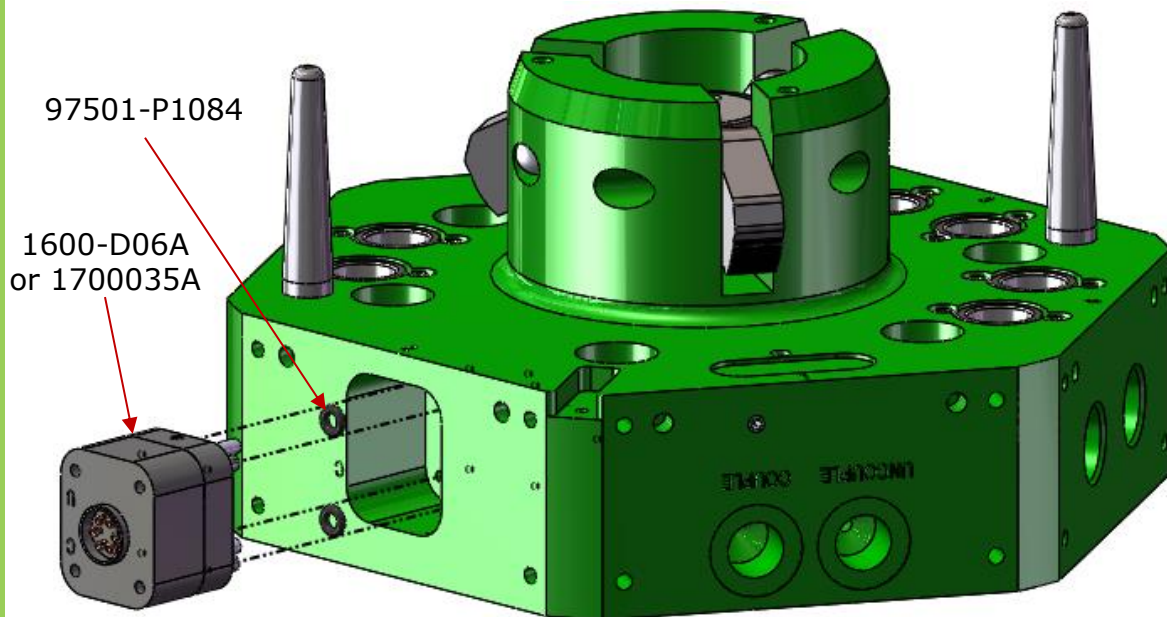


Figure 10.1.2-1. Couple/Uncouple Sensing Module Replacement

NOTICE

MAKING CONNECTIONS WHILE UNDER POWER COULD RESULT IN DAMAGE TO THE EQUIPMENT. TO AVOID DAMAGING EQUIPMENT, ENSURE THAT ALL CABLES ARE CONNECTED BEFORE SUPPLYING POWER TO THE EQUIPMENT.

10.1.3 Poppet Valves

1. Remove the M3 button head socket cap screws (88503-P1084) that hold the Fitting (99502-C1059A) in the housing, using a 2mm Allen wrench.
2. Remove Fitting (99502-C1059A) and discard.
3. Apply a thin layer of Lub-A-Cyl to all O-rings.
4. Press the new Fitting into the port hole and reinstall the M3 screws removed in Step 1. Apply Loctite 242, or equivalent, to M3 socket head cap screws removed in Step 2 (Clean threads before applying thread locker) and tighten.

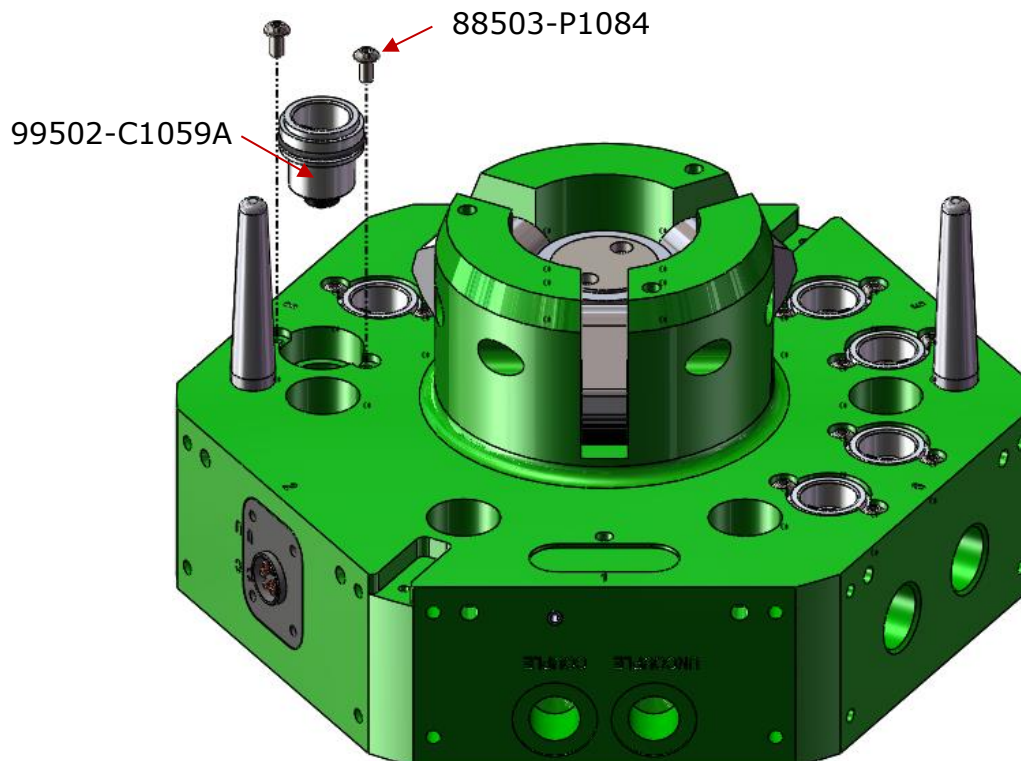


Figure 10.1.3-1. Poppet Valve Removal

10.2 TOOL SIDE

10.2.1 Locating Bushing

1. Remove the Tool Side from the Tool.
2. Press out the Locating Bushings (49431) from the bottom of the Tool Side Housing.
3. Press in new Locating Bushings from the top of the Tool Side Housing until it is just below the Tool Side Housing surface. Ensure that the rounded edge of the Locating Bushing faces the top surface of the Tool Side Housing.
4. Lubricate the Locating Bushing per Section 8.1.1.1.

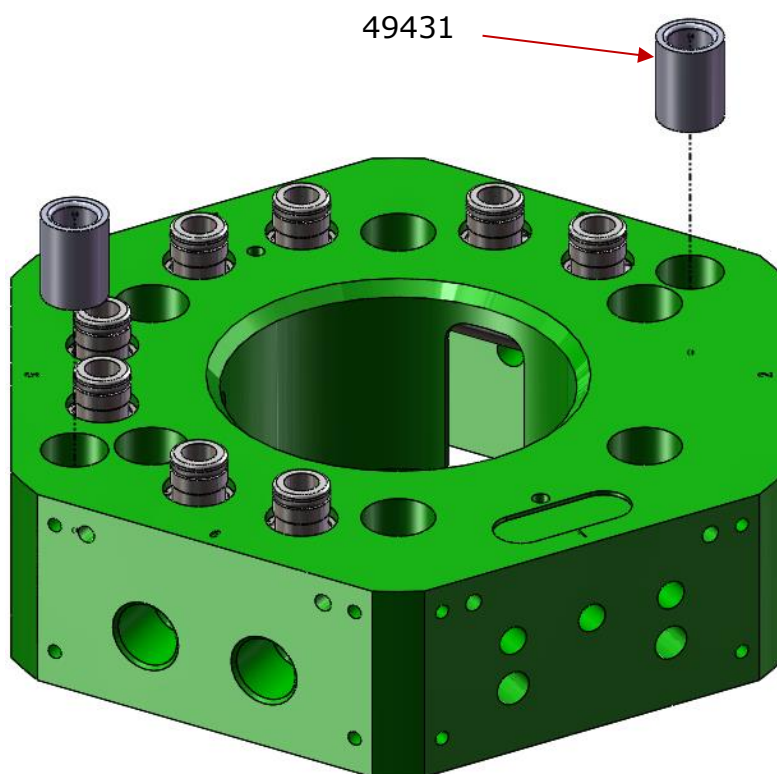


Figure 10.2.1-1. Locating Bushing Replacement

10.2.2 Air Valve Fitting

1. Remove the retaining ring (89504-P1033) and pull out the remainder of the valve fitting assembly (0002-B04A).
2. Discard old valve fitting assembly and replace with a new fitting assembly. Note that the retaining ring (89504-P1033) is included in the valve fitting assembly (0002-B04A).
3. Apply a thin layer of Lub-A-Cyl to all O-rings.
4. Push the valve fitting assembly into the valve fitting hole by hand until it bottoms out in the hole. Ensure the proper orientation of the valve fitting as shown in Figure 10.2.2-1.
5. Install the retaining ring to secure the fitting.

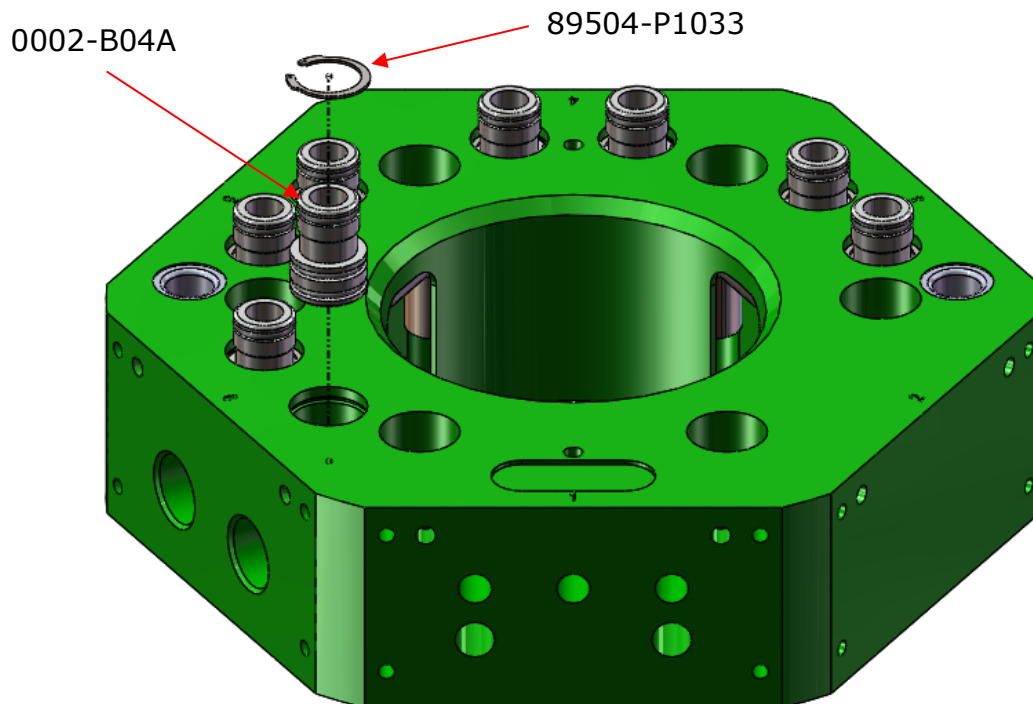


Figure 10.2.2-1. Air Valve Fitting Replacement

11 INFORMATIONAL DOCUMENTS

The drawings in this section can assist with installation, use, and identification of replacement parts for the Epsilon Tool Changer. Please contact **APPLIED ROBOTICS Technical Support** if you have any questions.

DECLARATIONS	
Declaration of Incorporation for Partly Completed Machinery	

DRAWINGS	
DRAWING NUMBER	DESCRIPTION
1604-D93A	ER125LP-N/A-080-N-0-C0000
1600-D02A	ER125LP-PNP-080-N-0-C0000
1700072A	ER125LP-PM12-080-N-0-C0000
1600-D09A	ET125LP-000-N-C0000
1800868A	ER125LP-N/A-080-N-0-PP-C0000
1800869A	ER125LP-PNP-080-N-0-PP-C0000
1800870A	ER125LP-PM12-080-N-0-PP-C0000
1800871A	ET125LP-000-N-PP-C0000

Declaration of Incorporation of Partly Completed Machinery (Annex II 1 B of EC Machinery Directive 2006/42/EC)

Description and identification of the partly completed machinery:

XChange – EPSILON Series Tool Changers & Utility Modules

Fulfills the following function:

Allows industrial robots (and other automated equipment) to automatically change their end of arm tooling under programmed control without the need of human intervention. These products are intended to be incorporated into machinery supplied by others.

The following essential requirements of EC Machinery Directive 2006/42/EC (Annex I) have been applied and fulfilled:

Section 1.1.2.	Principles of safety integration
Section 1.1.3.	Materials and products
Section 1.1.5.	Design of machinery to facilitate its handling
Section 1.2.1.	Safety and reliability of control systems
Section 1.2.6.	Failure of the power supply
Section 1.3.2	Risk of break-up during operation
Section 1.3.3.	Risks due to falling or ejected objects
Section 1.3.4.	Risks due to surfaces, edges or angles
Section 1.3.7.	Risks related to moving parts
Section 1.3.9.	Risks of uncontrolled movements
Section 1.5.1.	Risks due to electricity supply
Section 1.5.3.	Risks due to energy supply other than electricity (air pressure)
Section 1.5.8.	Risks due to noise
Section 1.5.10.	Risks due to non-ionizing radiation
Section 1.6.4.	Operator intervention
Section 1.7.1.	Information and warnings on the machinery
Section 1.7.2.	Warning of residual risks
Section 1.7.3.	Marking of machinery
Section 1.7.4.	Instructions.

The partly completed machinery has been designed and manufactured according to the following harmonized standards:

EN ISO 12100-1	Safety of machinery - Basic concepts, general principles for design Part 1: Basic terminology, methodology
EN ISO 12100-2	Safety of machinery - Basic concepts, general principles for design Part 2: technical principles

EN ISO 10218-2	Robots and robotic devices — Safety requirements for industrial robots — Part 2: Robot systems and integration
EN ISO 60204-1	Safety of machinery. Electrical equipment of machines. General requirements
EN 61000-6-2	Electromagnetic compatibility (EMC) - Generic standards. Immunity for industrial environments
EN 61000-6-4	Electromagnetic compatibility (EMC) - Generic standards. Emission standard for industrial environments
EN 61000-4-2	Electromagnetic compatibility (EMC). Testing and measurement techniques. Electrostatic discharge immunity test
EN 61010-1	Safety requirements for electrical equipment for measurement, control, and laboratory use -- Part 1: General requirements

The relevant technical documentation has been compiled in accordance with Annex VII, Part B of EC Machinery Directive 2006/42/EC. We undertake, in response to a reasoned request, to supply it in electronic form to the market surveillance authorities within a reasonable period.

The party authorized to compile the technical documentation is:

Giovanni Patrini, at Effecto Group SpA







The partly completed machinery must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Machinery Directive.


Stefan Casey
Vice President, Engineering

APRIL 20, 2018
Date



SIZE D	DRAWING NUMBER 1604-D93A	REV 00
------------------	------------------------------------	------------------

REVISIONS						
ZONE	REV	DESCRIPTION	DR	CHK	DATE	ECR/ESR NO.
	00	RELEASED FOR MANUFACTURING	PS	JV	06/22/2016	GPAI-AB2DP5

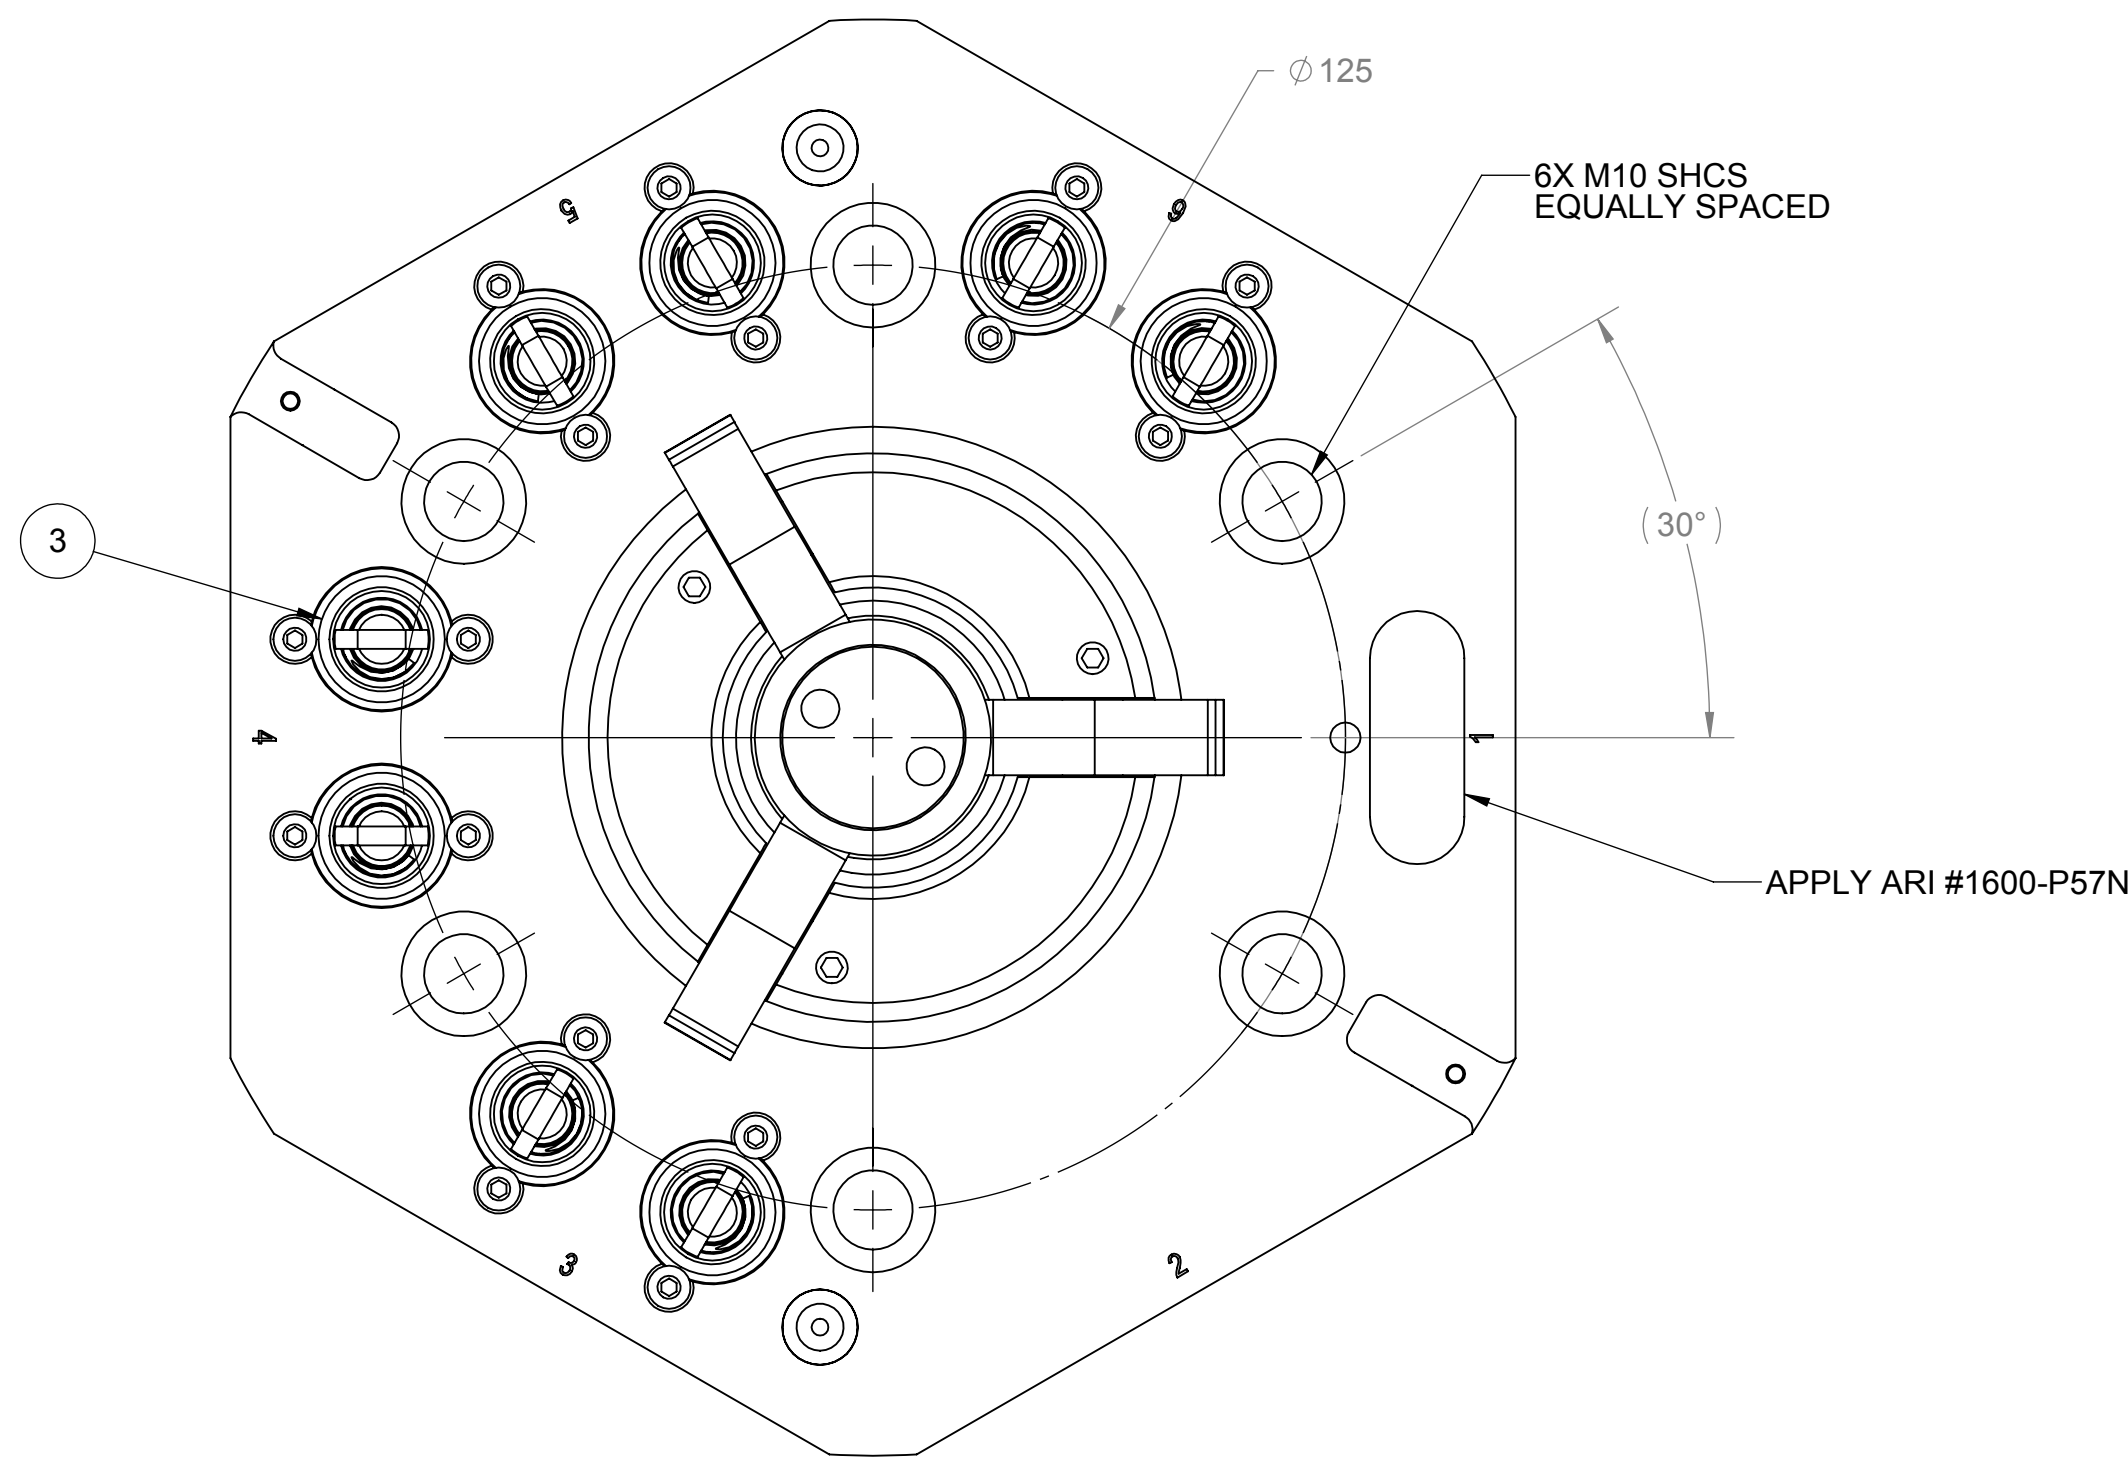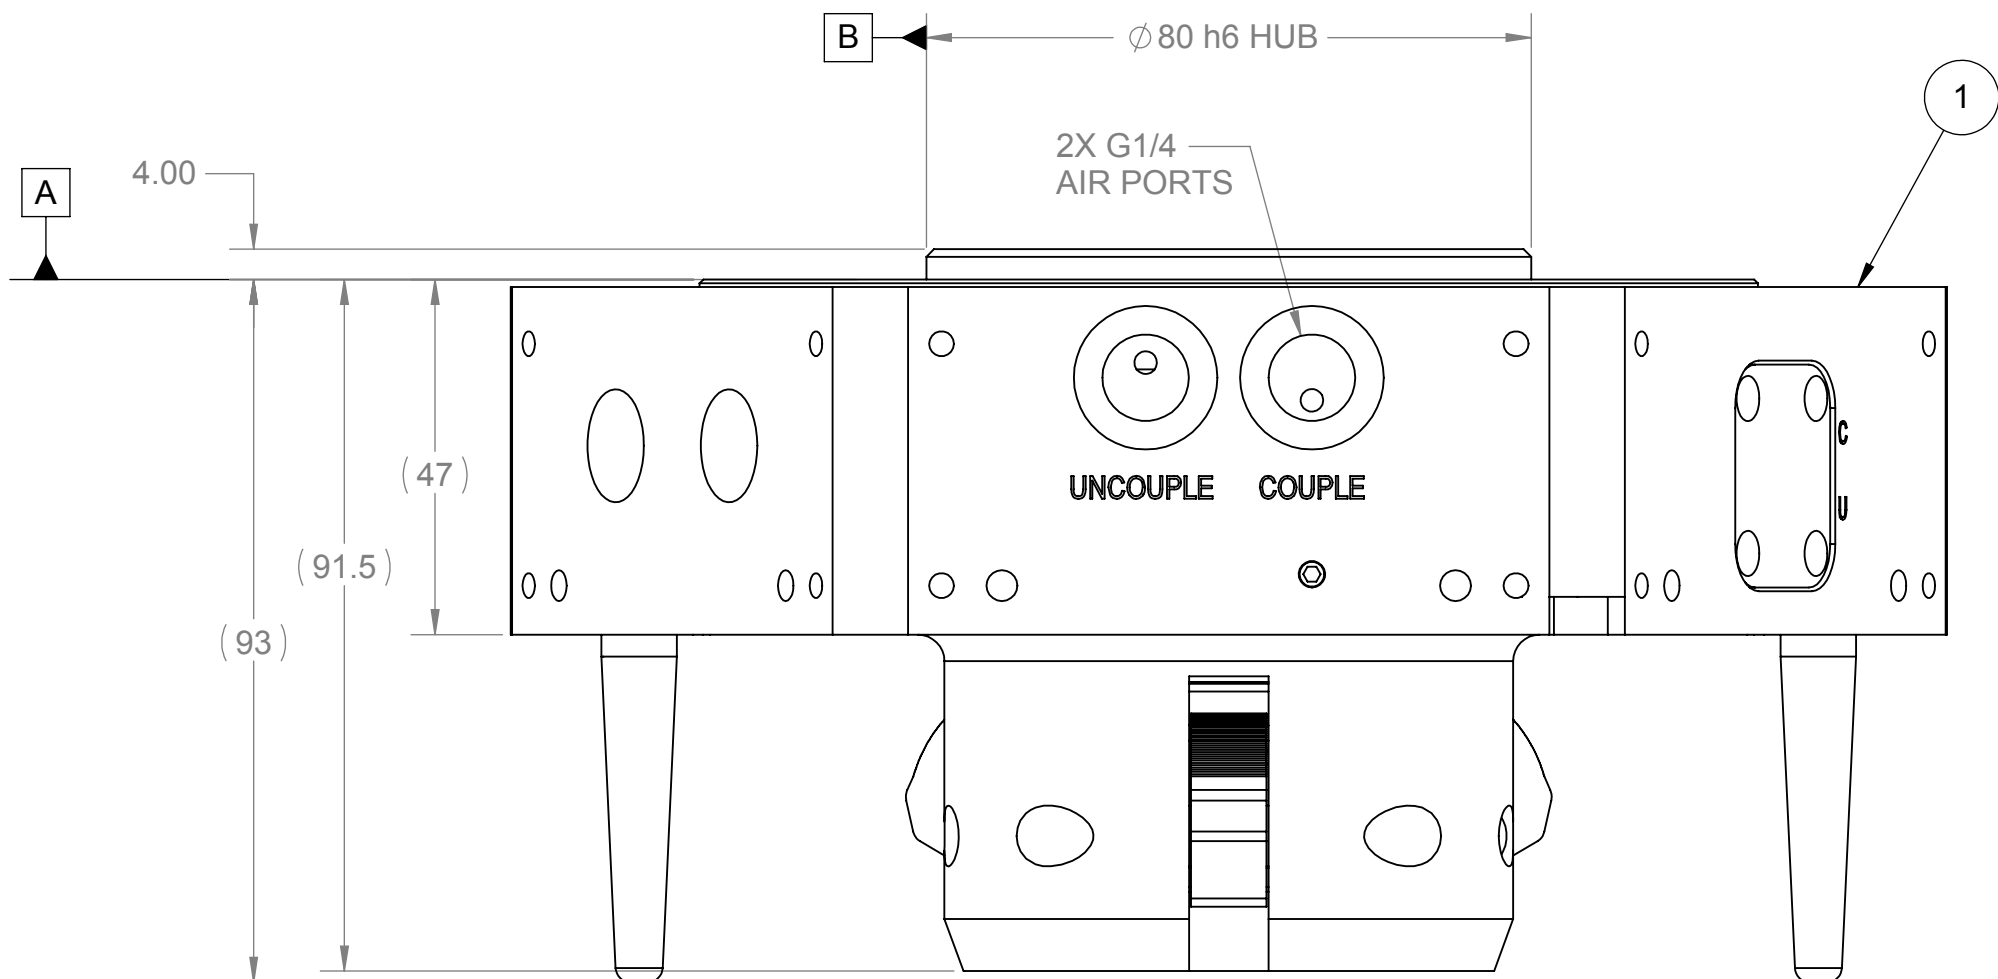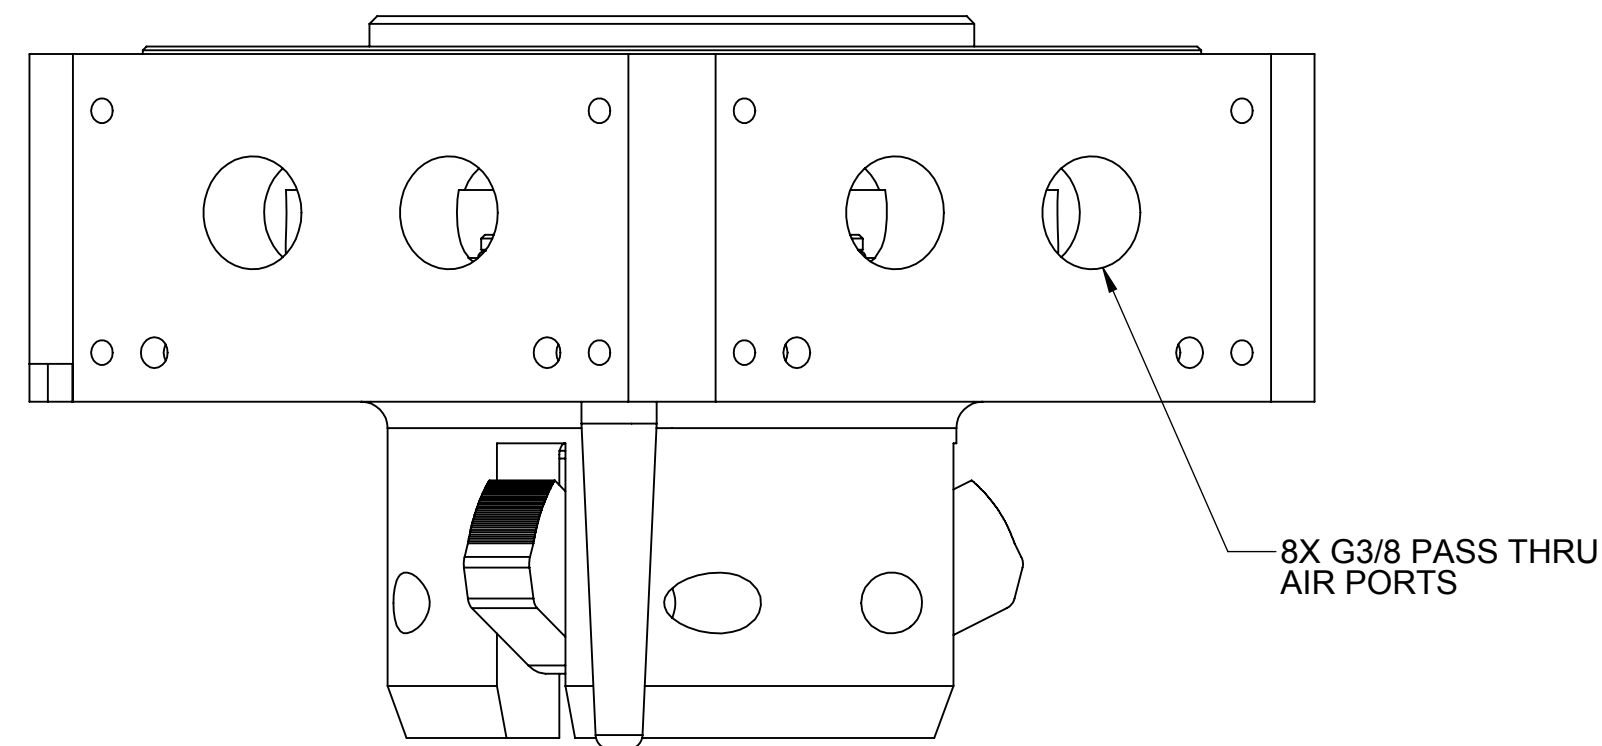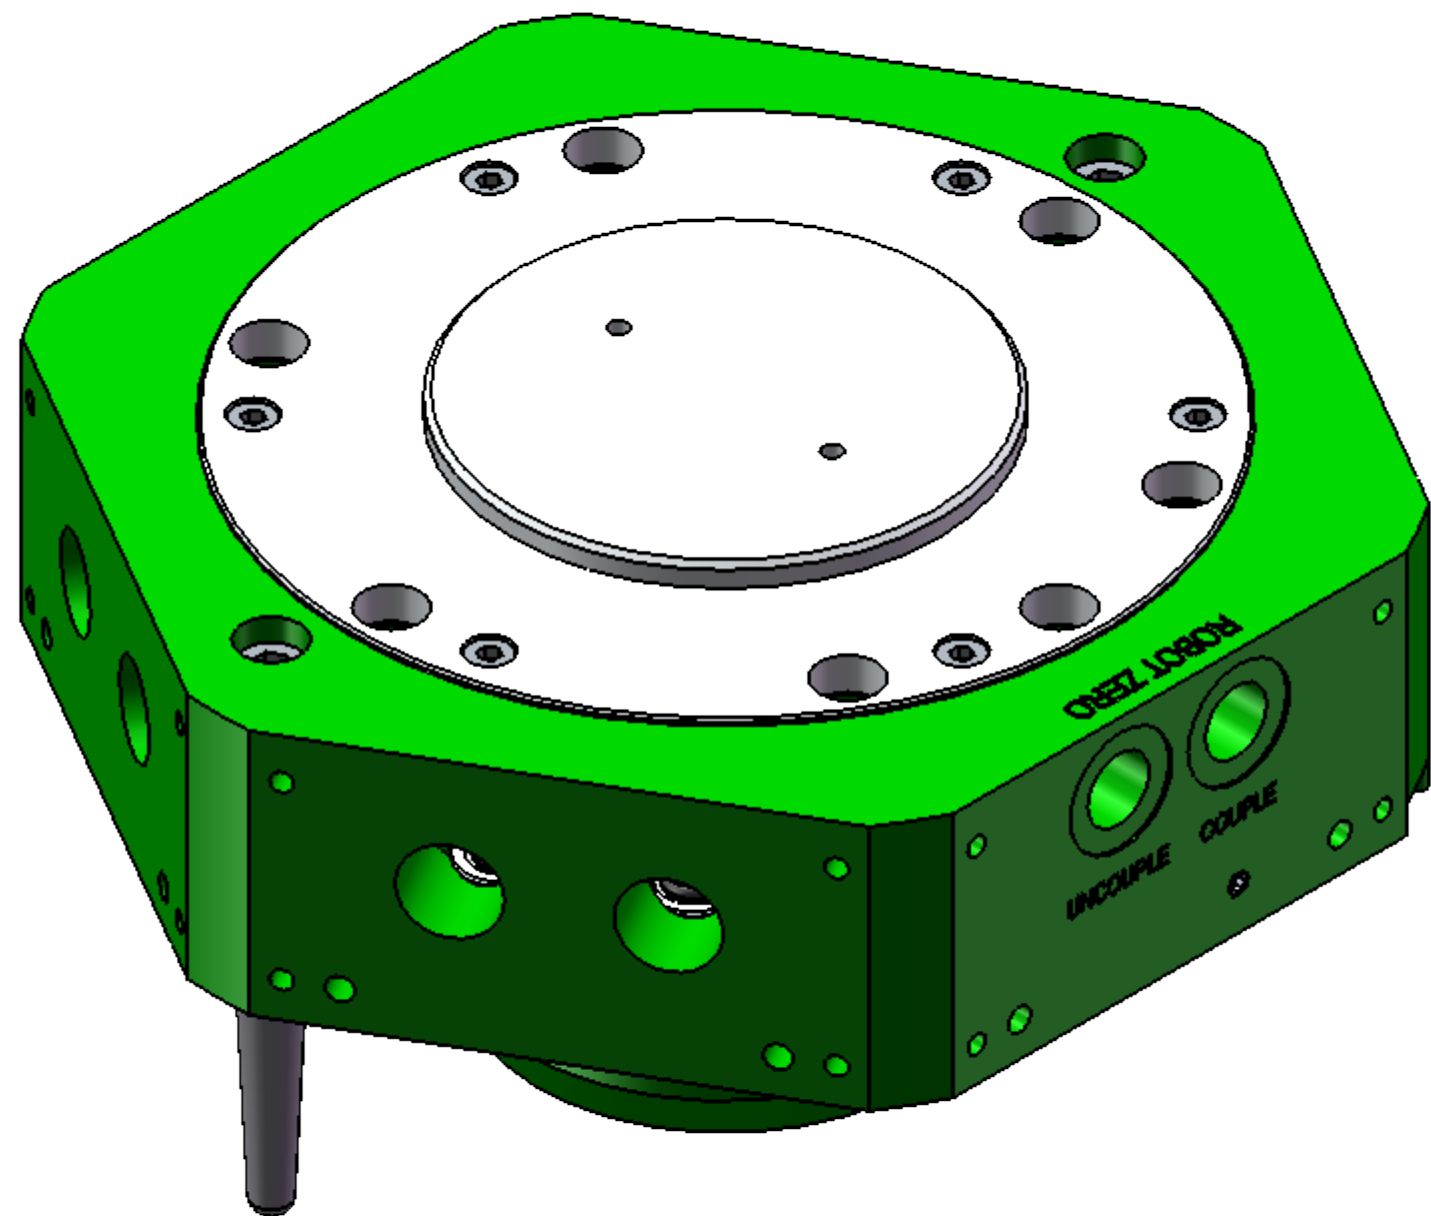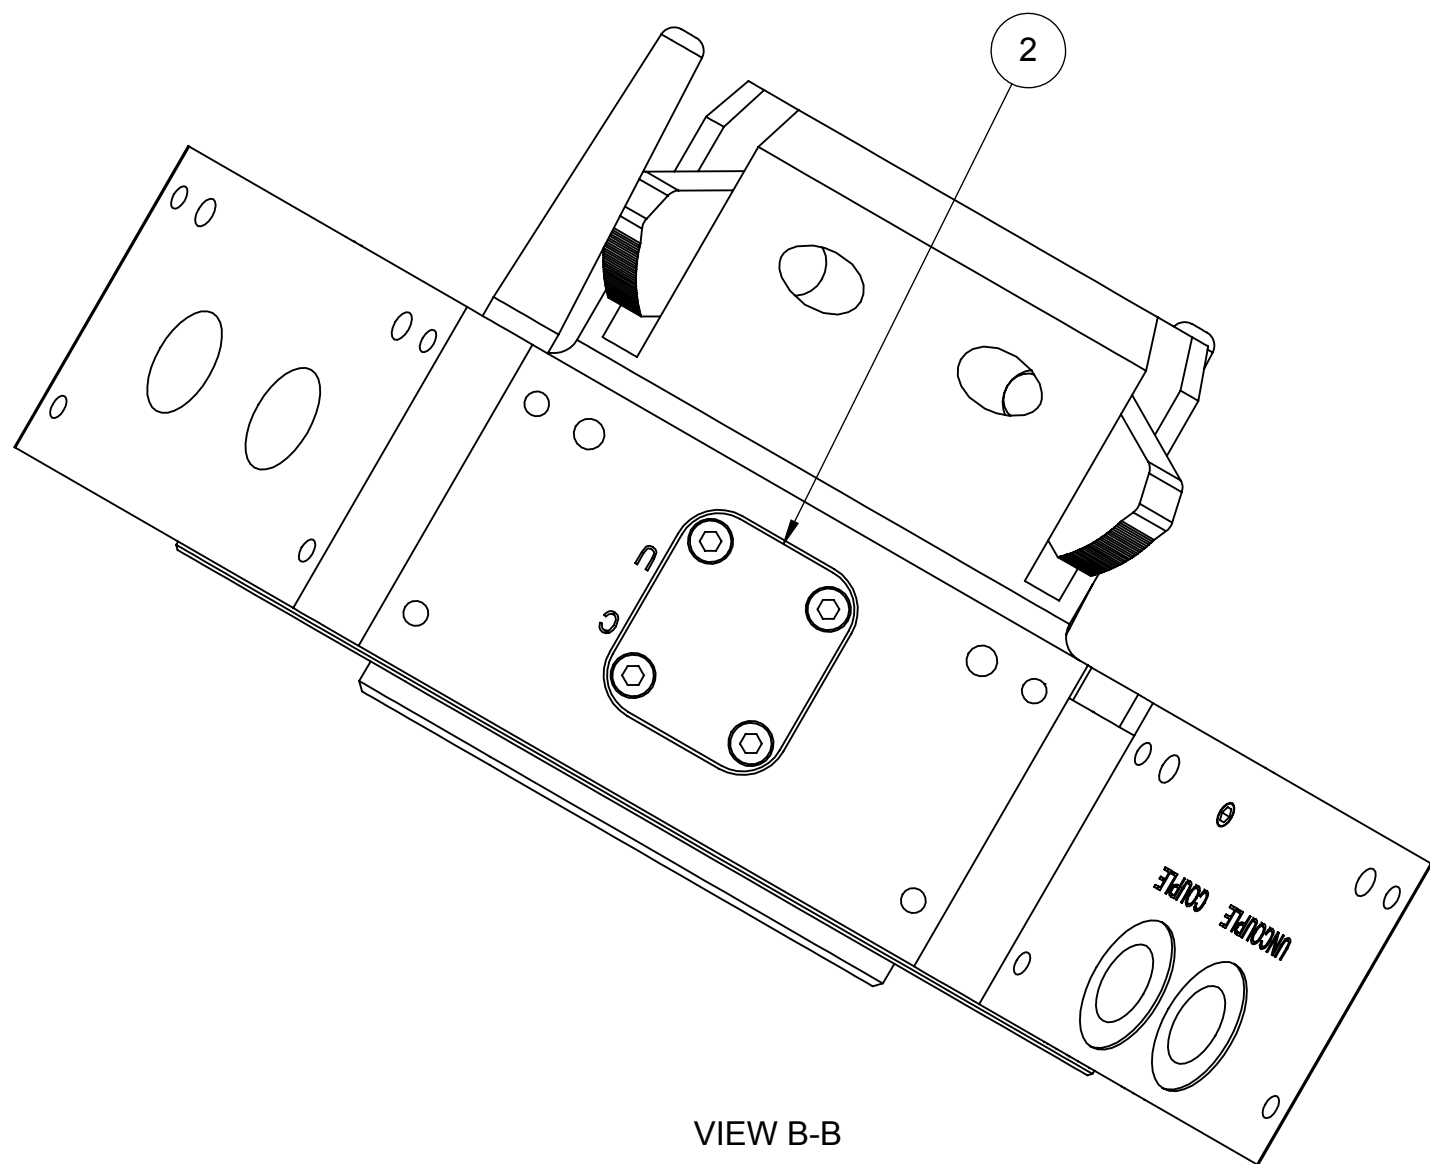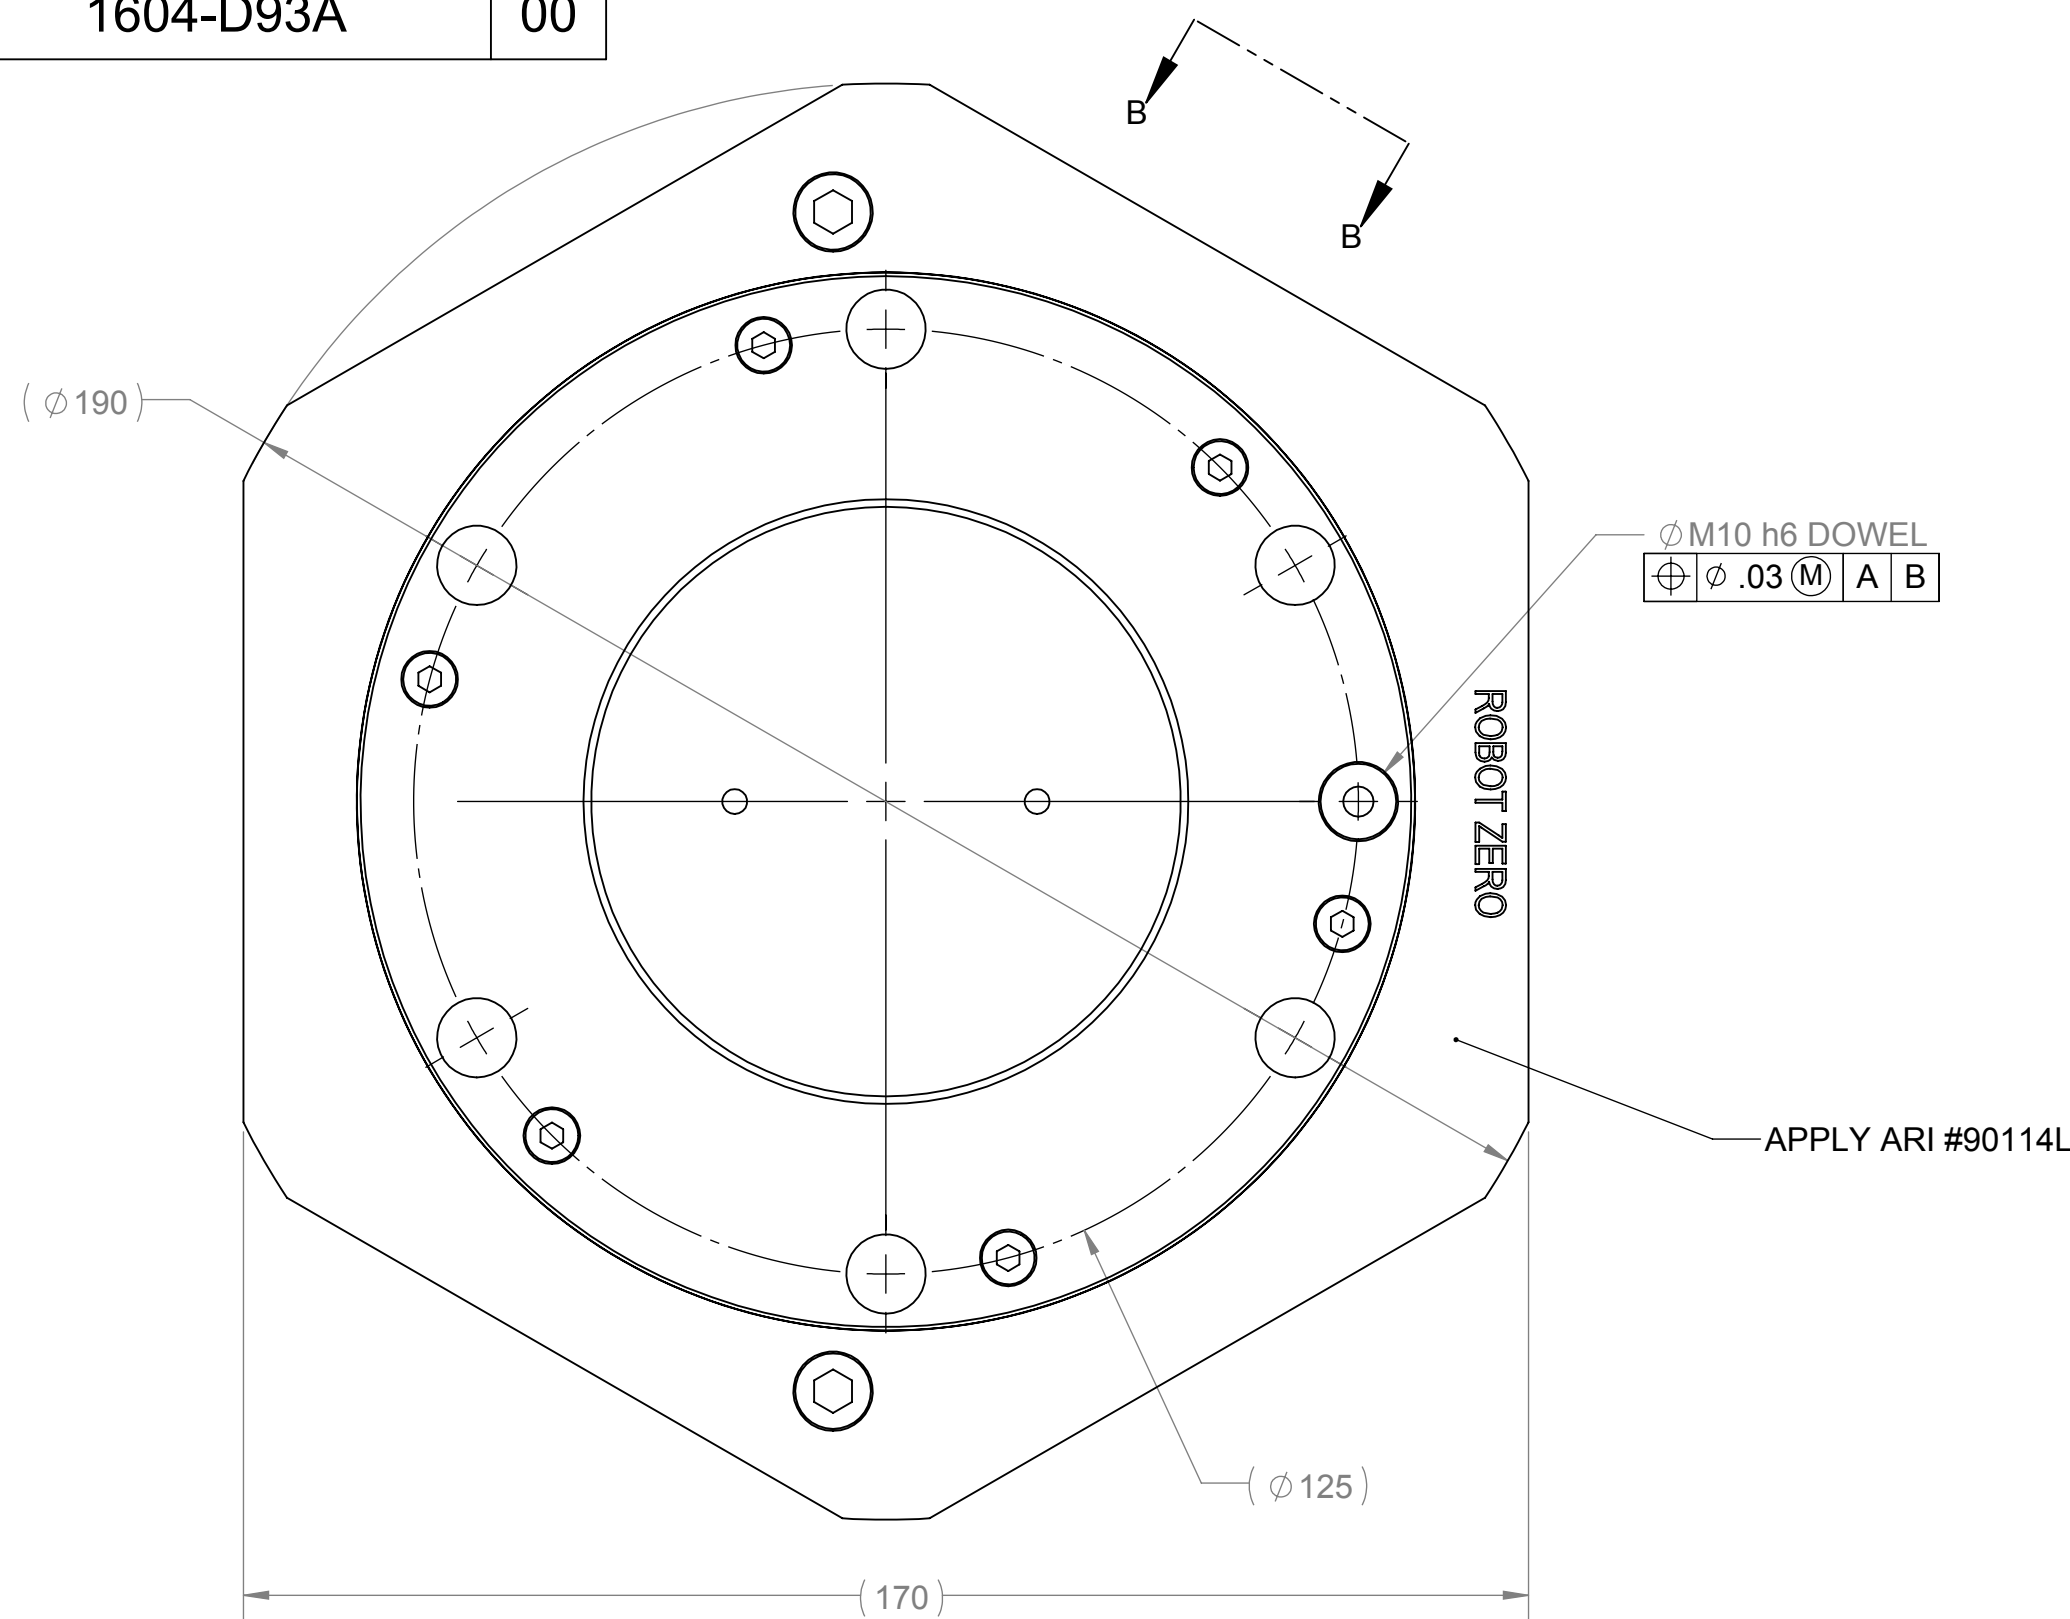


- NOTES:
1. ALL PARTS TO RECEIVE LOCTITE ARE TO BE THOROUGHLY CLEANED FROM GREASE AND OIL.
 2. ALL SURFACES OR O-RINGS THAT RECEIVE LUBE-A-CYL (51120) APPLY ONLY A THIN FILM.
 3. STOCK AS SUBASSY PLACE IN PLASTIC BAG.
 4. APPLY LITHIUM GREASE, ARI #91504-P1037.
 5. APPLY LOCTITE 222, ARI #8600S-P1020


3	8	99502-C1059A	SUBASSY, AIR CHECK O3.1 1 ASSEMBLY
2	1	1604-C94A	SUBASSY, C/UC PLUG ER125LP
1	1	1601-D29A	SUBASSY, ER125LP
ITEM NO.	QTY	PART NO.	DESCRIPTION

  THIRD ANGLE PROJECTION				METRIC UNLESS OTHERWISE SPECIFIED: UNTOLERANCED DIMS ARE BASIC: 			DR: P. SLAVINSKI CHK: J. VALLELUNGA ENG: P. SLAVINSKI MFG: C. BEST QC: M. DUDNATH			 Applied Robotics™ Solutions in reach 648 Saratoga Rd. Glenville, NY 12302 www.appliedrobotics.com		
THE INFORMATION CONTAINED HEREIN IS THE SOLE PROPERTY OF APPLIED ROBOTICS INC. THE INFORMATION IN THIS DOCUMENT FILE IS SUBJECT TO CHANGE WITHOUT NOTICE. APPLIED ROBOTICS MAKES NO WARRANTY OF ANY KIND OR REGARD TO THIS DOCUMENT FILE, INCLUDING, BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS FOR A PARTICULAR PURPOSE. APPLIED ROBOTICS INC. SHALL NOT BE LIABLE FOR ANY ERRORS CONTAINED HEREIN OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE PERFORMANCE OR USE OF THIS DOCUMENT FILE.				ALL HOLE DIAMETERS +/- 0.25 INTERNAL RADII & BROKEN EDGES TO BE .13-.38 ALL SURFACE FINISHES 1.6Ra			3D MODEL NUMBER: 1604-D93A			TITLE: ER125LP-N/A-080-N-0-C0000		
DIM. AND TOLERANCING IN ACCORDANCE WITH ANSI Y14.5M-1994	MAT'L: -			SCALE: 1:1 DO NOT SCALE DRAWING			SIZE D		DRAWING NUMBER 1604-D93A		REV 00	
	SURFACE TREATMENT: -			ISO 9001 REGISTERED			WEIGHT: 3.15 kg		RoHS COMPLIANT: -		SHT. 1 OF 1	

PRINT DATE
6/24/2016



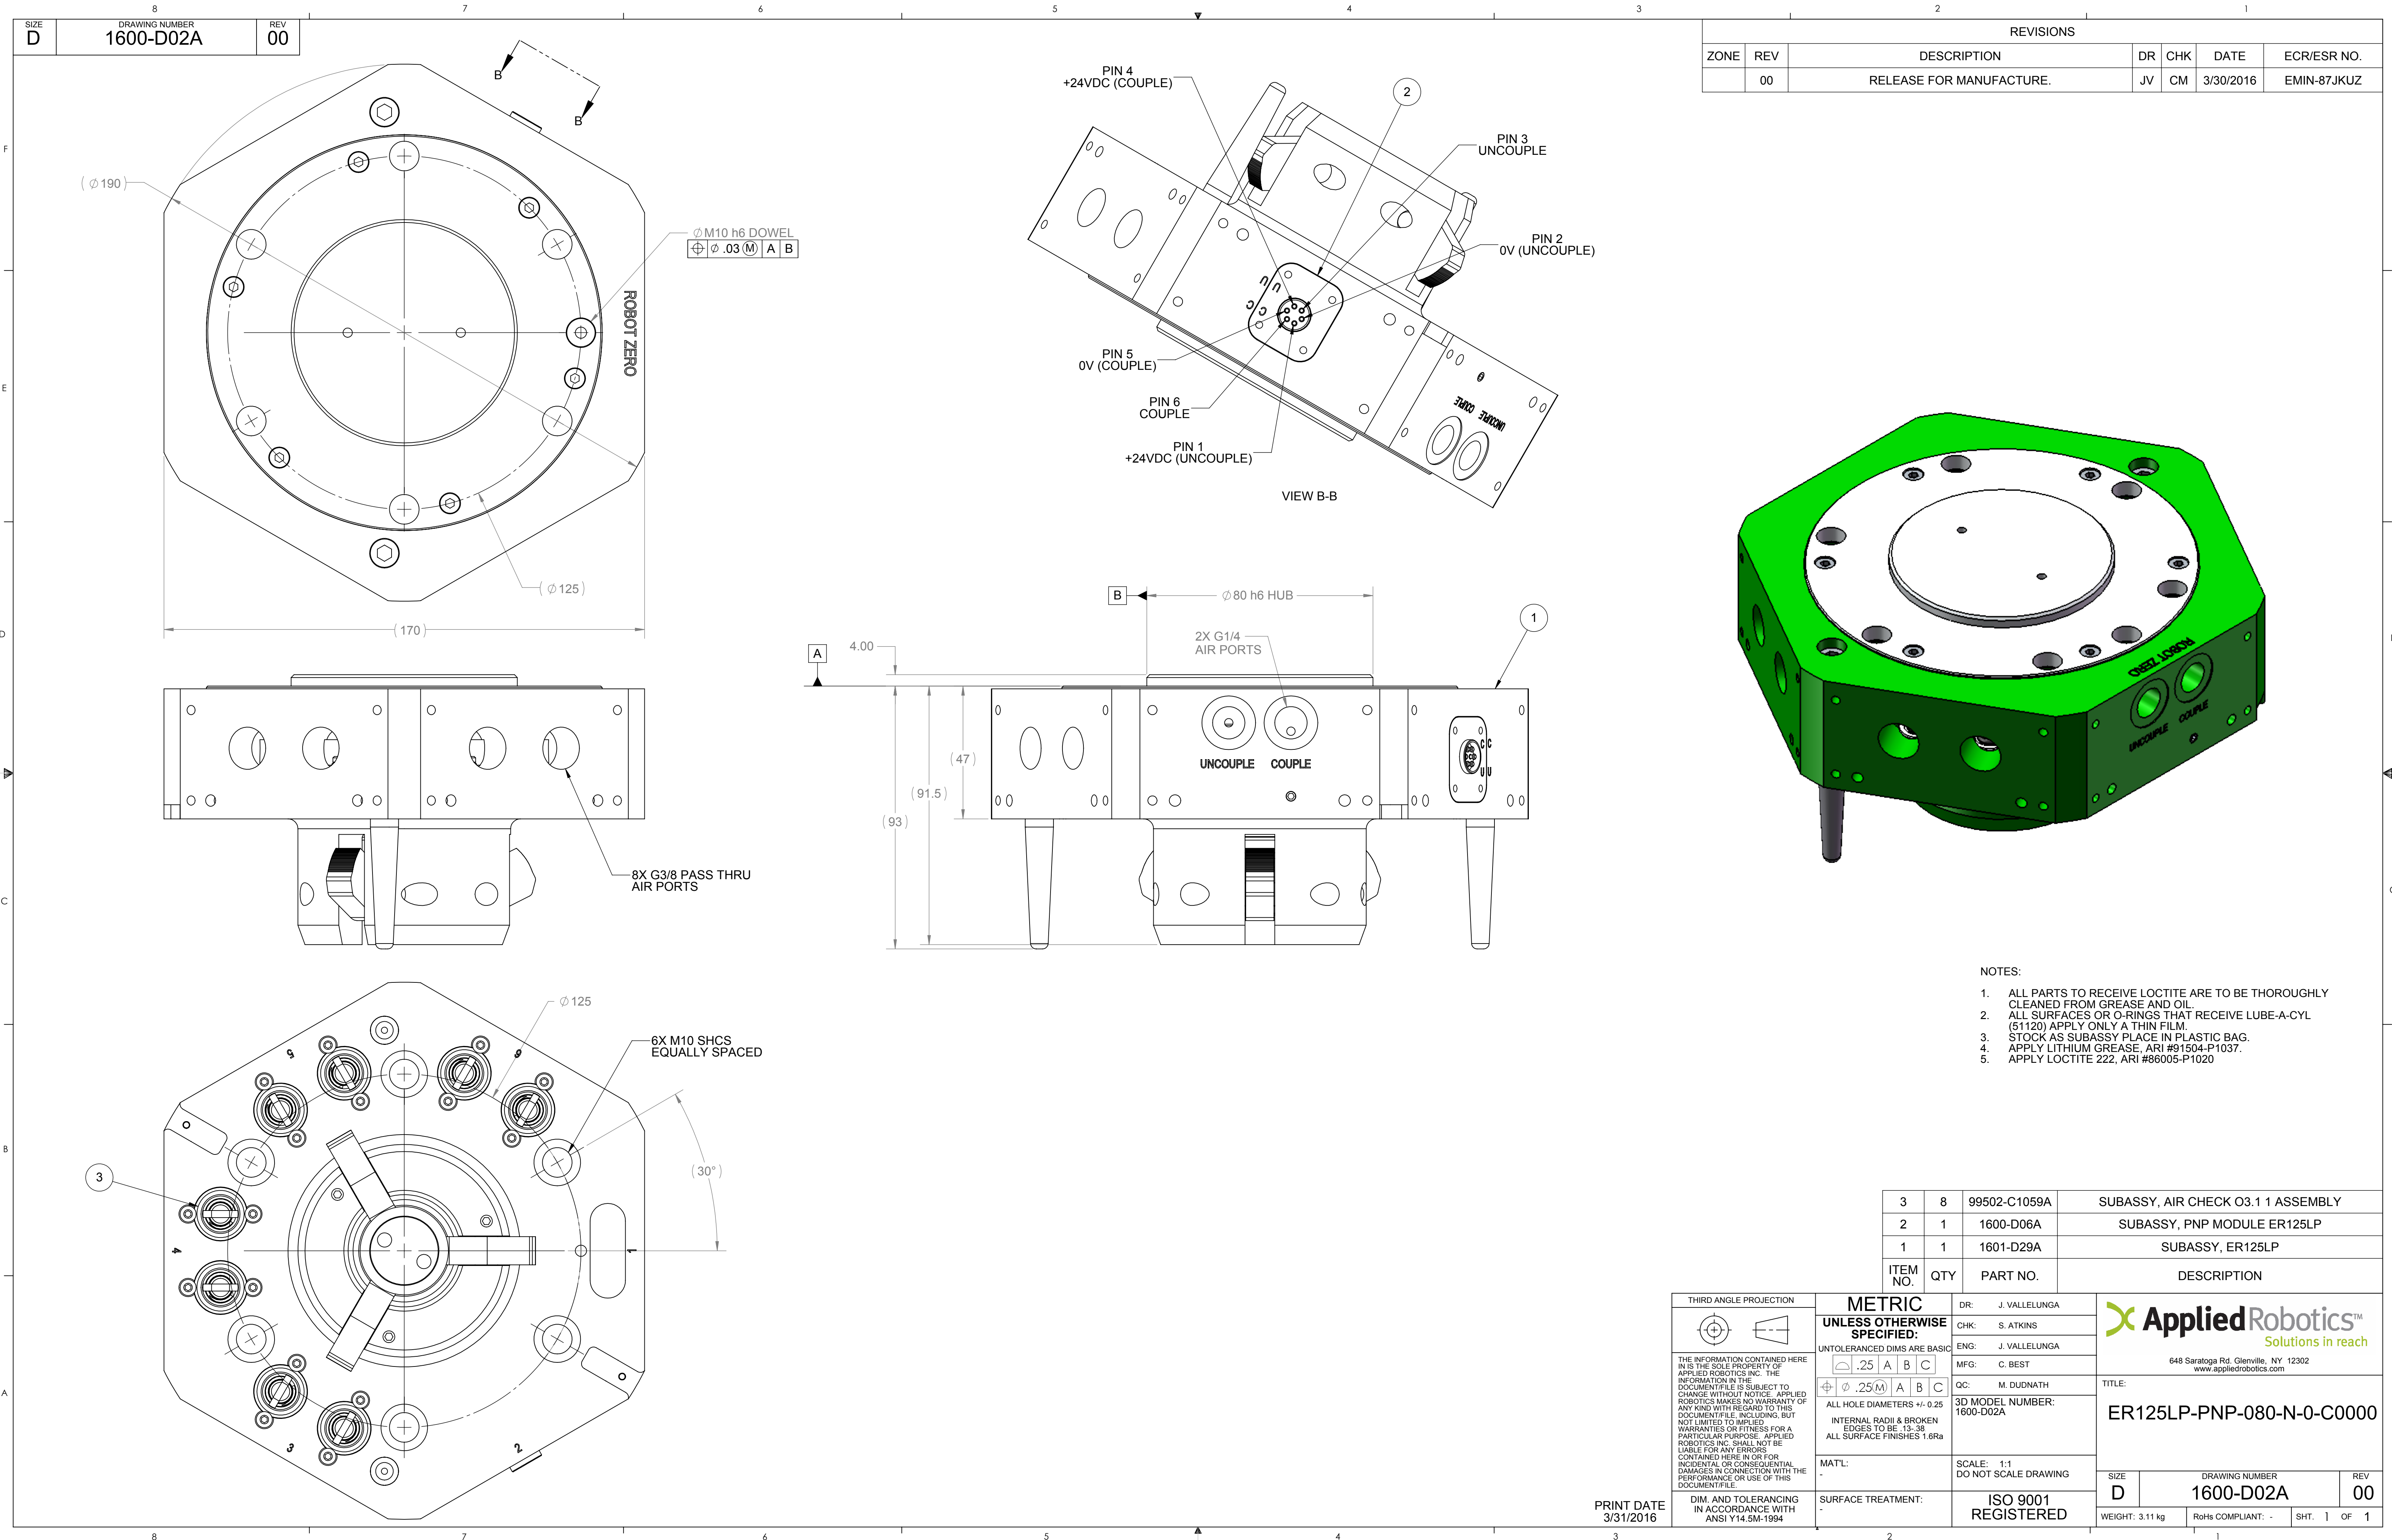


REVISIONS						
ZONE	REV	DESCRIPTION	DR	CHK	DATE	ECR/ESR NO.
	00	RELEASE FOR MANUFACTURE.	JV	CM	3/30/2016	EMIN-87JKUZ

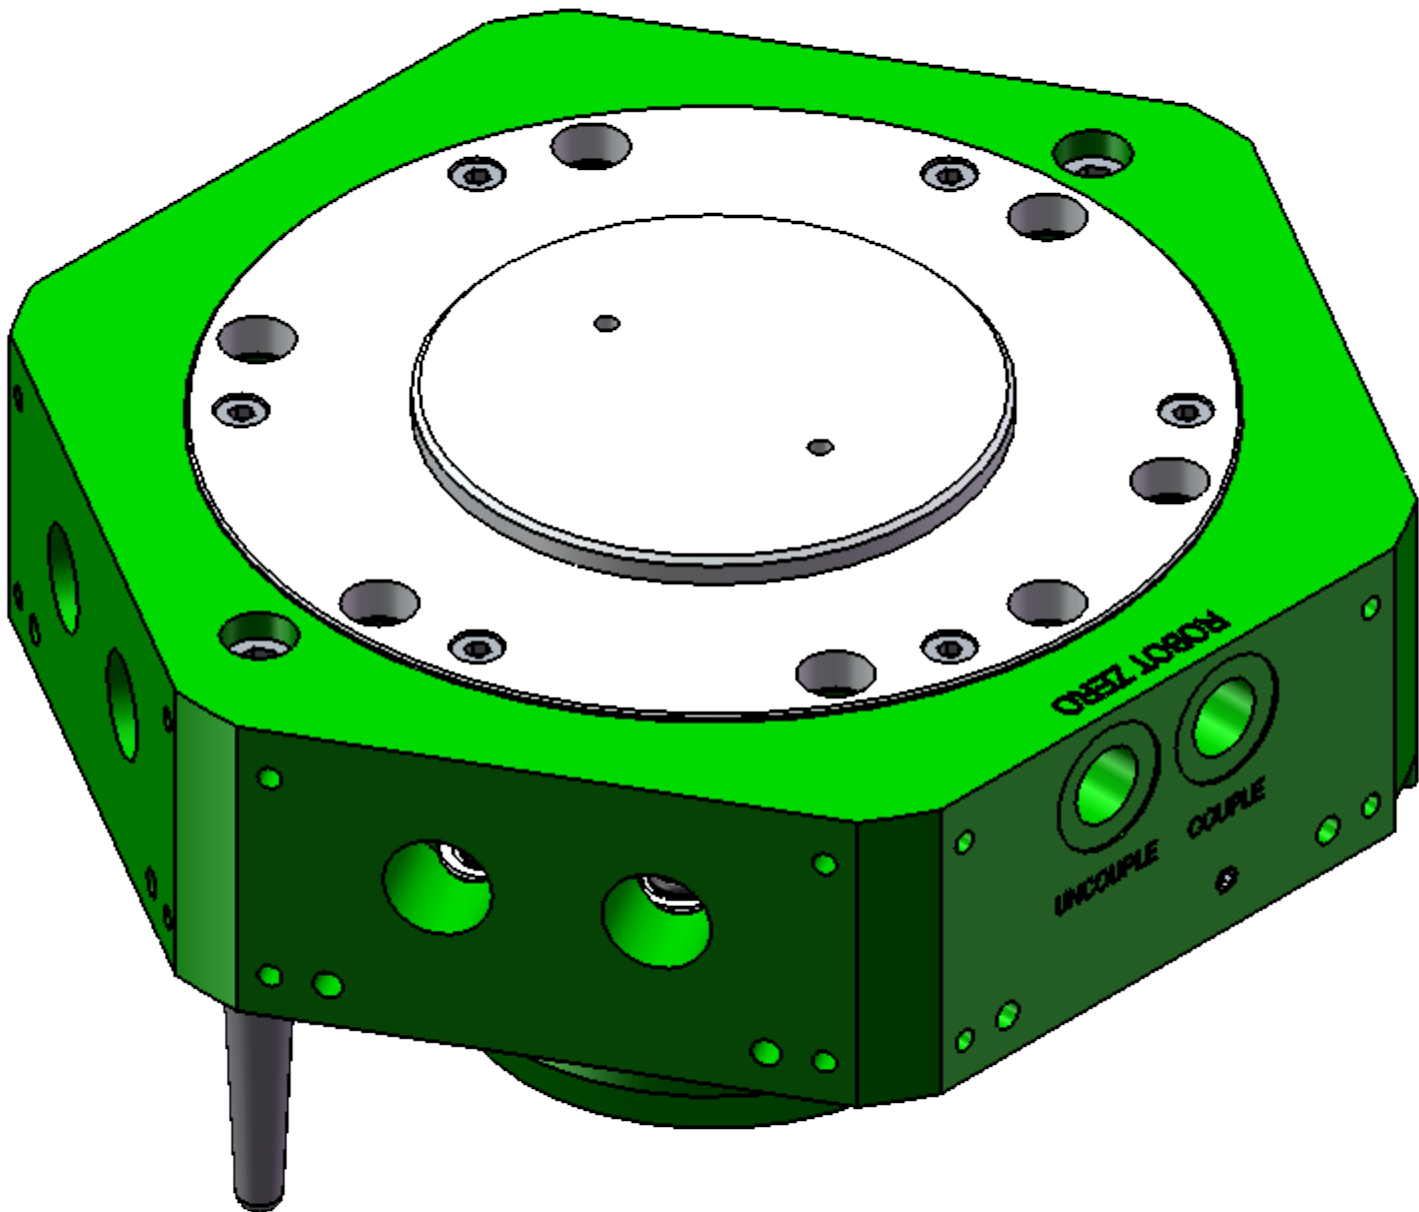


- NOTES:
- ALL PARTS TO RECEIVE LOCTITE ARE TO BE THOROUGHLY CLEANED FROM GREASE AND OIL.
 - ALL SURFACES OR O-RINGS THAT RECEIVE LUBE-A-CYL (51120) APPLY ONLY A THIN FILM.
 - STOCK AS SUBASSY PLACE IN PLASTIC BAG.
 - APPLY LITHIUM GREASE, ARI #91504-P1037.
 - APPLY LOCTITE 222, ARI #86005-P1020

3	8	99502-C1059A	SUBASSY, AIR CHECK O3.1 1 ASSEMBLY
2	1	1600-D06A	SUBASSY, PNP MODULE ER125LP
1	1	1601-D29A	SUBASSY, ER125LP
ITEM NO.	QTY	PART NO.	DESCRIPTION

   THIRD ANGLE PROJECTION		METRIC		DR: J. VALLELUNGA							
		UNLESS OTHERWISE SPECIFIED:		CHK: S. ATKINS							
		UNTOLERANCED DIMS ARE BASIC		ENG: J. VALLELUNGA							
THE INFORMATION CONTAINED HERE IN IS THE SOLE PROPERTY OF APPLIED ROBOTICS INC. THE INFORMATION IN THE DOCUMENT FILE IS SUBJECT TO CHANGE WITHOUT NOTICE. APPLIED ROBOTICS MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS DOCUMENT FILE, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS FOR A PARTICULAR PURPOSE. APPLIED ROBOTICS INC. SHALL NOT BE LIABLE FOR ANY ERRORS CONTAINED HEREIN OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE PERFORMANCE OR USE OF THIS DOCUMENT FILE.				MFG: C. BEST		QC: M. DUDNATH					
				3D MODEL NUMBER: 1600-D02A		TITLE: ER125LP-PNP-080-N-0-C0000					
		ALL HOLE DIAMETERS +/- 0.25		SCALE: 1:1 DO NOT SCALE DRAWING							
		INTERNAL RADI & BROKEN EDGES TO BE .13-.38 ALL SURFACE FINISHES 1.6Ra		ISO 9001 REGISTERED							
		DIM. AND TOLERANCING IN ACCORDANCE WITH ANSI Y14.5M-1994		SURFACE TREATMENT:		SIZE		DRAWING NUMBER		REV	
						D		1600-D02A		00	
						WEIGHT: 3.11 kg		RoHS COMPLIANT: -		SHT. 1 OF 1	


PRINT DATE
3/31/2016

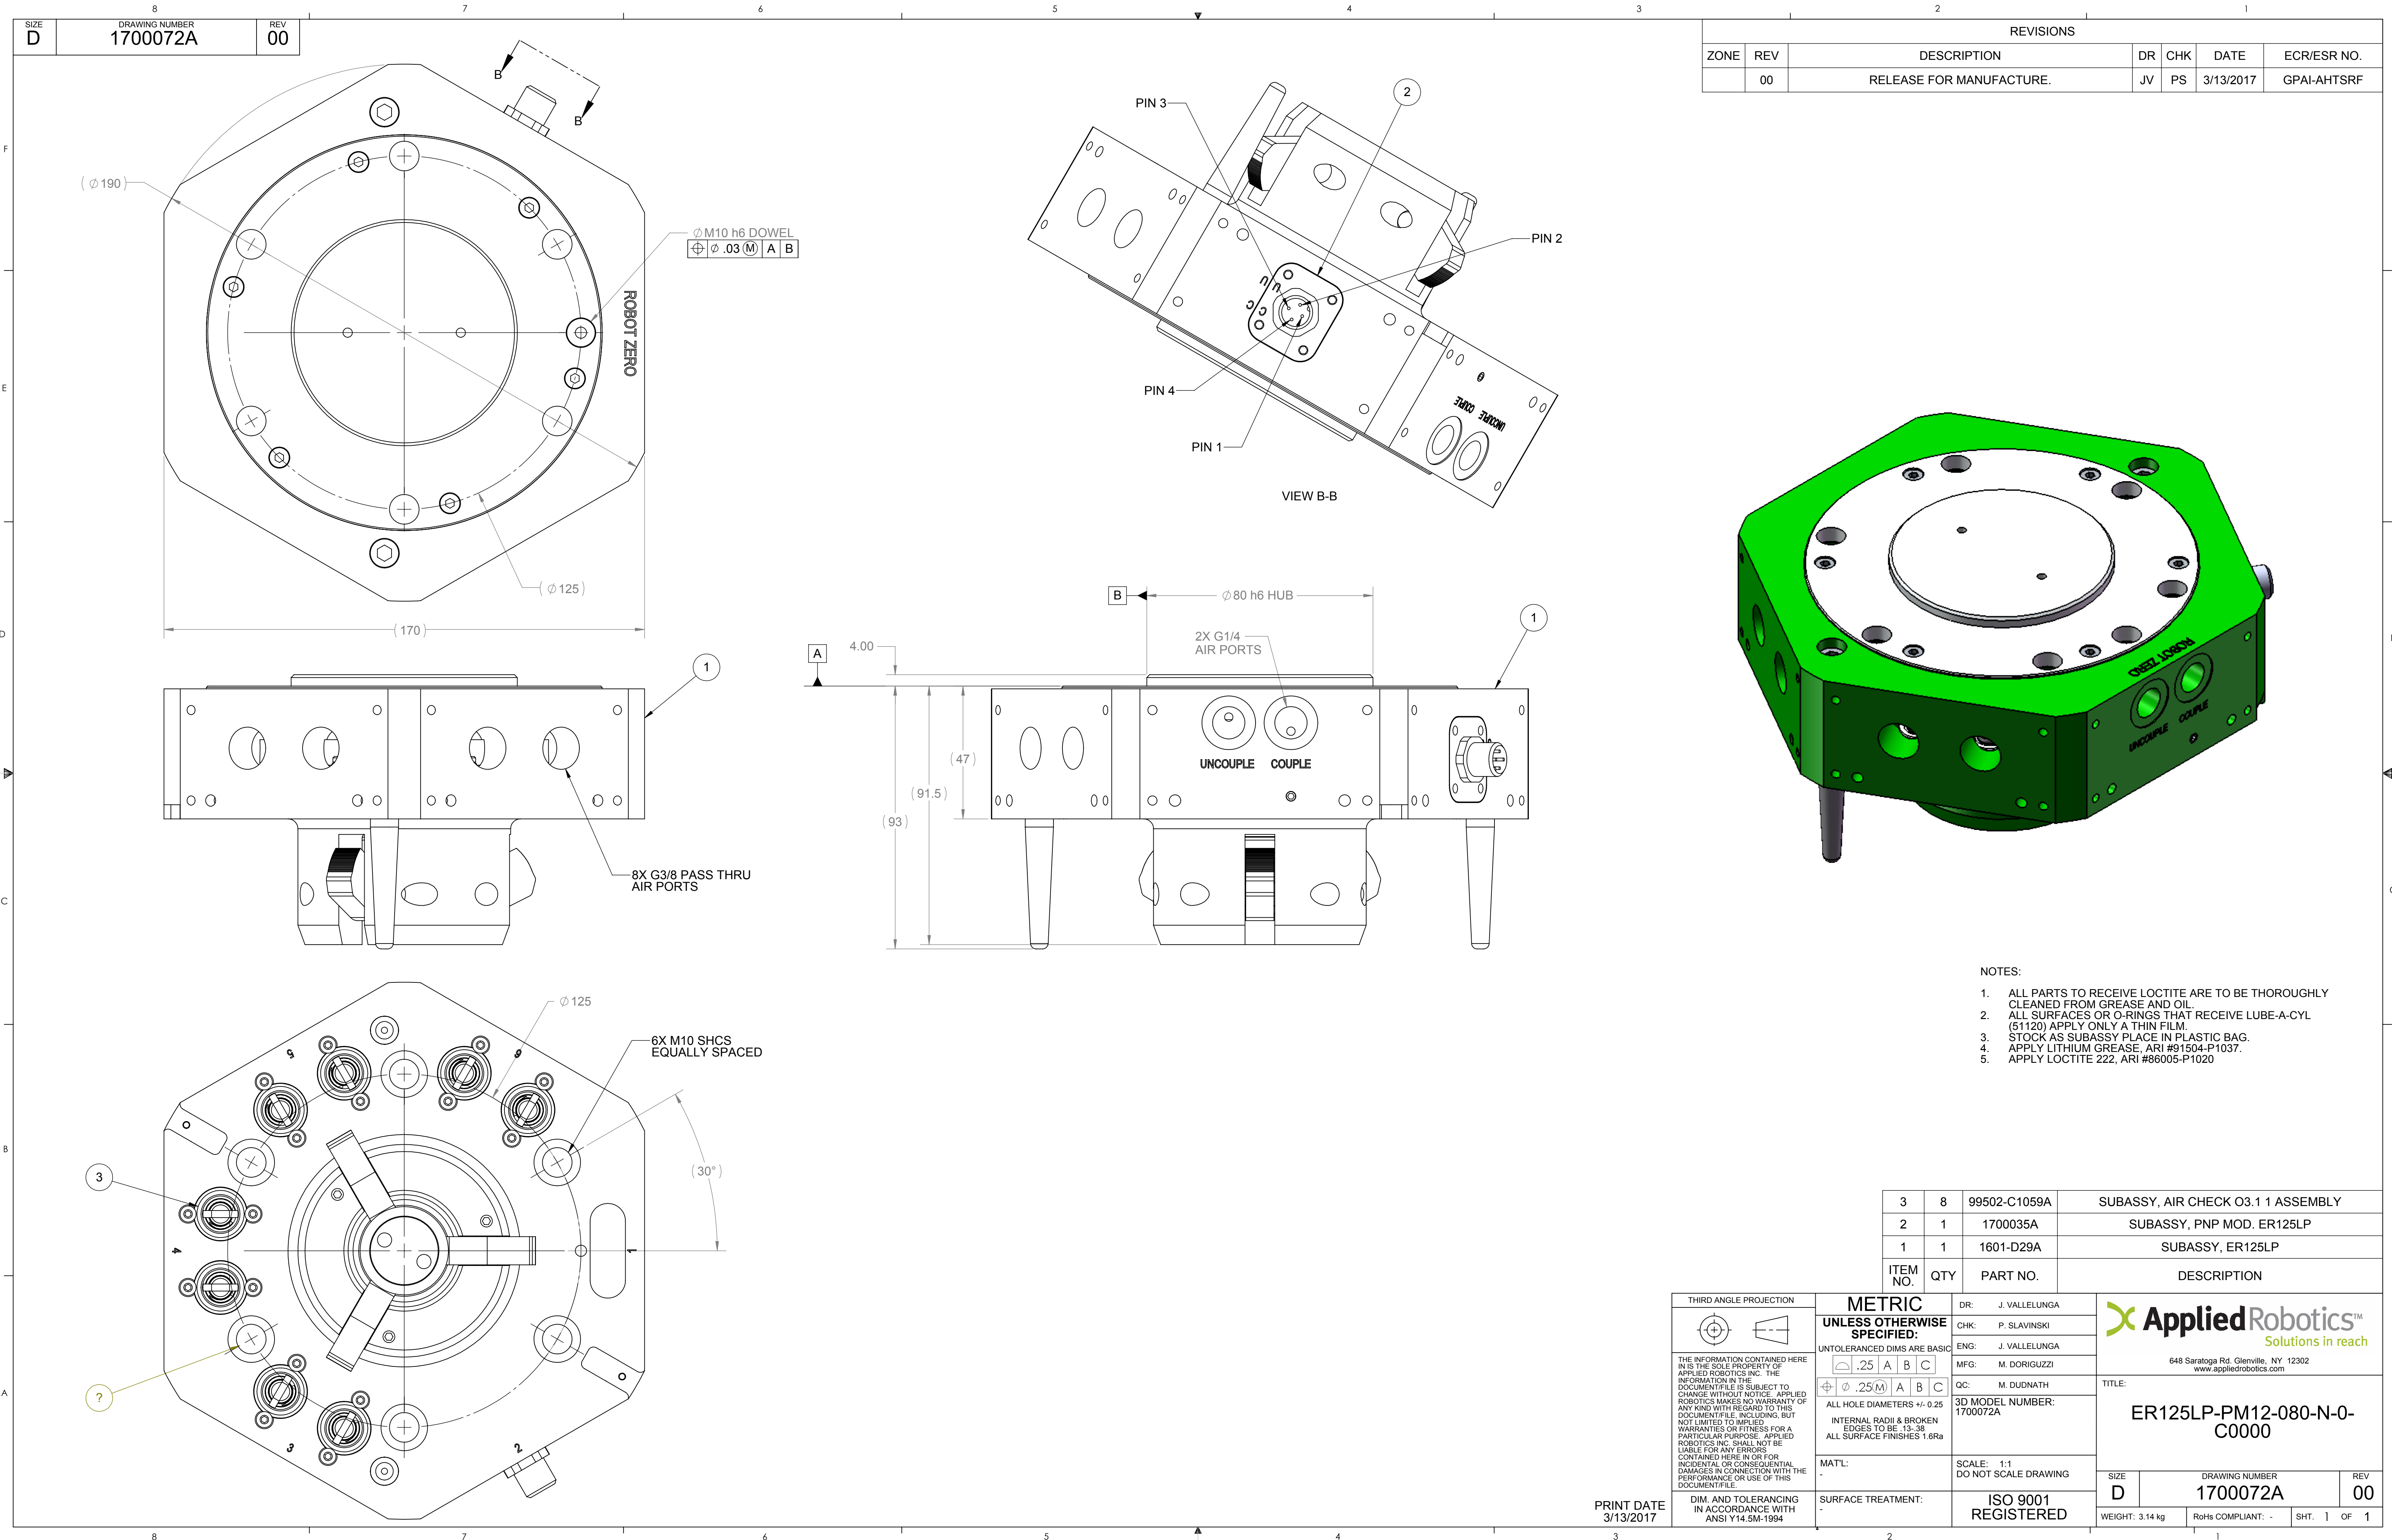

REVISIONS						
ZONE	REV	DESCRIPTION	DR	CHK	DATE	ECR/ESR NO.
	00	RELEASE FOR MANUFACTURE.	JV	PS	3/13/2017	GPAI-AHTSRF




- NOTES:
- ALL PARTS TO RECEIVE LOCTITE ARE TO BE THOROUGHLY CLEANED FROM GREASE AND OIL.
 - ALL SURFACES OR O-RINGS THAT RECEIVE LUBE-A-CYL (51120) APPLY ONLY A THIN FILM.
 - STOCK AS SUBASSY PLACE IN PLASTIC BAG.
 - APPLY LITHIUM GREASE, ARI #91504-P1037.
 - APPLY LOCTITE 222, ARI #86005-P1020

3	8	99502-C1059A	SUBASSY, AIR CHECK O3.1 1 ASSEMBLY
2	1	1700035A	SUBASSY, PNP MOD. ER125LP
1	1	1601-D29A	SUBASSY, ER125LP
ITEM NO.	QTY	PART NO.	DESCRIPTION

 
THIRD ANGLE PROJECTION		METRIC		DR: J. VALLELUNGA					
		UNLESS OTHERWISE SPECIFIED:		CHK: P. SLAVINSKI					
		UNTOLERANCED DIMS ARE BASIC		ENG: J. VALLELUNGA					
THE INFORMATION CONTAINED HEREIN IS THE SOLE PROPERTY OF APPLIED ROBOTICS INC. THE INFORMATION IN THE DOCUMENT FILE IS SUBJECT TO CHANGE WITHOUT NOTICE. APPLIED ROBOTICS MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS DOCUMENT FILE, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS FOR A PARTICULAR PURPOSE. APPLIED ROBOTICS INC. SHALL NOT BE LIABLE FOR ANY ERRORS CONTAINED HEREIN OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE PERFORMANCE OR USE OF THIS DOCUMENT FILE.				MFG: M. DORIGUZZI		648 Saratoga Rd. Glenville, NY 12302 www.appliedrobotics.com			
				QC: M. DUDNATH					
		3D MODEL NUMBER: 1700072A		TITLE: ER125LP-PM12-080-N-0-C0000					
		ALL HOLE DIAMETERS +/- 0.25							
		INTERNAL RADI & BROKEN EDGES TO BE .13-.38 ALL SURFACE FINISHES 1.6Ra							
MAT'L:		SCALE: 1:1 DO NOT SCALE DRAWING		SIZE D		DRAWING NUMBER 1700072A		REV 00	
SURFACE TREATMENT:		ISO 9001 REGISTERED		WEIGHT: 3.14 kg		RoHS COMPLIANT: -		SHT. 1 OF 1	

PRINT DATE
3/13/2017

SIZE D	DRAWING NUMBER 1600-D09A	REV 01
------------------	------------------------------------	------------------

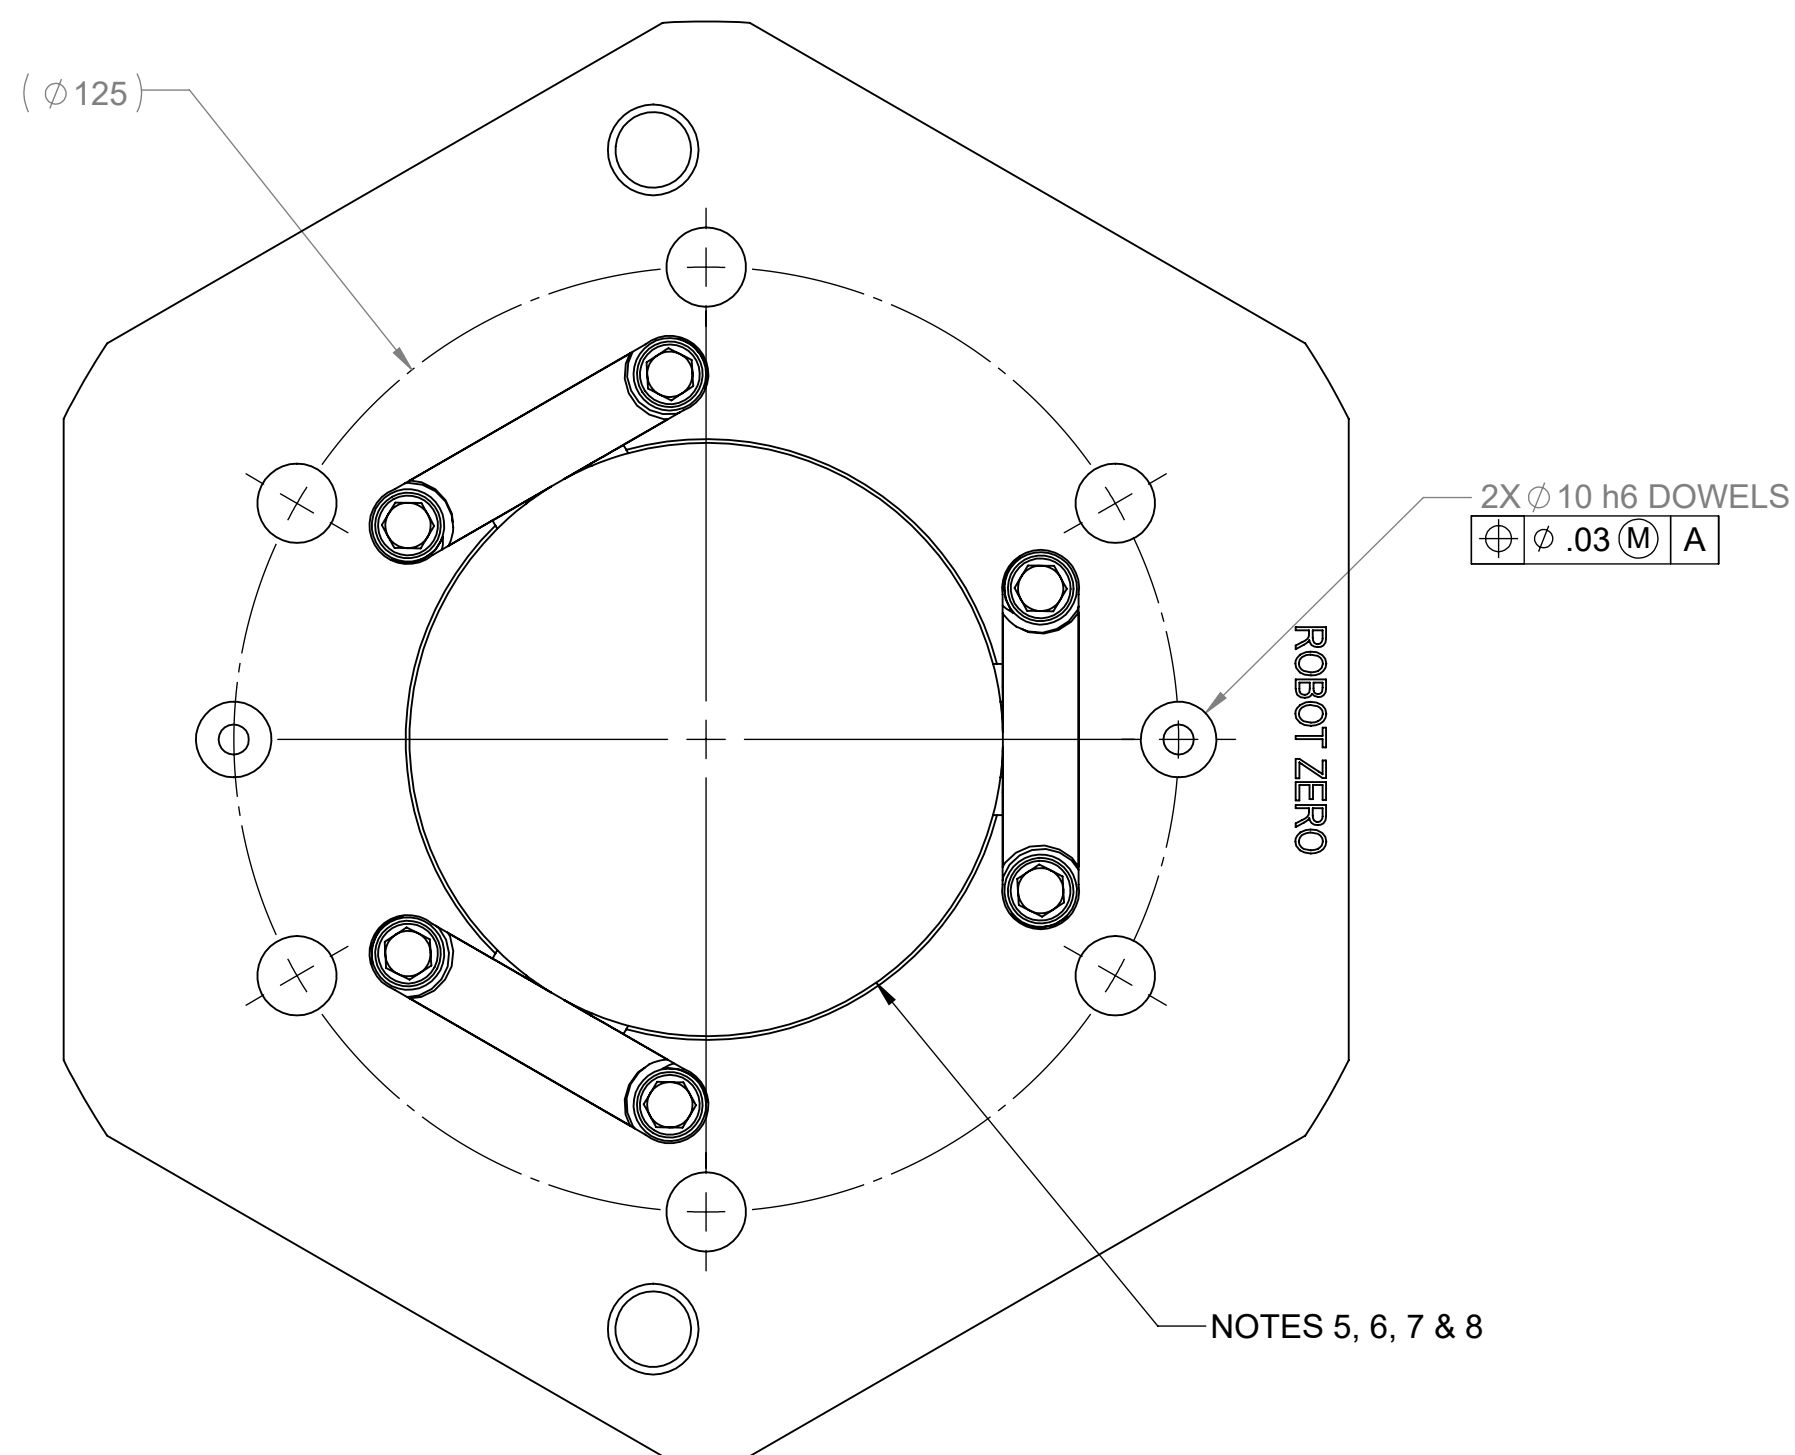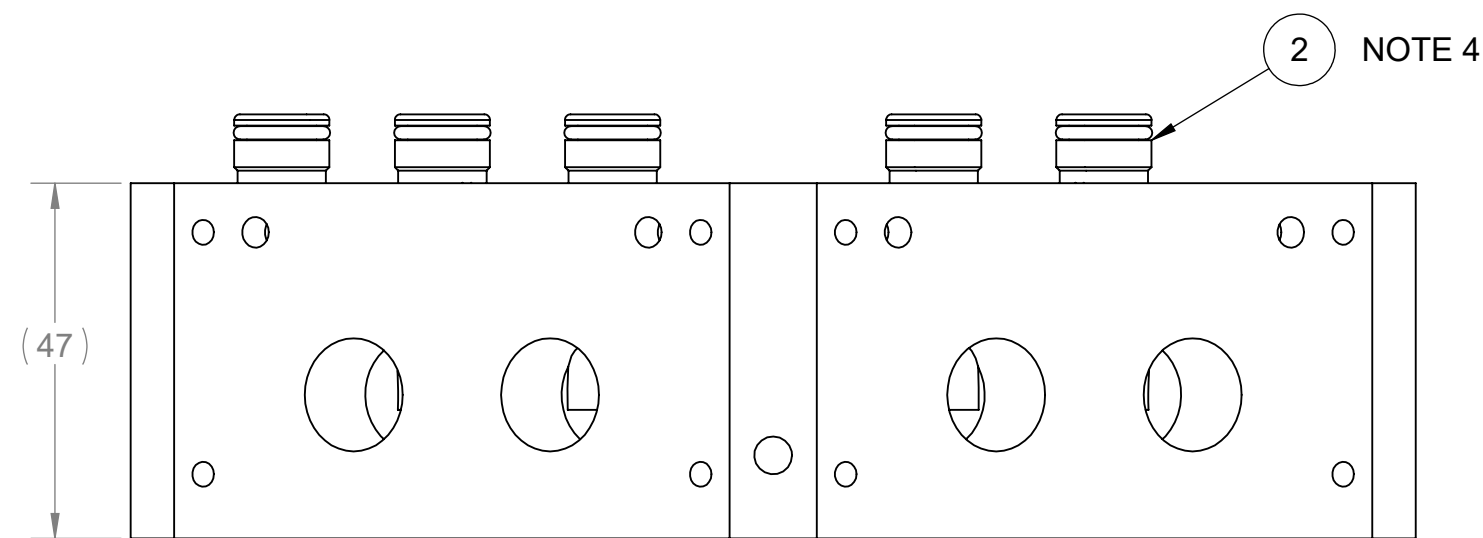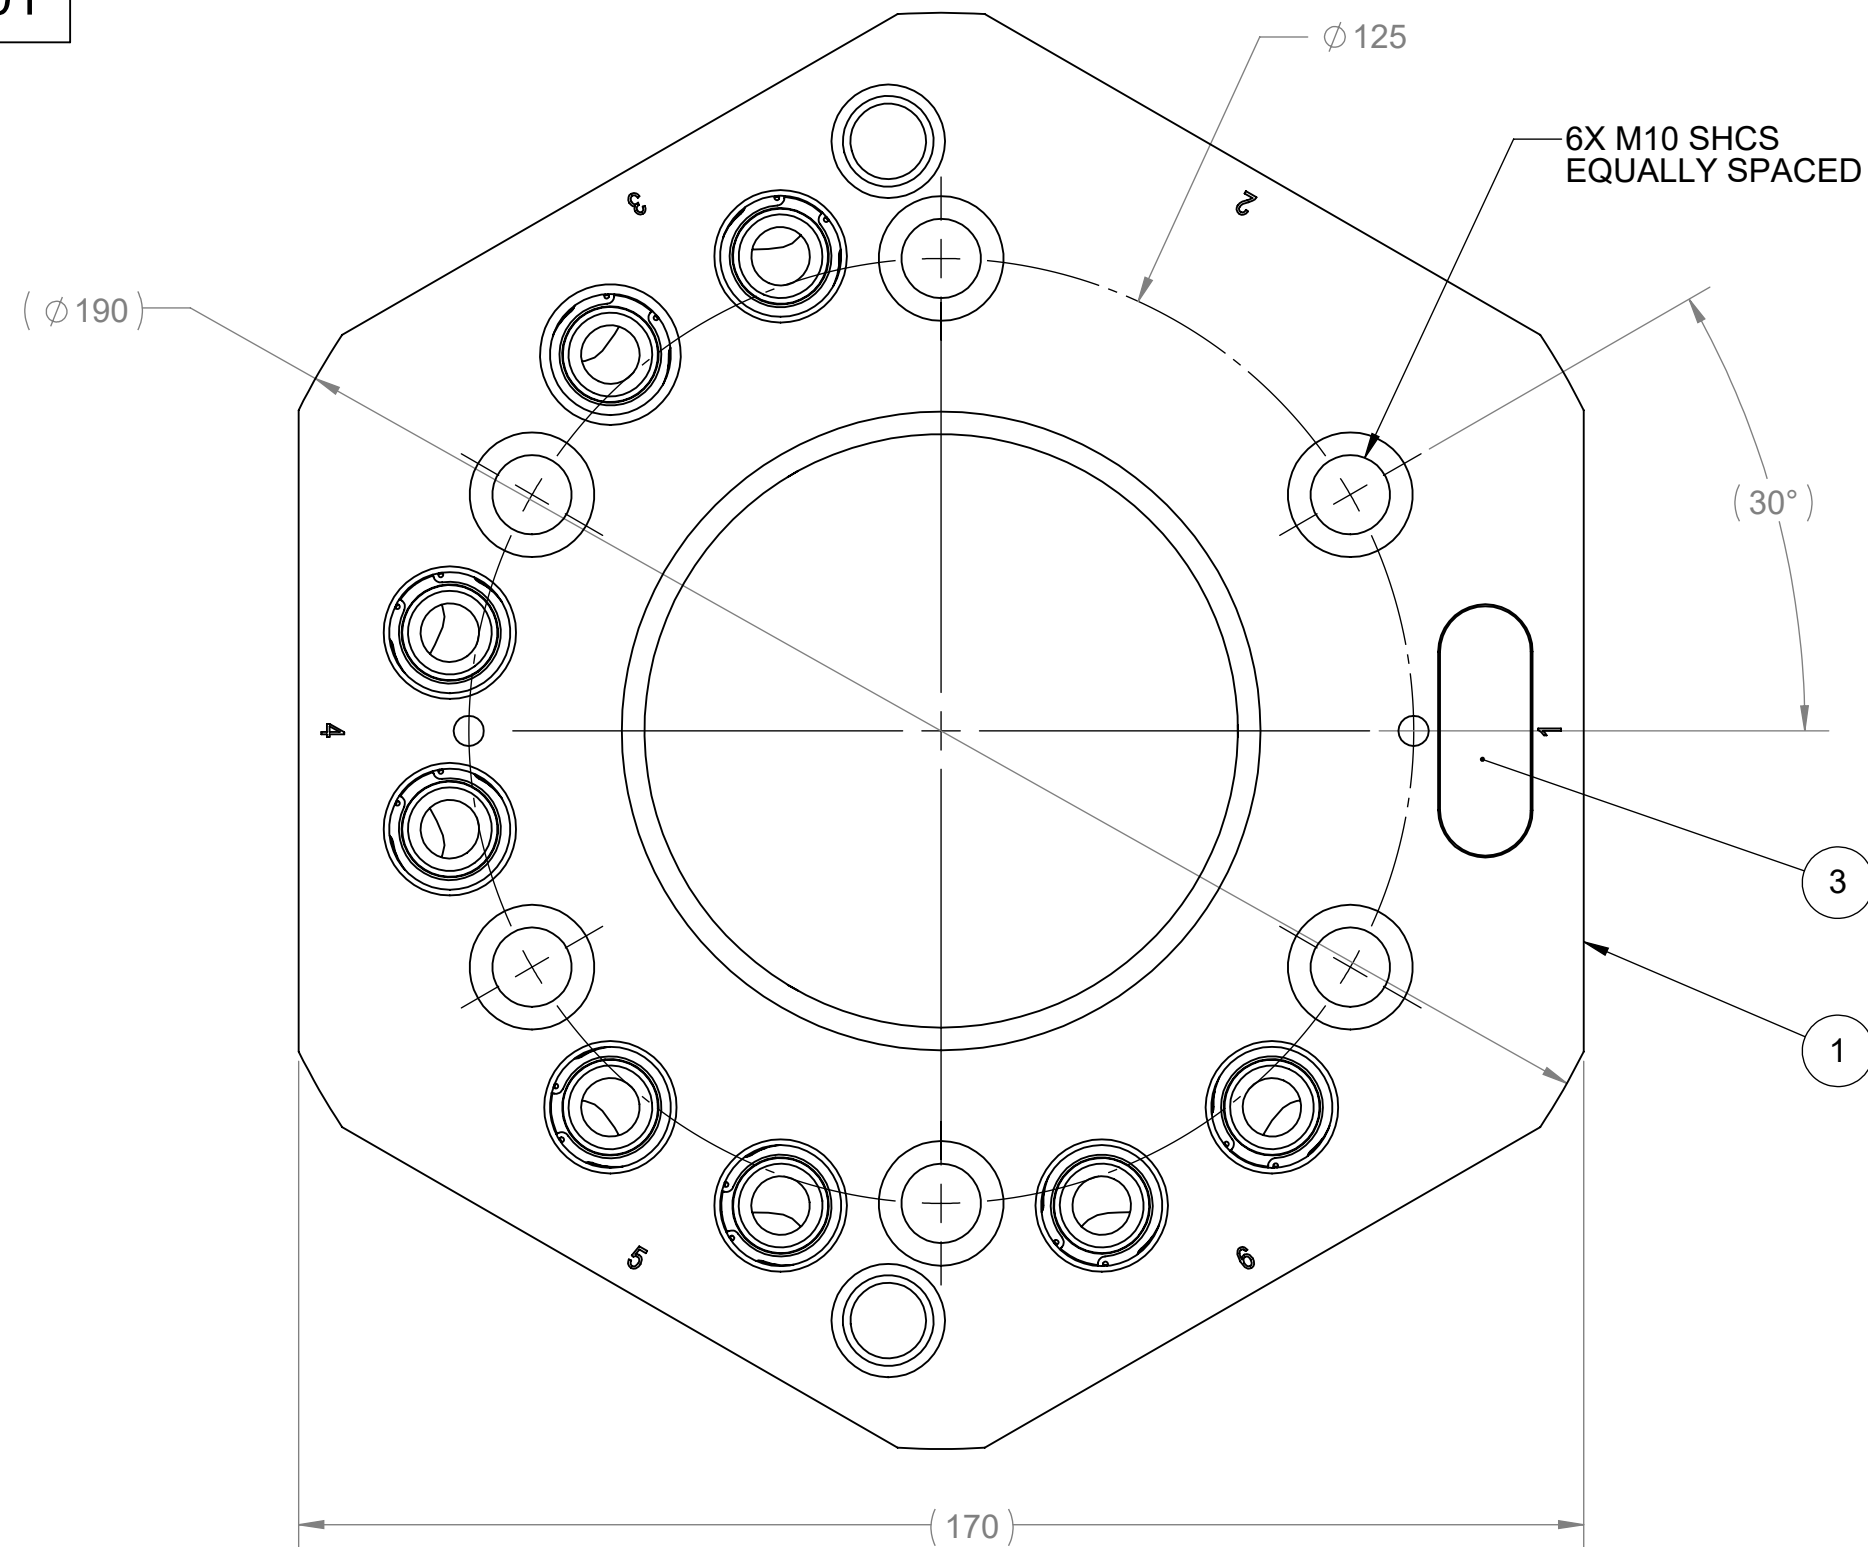

		REVISIONS				
ZONE	REV	DESCRIPTION	DR	CHK	DATE	ECR/ESR NO.
	00	RELEASE FOR MANUFACTURE.	JV	CM	3/23/2016	EMIN-87JKUZ
	01	UPDATED 1601-D30A TO REV 02	PS	JV	10/10/2018	PSLI-B46MYF

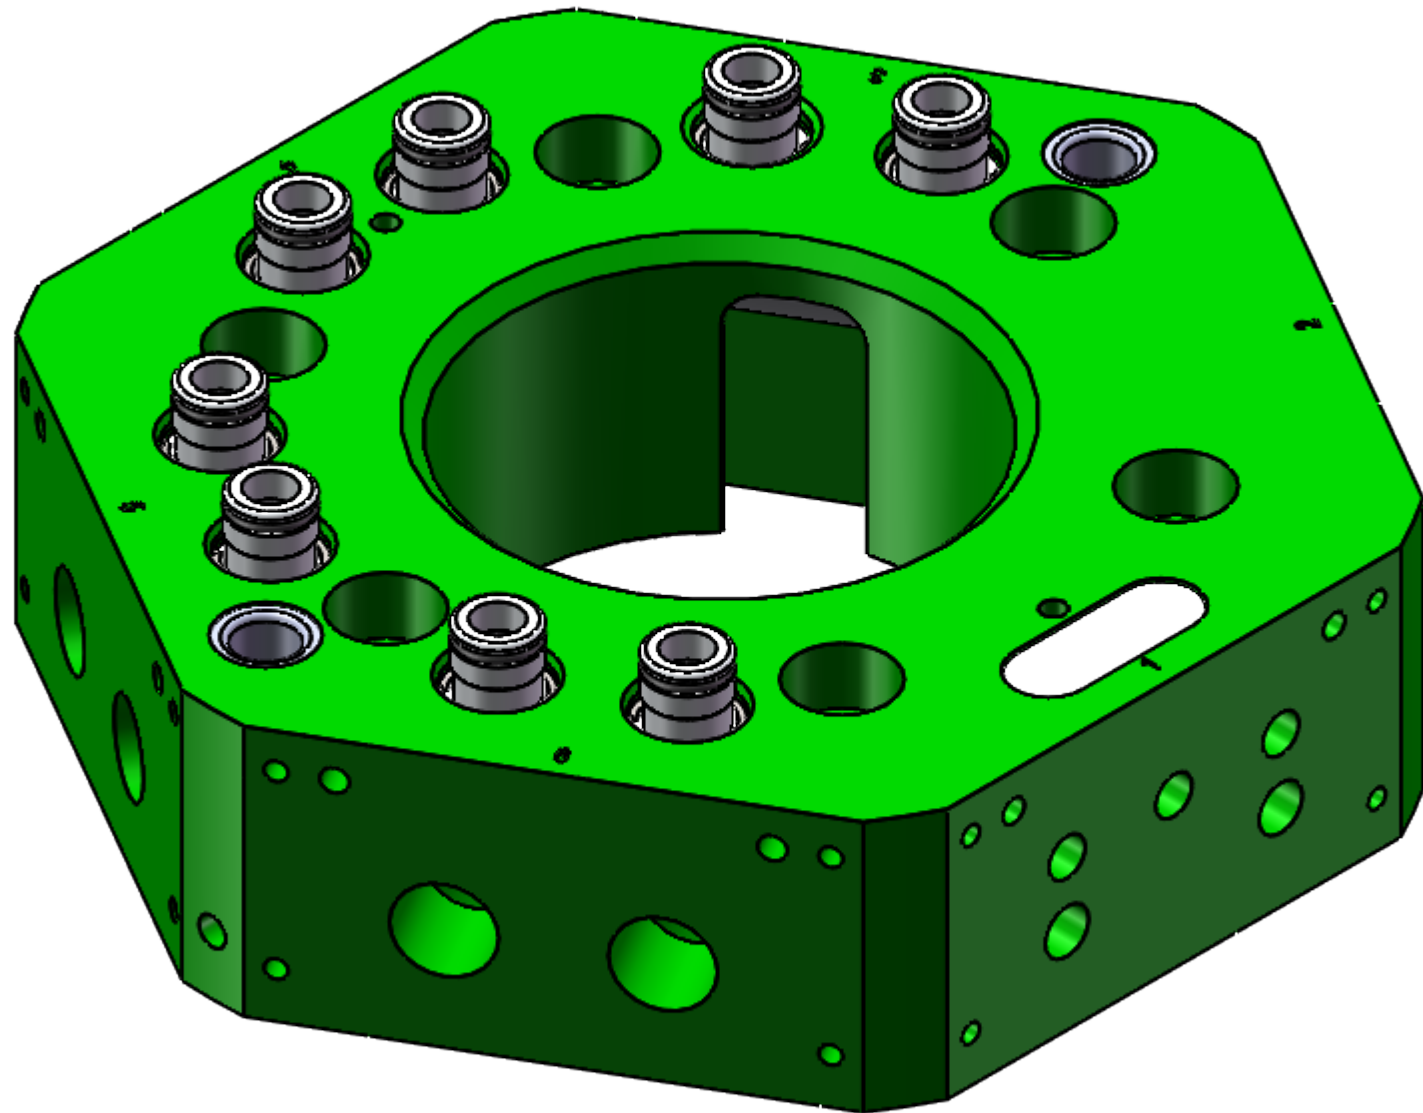

3	1	1600-P57N	LABEL, ARI NAMEPLATE 12X33
2	8	0002-B04A	SUBASSY, AIR FTNG O3.1 TLNG URETHAN
1	1	1601-D30A	SUBASSY, ET125LP
ITEM NO.	QTY	PART NO.	DESCRIPTION

THIRD ANGLE PROJECTION		METRIC UNLESS OTHERWISE SPECIFIED: UNTOLERANCED DIMS ARE BASIC .25 A B C		DR: J. VALLELUNGA		Applied Robotics™ Solutions in reach 648 Saratoga Rd. Glenville, NY 12032 www.appliedrobotics.com					
THE INFORMATION CONTAINED HEREIN IS THE SOLE PROPERTY OF APPLIED ROBOTICS INC. THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. APPLIED ROBOTICS MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS DOCUMENT, INCLUDING, BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE. APPLIED ROBOTICS INC. SHALL NOT BE LIABLE FOR ANY ERRORS CONTAINED HEREIN OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE PERFORMANCE OR USE OF THIS DOCUMENT.				CHK: S. ATKINS							
DIM. AND TOLERANCING IN ACCORDANCE WITH ANSI Y14.5M-1994		.25 M A B C ALL HOLE DIAMETERS +/- 0.25 INTERNAL RADII & BROKEN EDGES TO BE .13-.38 ALL SURFACE FINISHES 1.6Ra		ENG: J. VALLELUNGA		TITLE:					
				MFG: C. BEST							
		MAT'L: Material <not specified>		QC: M. DUDNATH		ET125LP-000-N-C0000					
				3D MODEL NUMBER: 1600-D09A							
		SCALE: 1:1 DO NOT SCALE DRAWING		SIZE		DRAWING NUMBER		REV			
				D		1600-D09A		01			
		SURFACE TREATMENT: -		ISO 9001 REGISTERED		WEIGHT: 2.29 kg		RoHS COMPLIANT: -		SHT. 1 OF 1	

NOTES:

1. ALL ITEMS TO RECIEVE LOCTITE ARE TO BE THOROUGHLY CLEANED FROM GREASE AND OIL. USE PRIMER "N" (ARI P/N 51172) BEFORE APPLYING ANY LOCTITE THREAD LOCKERS.
2. APPLY LOCTITE 242 (ARI P/N 50106).
3. APPLY GREASE (ARI P/N 91504-P1037) TO BUSHING SURFACES ON ITEM.
4. APPLY LUBE-A-CYL (ARI P/N 51120).
5. APPLY LABEL (ARI P/N 90114L).
6. APPLY LABEL (ARI P/N 90994A) ADDRESS LABEL.
7. APPLY LABEL (ARI P/N 0708-P74N).
8. APPLY LABEL (ARI P/N 0708-P75N).

PRINT DATE
10/11/2018

